
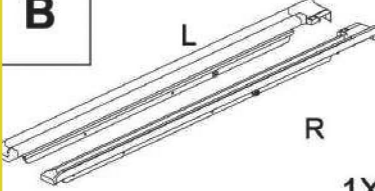
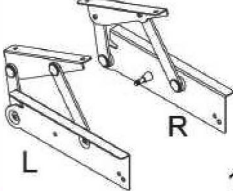
























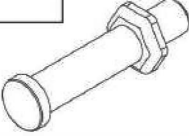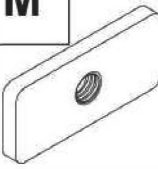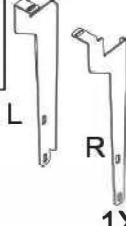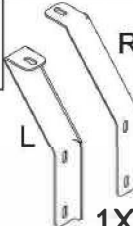
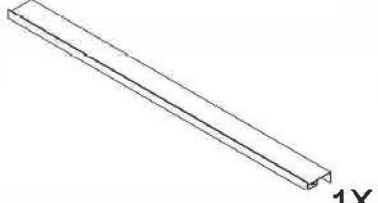
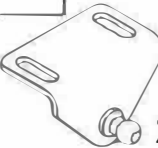









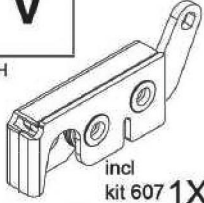



UpStoneEvolve


SAILPLANE LID INSTALLATION MANUAL FORD WILDTRAK DC 2022+ EVOS1400SB

COVER1400S
KIT1400S-1RLBF
KIT1400S-2RLBF

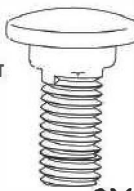
A  1X	B  1X	C  1X	D  2X		
E  2X	F M8x60 Inox A4  4X	G  M8 Stainless Steel Spring Washer 10X	H M8 x16 Stainless Steel  24X	I  incl kit 607 2X	J M8 Nylock Stainless Steel  incl kit 607 6X
K M8 Stainless Steel Spring Washer  incl kit 607 2X	L  2X	M  2X	N  1X	O  1X	P M8x18  incl kit 607 12X
Q M6x13mm Zinc  incl kit 607 12X	R M6x10mm  incl kit 607 8X	S M8 Ø20x10mm SPACER  4X	T  2X	U M8 Nylock Inox  8X	AK M6x20mm  4X
V RH  incl kit 607 1X	W LH  incl kit 607 1X	X M5 Cable Bolt, Washer & Dome Nut  incl kit 607 2X	Y  incl kit 607 2X	AA  2X	Q M6x13mm Inox  4X
AB  1X	AC  2X	AD M8 SS SPACER  2X	AE M5 Nylock Inox  4X	AF M5x18 Inox A4  4X	AG M8x20 Inox A4  4X
AH M8 x 26 COACH BOLT  6X	AI 10x10mm 	R M6x10mm  8X	<p>Note: If at any stage of installation you find your Aluminium Tonneau Cover to be an unacceptable fit please contact the manufacturer before continuing.</p> <p>Tools Required:</p>    		

Fitting Kit Number	Product	Revision	Date	Page
EVOS1400S	UpStone Sailplane Lid	1	30-06-2023	1 of 8


1

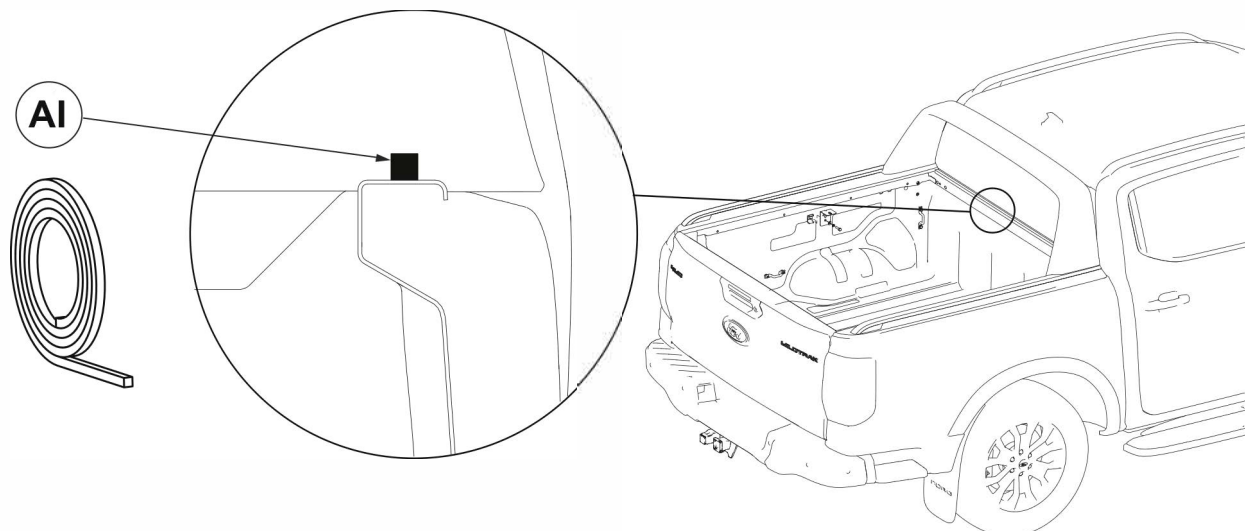


2

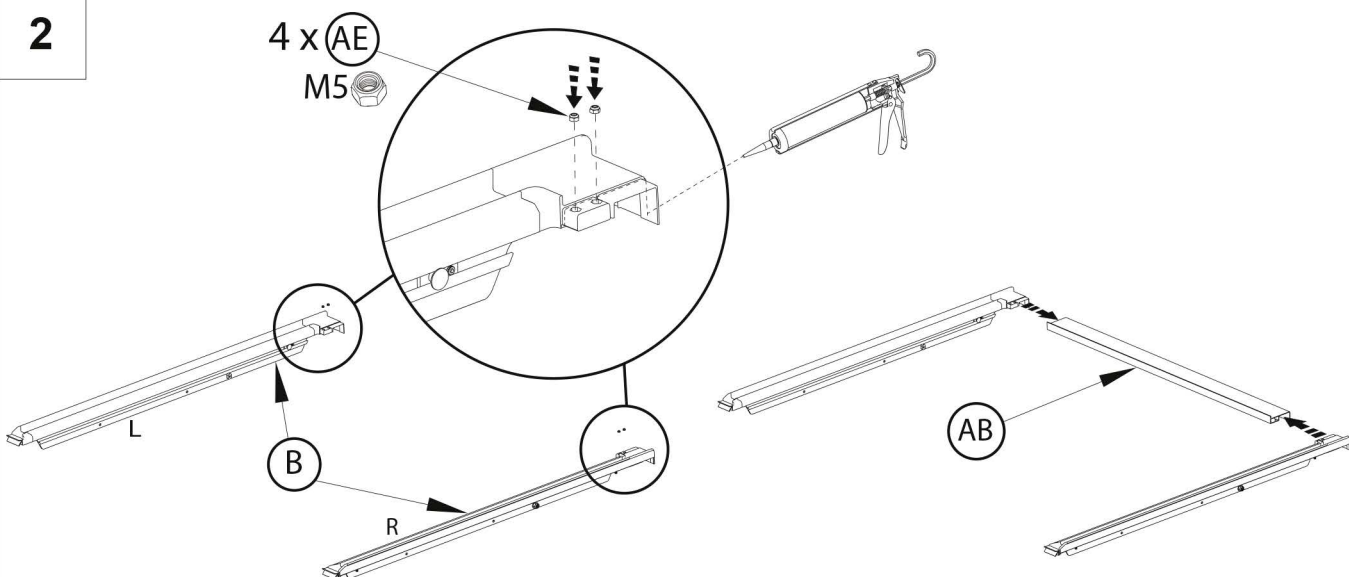


3

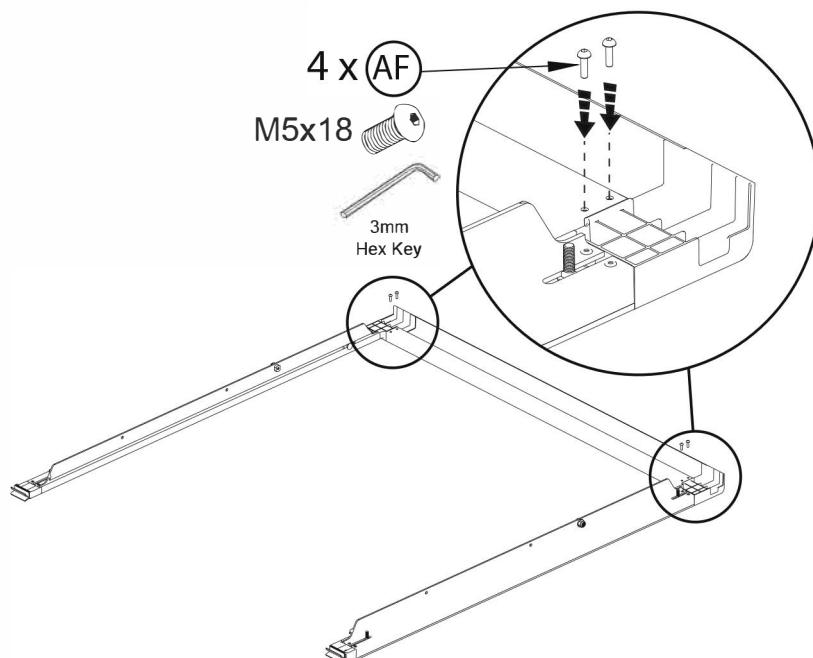


4

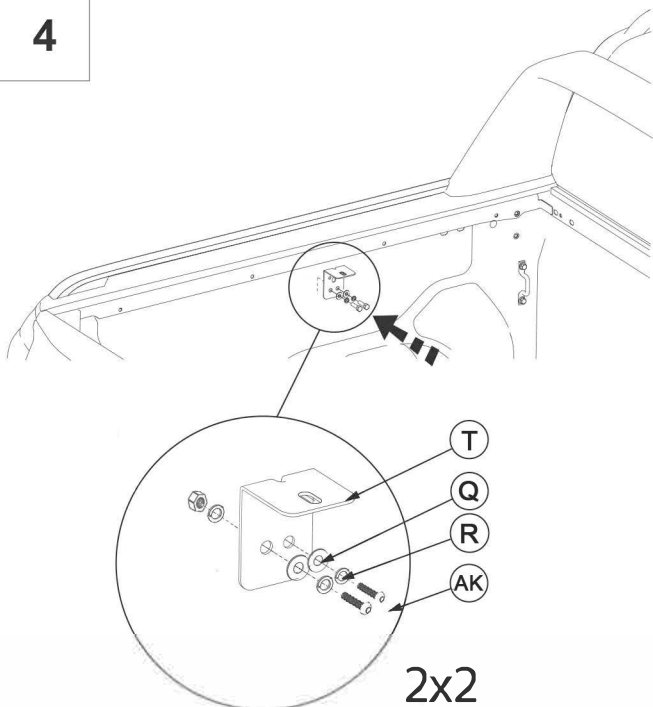


5

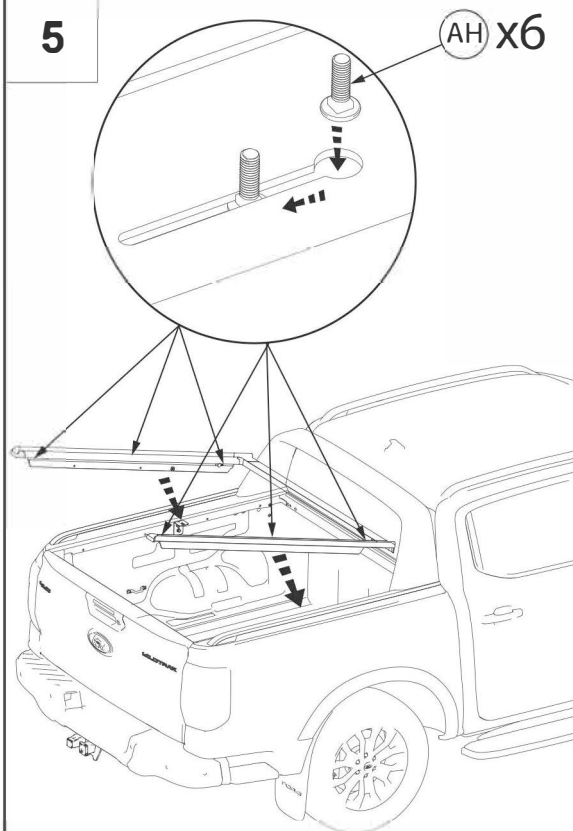


6

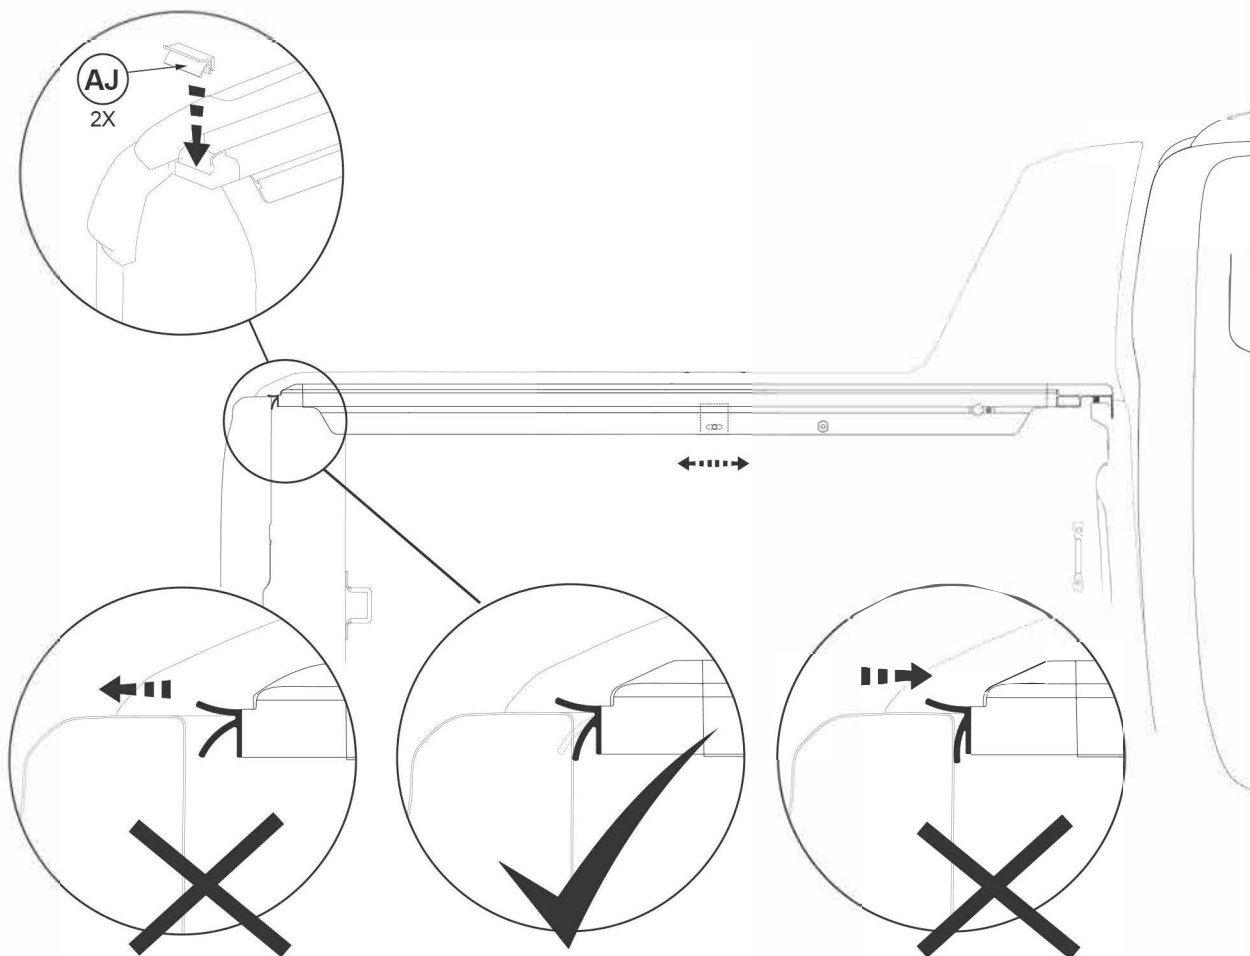


7

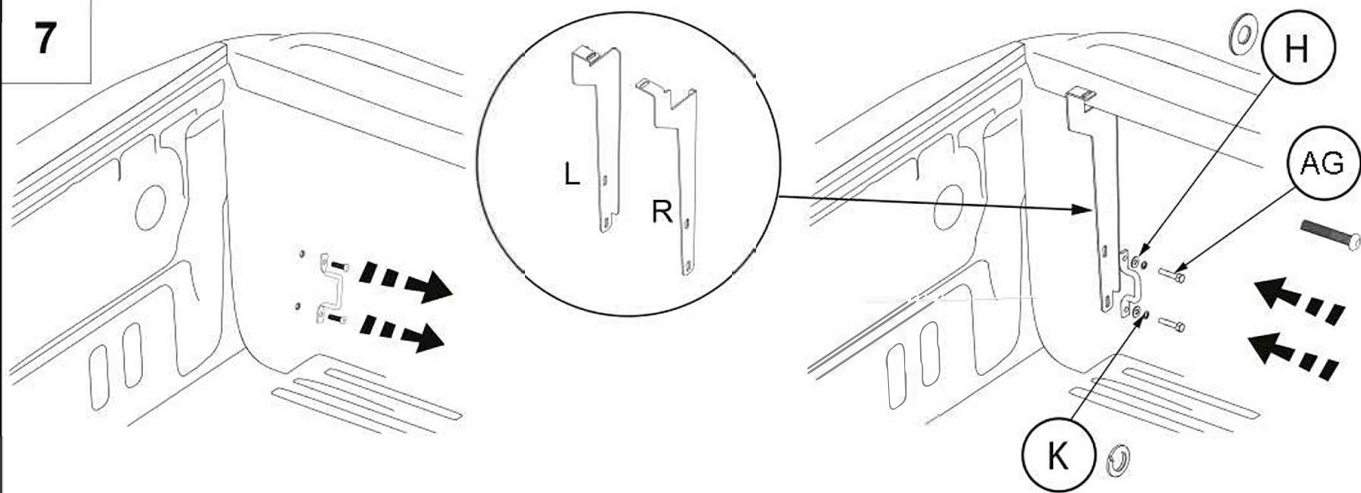


8

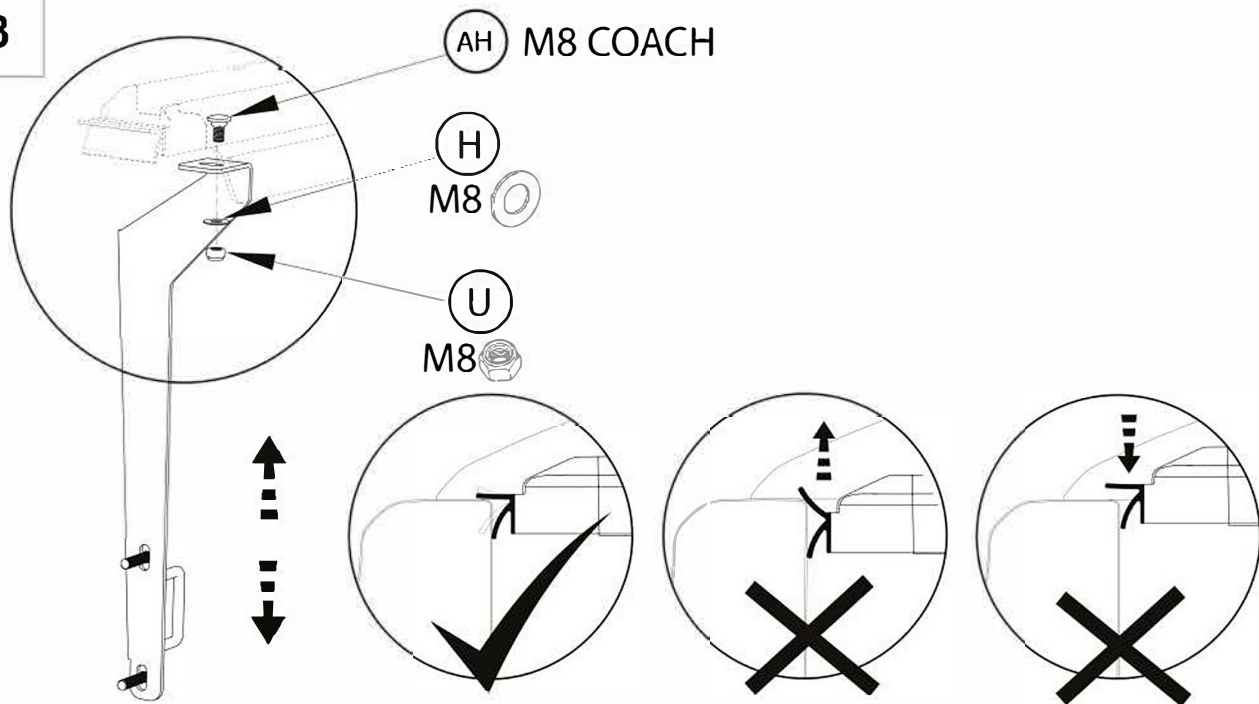


9

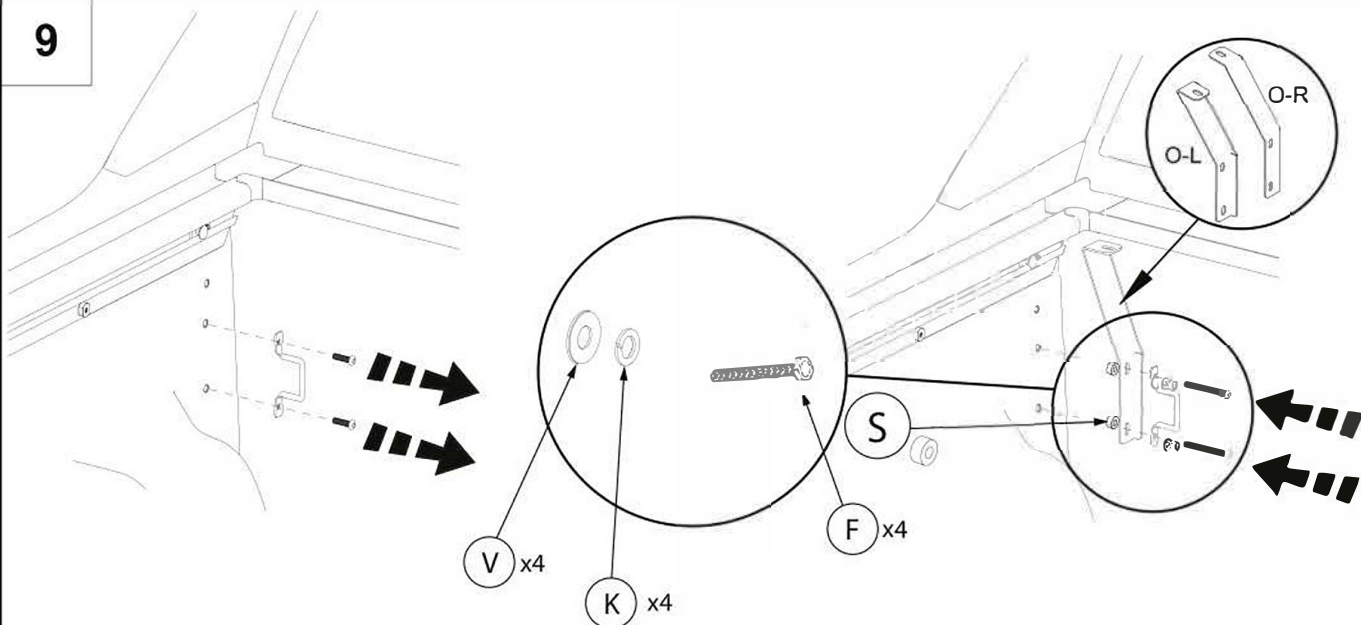


10

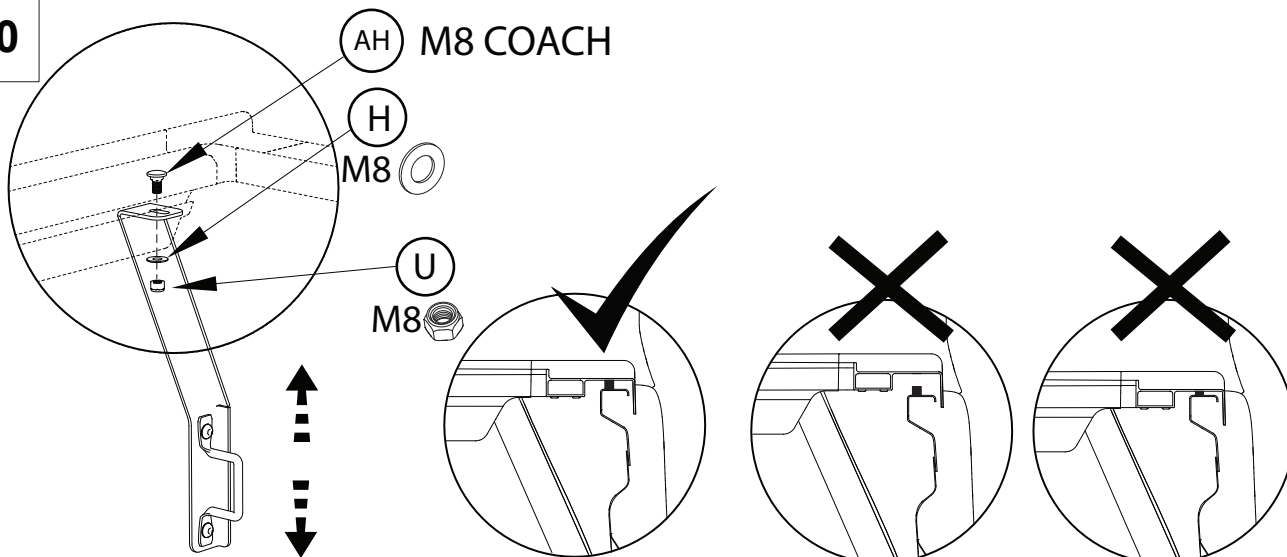

11

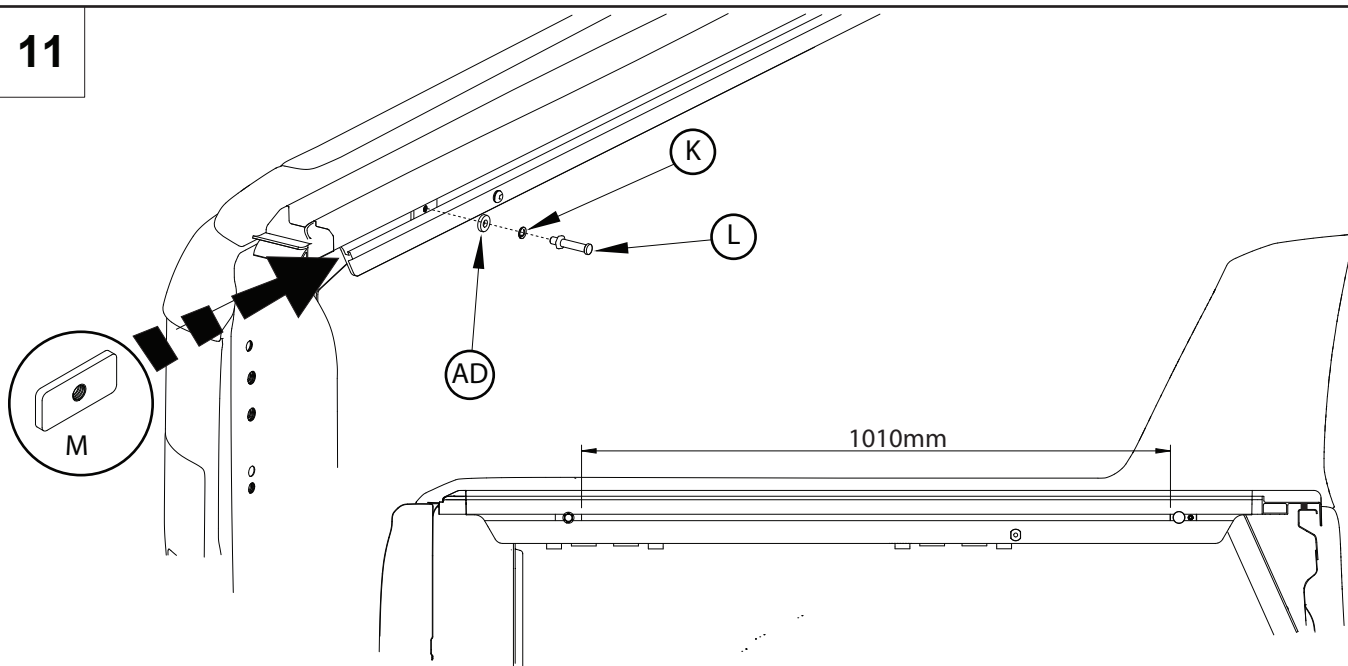


12

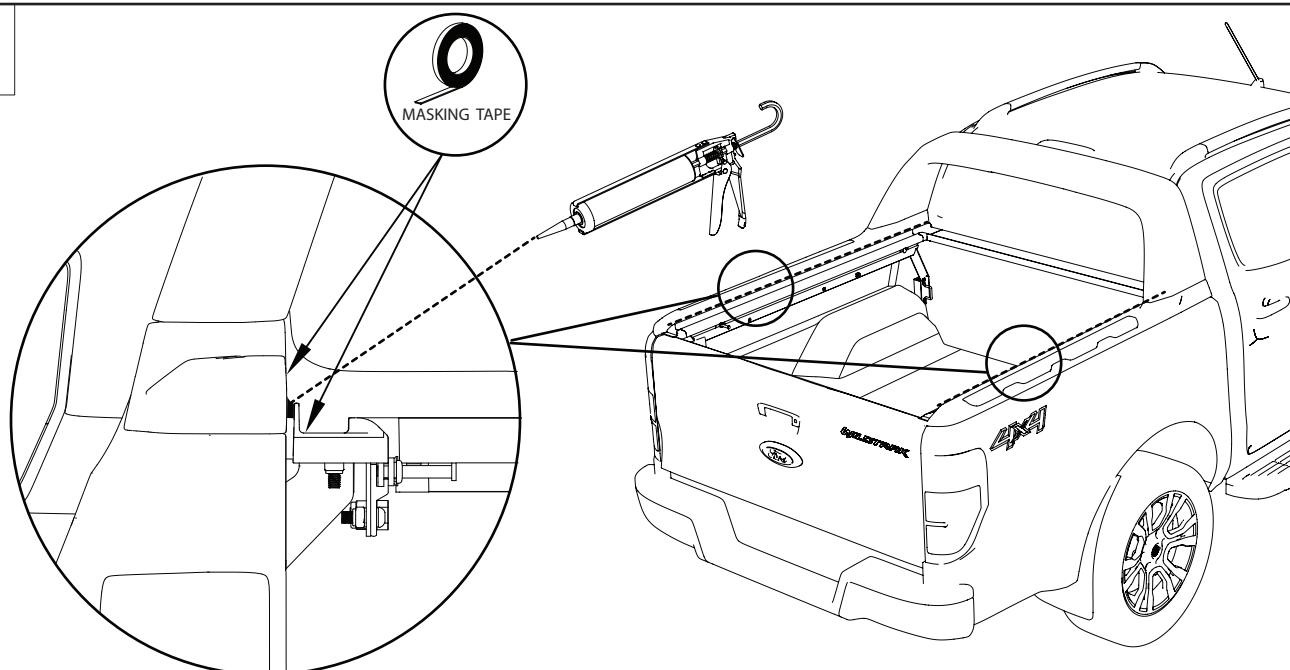


Fitting Kit Number	Product	Revision	Date	Page
EVOS1400S	UpStone Sailplane Lid	1	30-06-2023	5 of 8


13

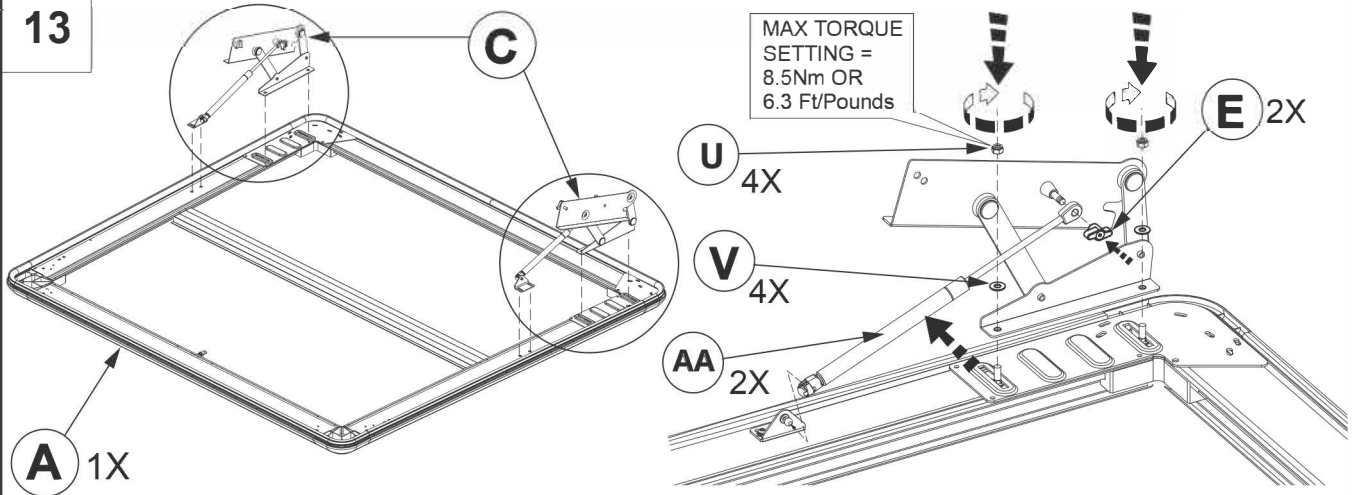


Vehicle Model	Π	Θ
	mm	mm
Ford Ranger Wildtrak DC 2011+	25.5	25.5

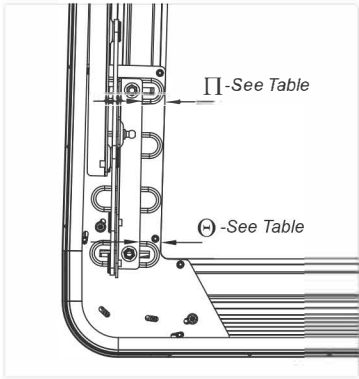

14


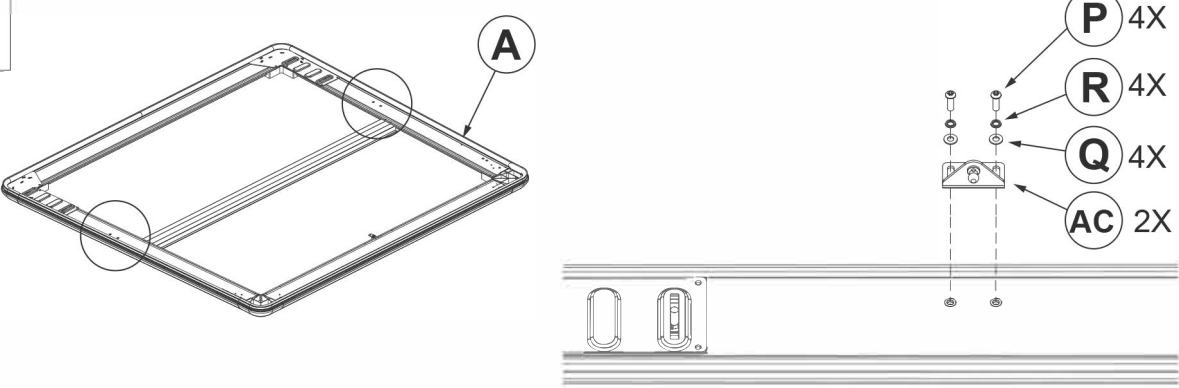


15


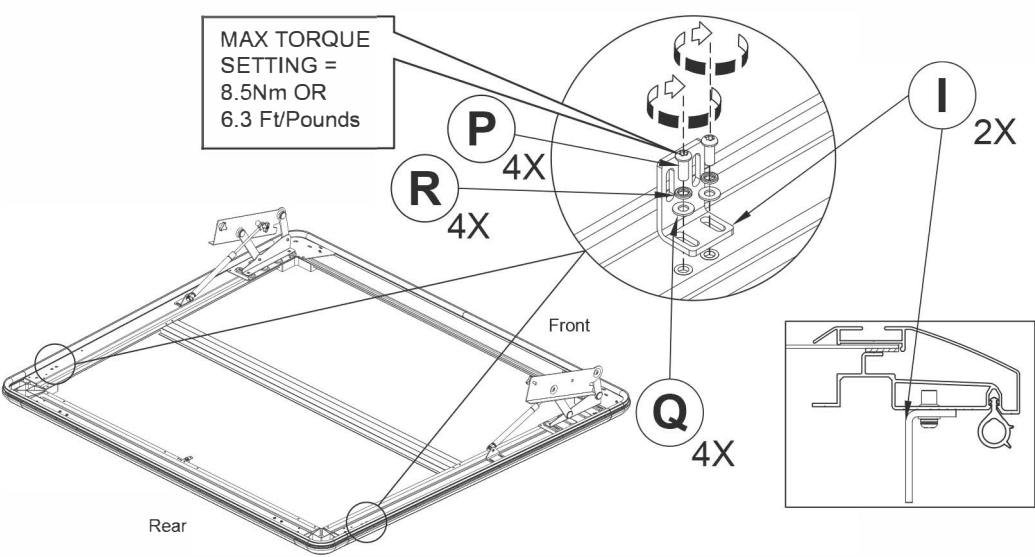


Fitting Kit Number	Product	Revision	Date	Page
EVOS1400S	UpStone Sailplane Lid	1	18-06-2018	6 of 8



16

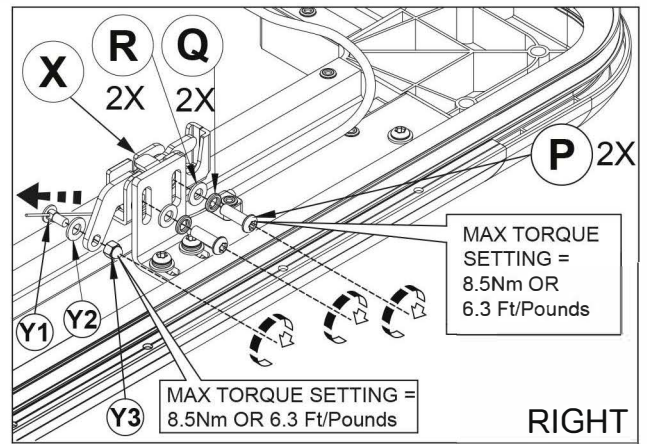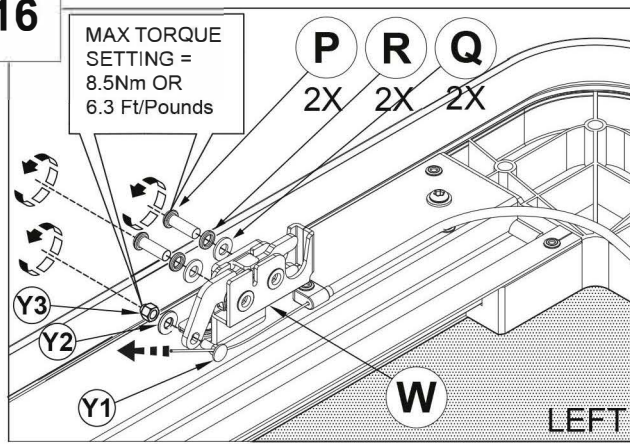


17

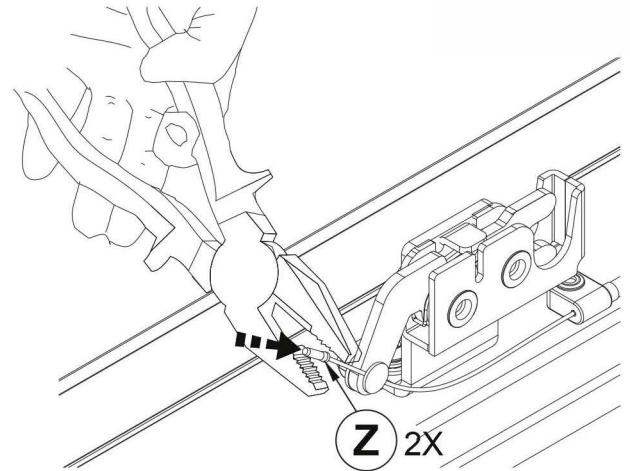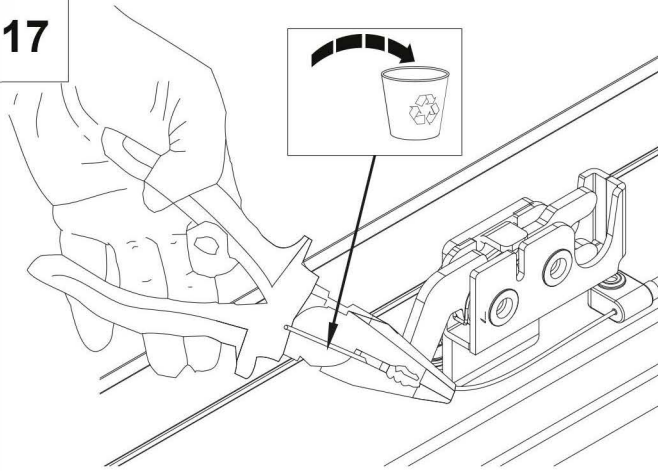




18

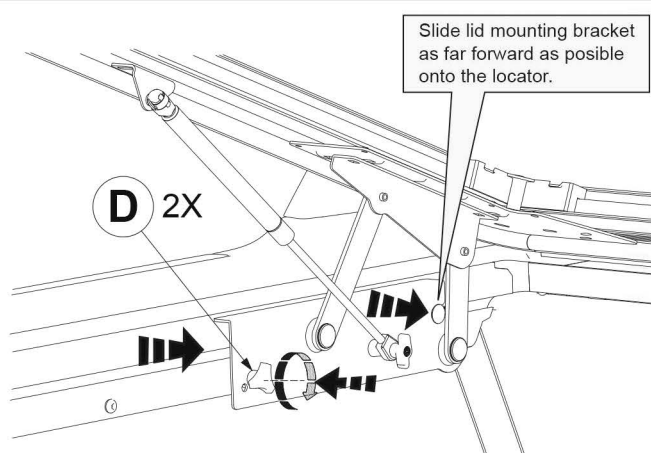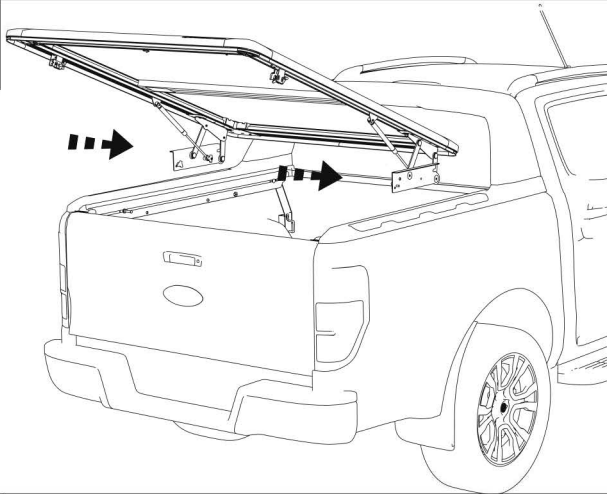

19

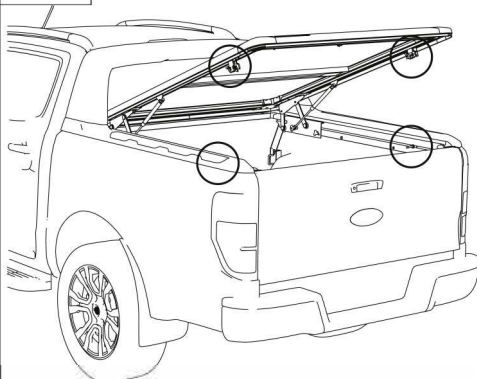

MAX TORQUE SETTING = 8.5Nm OR 6.3 Ft/Pounds

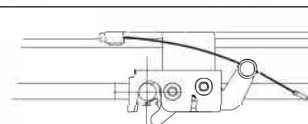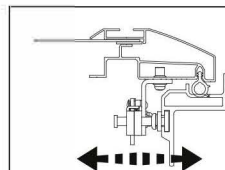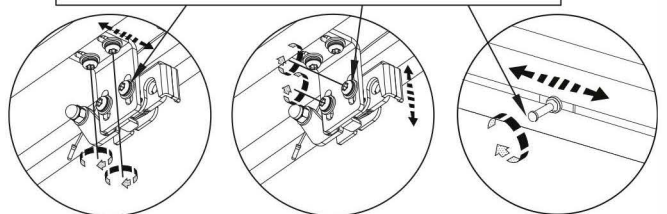

Adjust latch bracket, latch height and pin location to align pin with centre of latch. Adjust cable tension to achieve correct latching. **IMPORTANT!** : Ensure seal contacts vehicle in all areas

Fitting Kit Number

EVOS1400S

Product

UpStone Sailplane Lid

Revision

1


Date

30-06-2023


Page

7 of 8




20

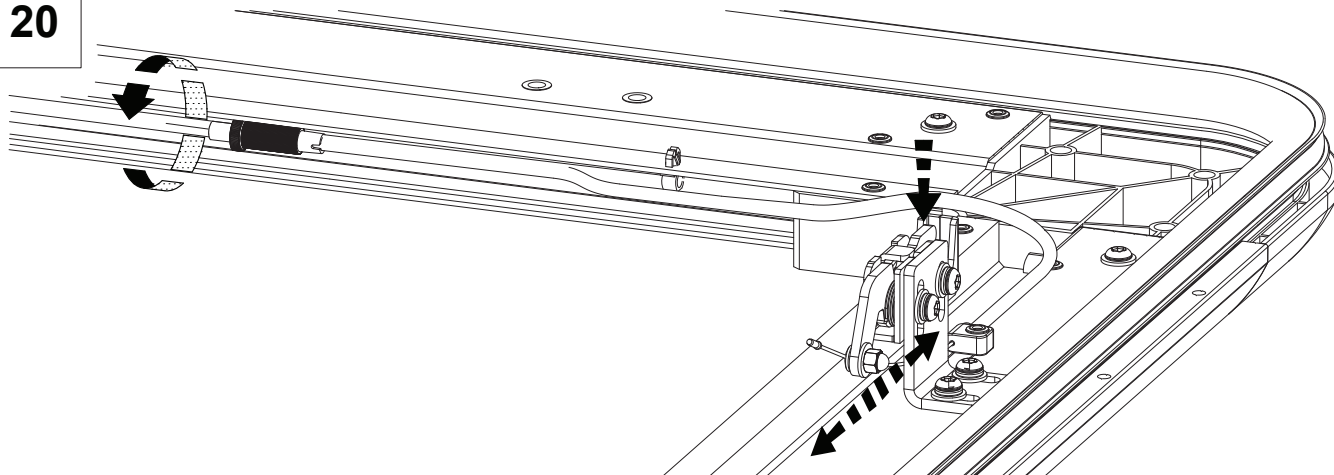

21

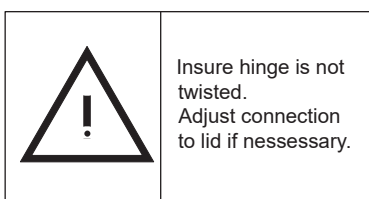

Insure hinge is not twisted.
Adjust connection to lid if nessessary.

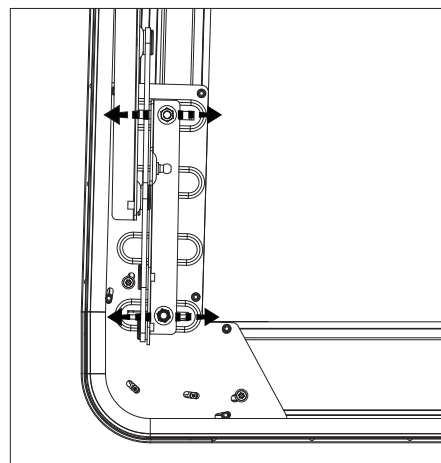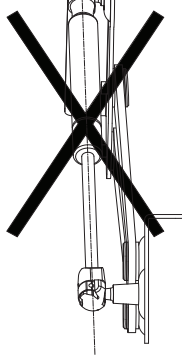

After installation carefully and thoroughly clean all debris from the inside of the cargo box.
Retain these instructions for future reference



CAUTION!

- NEVER allow people or animals under the closed cover
- Do not place unsealed solvents or chemicals under the cover
- Do not stand or place heavy objects on the cover
- Do not open lid when under load.
- Close the cover before operating the vehicle
- Do not allow oil, solvents or chemicals to contact the cover
- Clean only with a mild detergent and water solution

Info@upstone.fr

Fitting Kit Number	Product	Revision	Date	Page
EVOS1400S	UpStone Sailplane Lid	1	30-06-2023	8 of 8