

UpStoneEvolve

















INSTALLATION INSTRUCTION MANUAL

FORD RANGER DC / XC 2012+


EVOSR330 - EVOSR350

 COVER EVOSR330/350

 KIT330/350RLBF

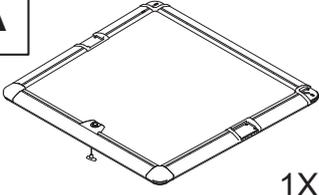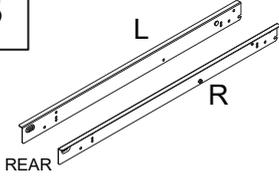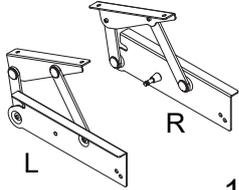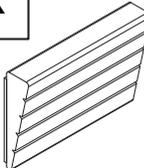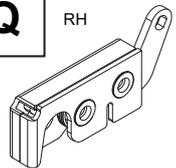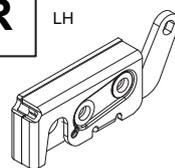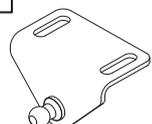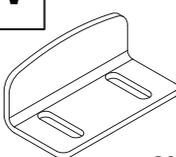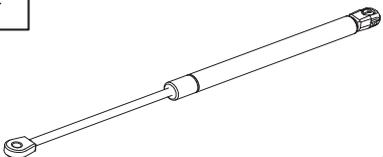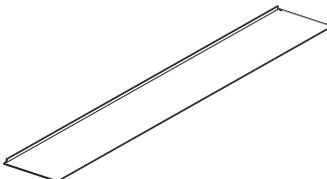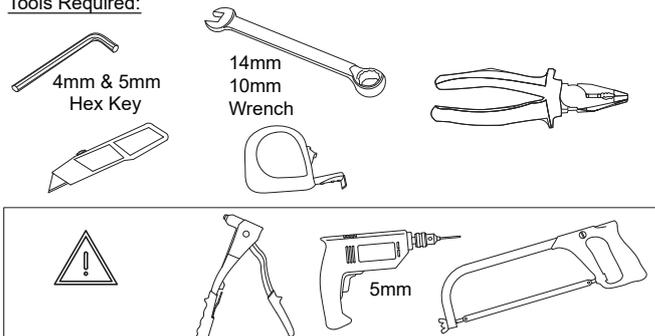A  1X	B  1X		C  1X	D  2X	
E  4X	F M8x25mm  4X	G M8X16 Stainless Steel Washer  10X	H M8 Stainless Steel Spring Washer  2X	I  2X	J  2X
K  4X	L  2X	M M8 Nylock  4X	N M6X18  8X	O M6X13 mm Zinc  8X	P M6 Stainless Steel Spring Washer  8X
Q RH  1X	R LH  1X	S M5 Cable Bolt, Washer & Dome Nut  2X	T  2X	U  2X	V  2X
W  2X	X Gas springs  1X		Y  1X		
<p>Note 1: If at any stage of installation you find your sportlid to be an unacceptable fit please contact the manufacturer before continuing.</p> <p>Note 2: If required, use Under Rail Bed Liner only. NOT FOR USE WITH OVER RAIL BED LINER!</p> <p>Tools Required:</p> 					

1

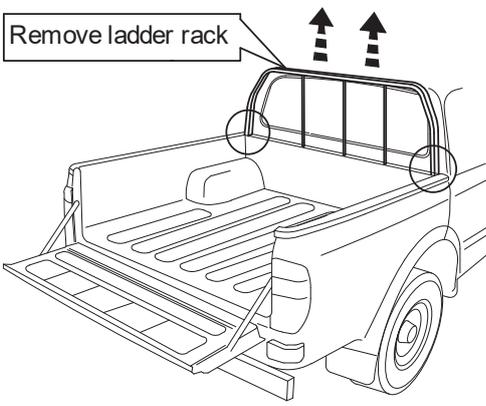


Note 2: If required, use Proform Under Rail Bed Liner only. Not for use with Over Rail Bed Liner.

Follow guide lines to trim liner in front corners.




2

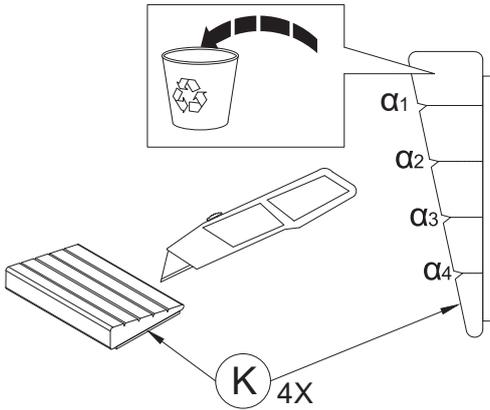


Vehicle Model	α
Ford Ranger T6 Double et Super Cabine 2012+ 2AB	2

3

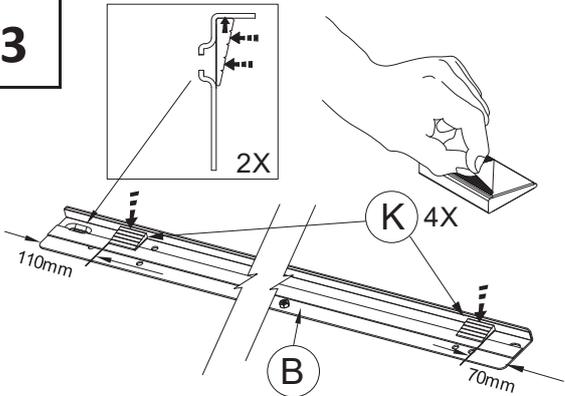



4

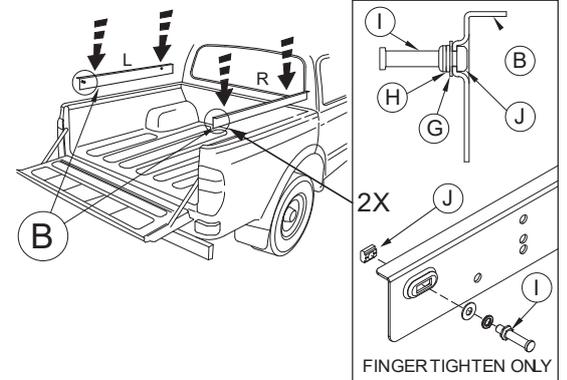

5

Place front of side mounting brackets back from inside corners of the cargo box - See table for measurement

Vehicle Model	β	δ	φ
Ford Ranger T6 Double et Super Cabine 2012+ 2AB	72.4 mm	4	3

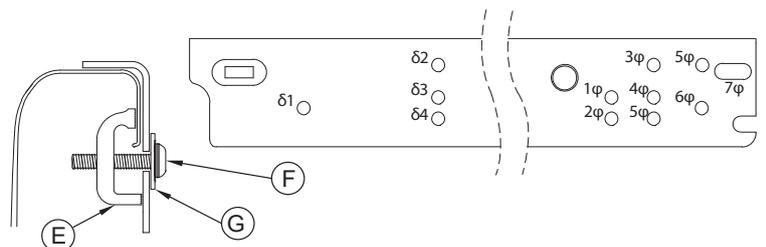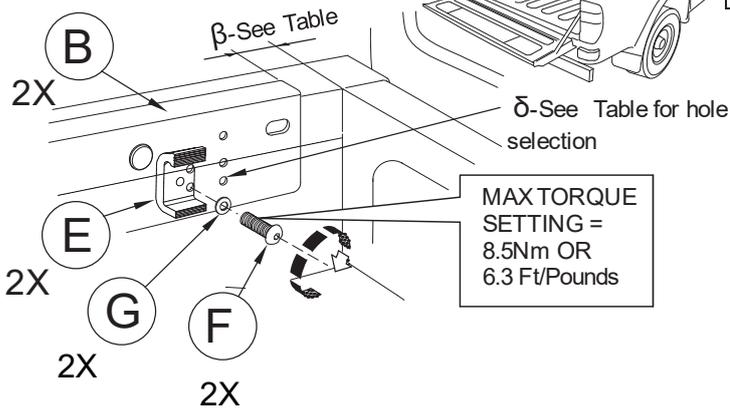

Fitting Kit Number

Product

Revision

Date

Page

EVOSR330/EVOSR350

FORD RANGER


1

22.07.2024




2

6

δ - See Table for hole selection

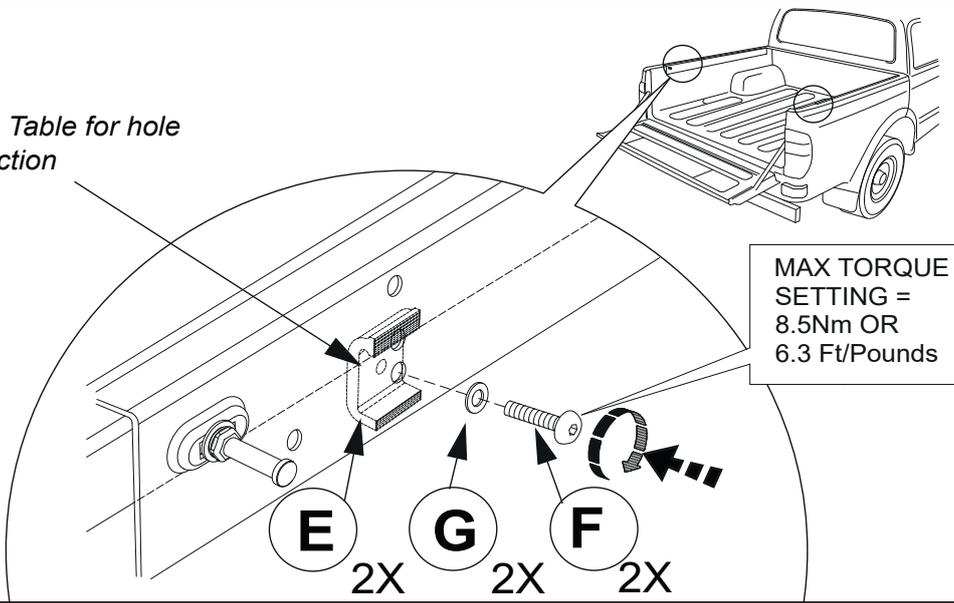



7

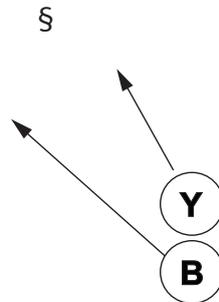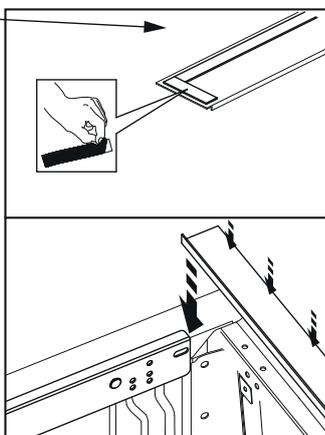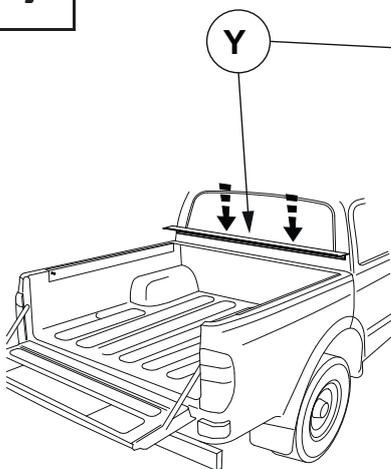


Vehicle Model	§
Ford Ranger T6 Double et Super Cabine 2012+ 2AB	37.5 mm

 DO NOT apply below 15°C.
Apply pressure to part. Adhesive is pressure activated.
Allow 3hrs minimum to cure before installing lid


8

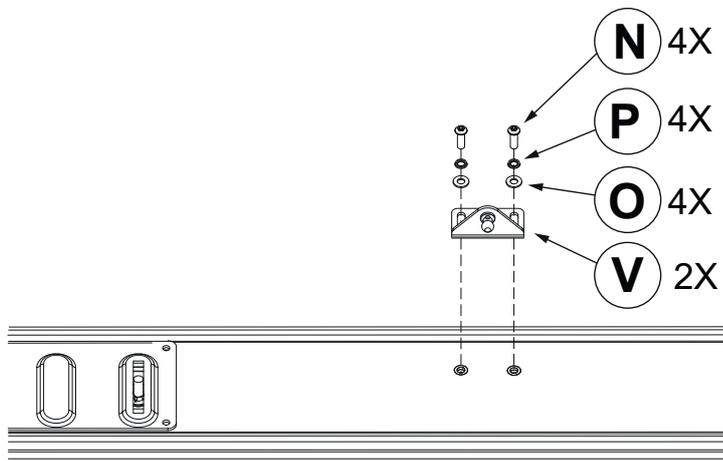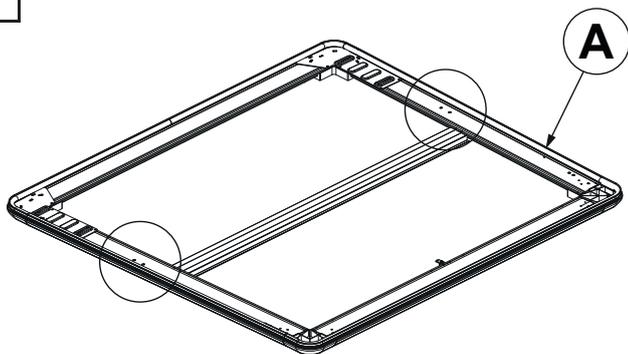


9

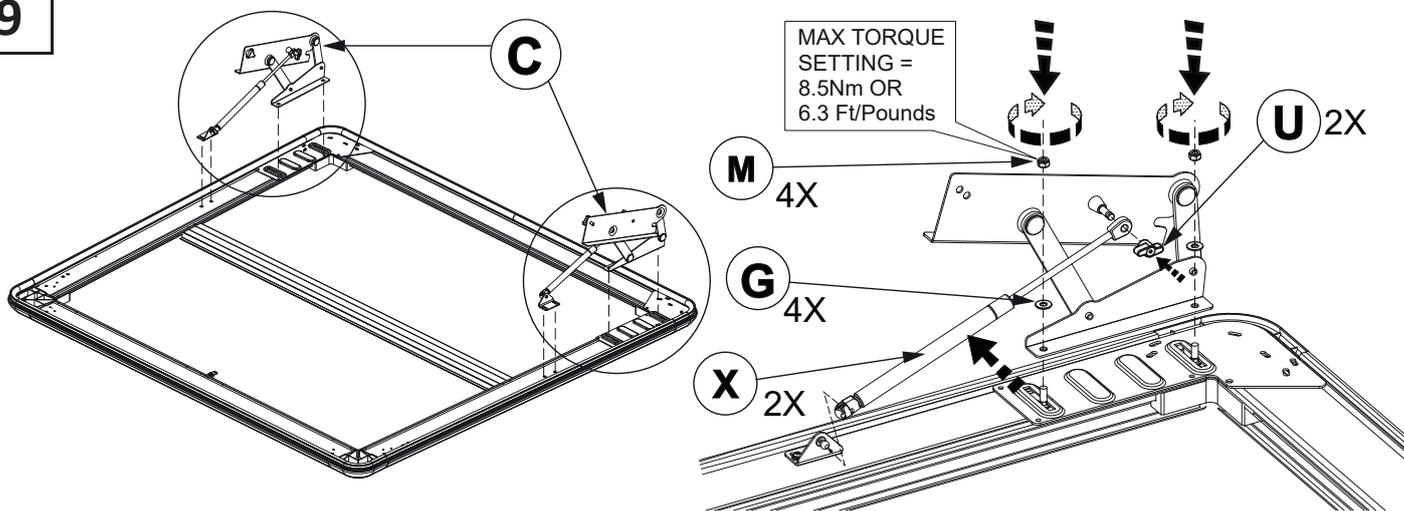



Vehicle Model	Π	Θ	Σ
Ford Ranger T6 Double et Super Cabine 2012+ 2AB	10mm	10mm	2QTY

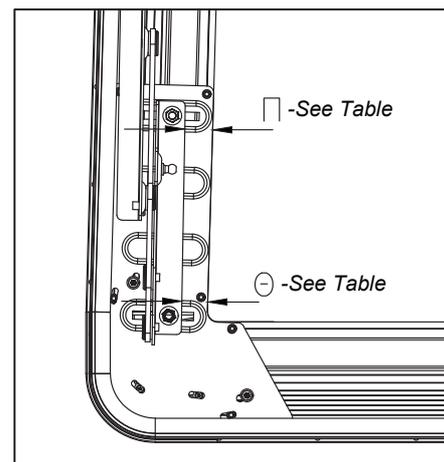

10

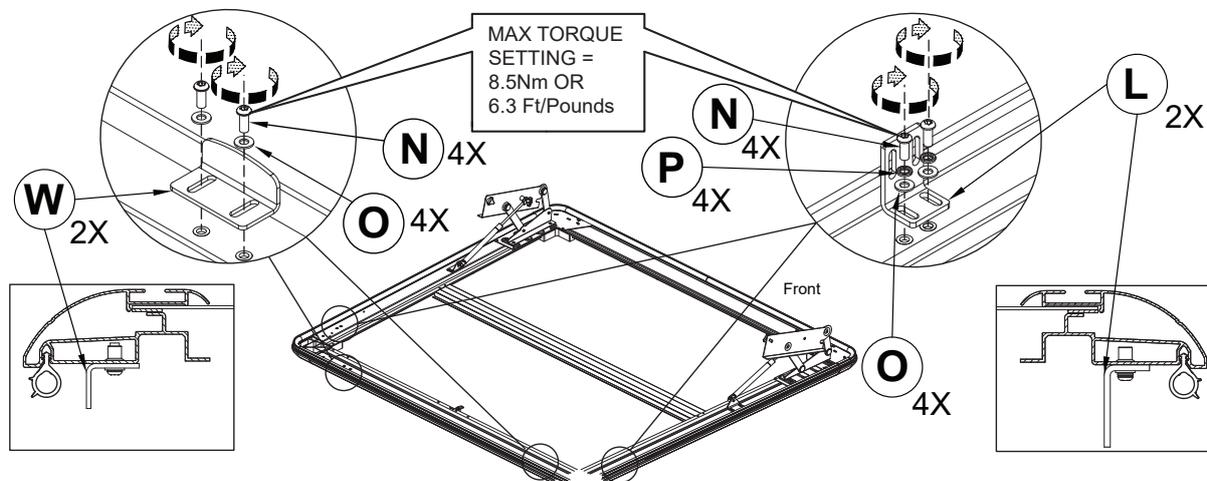

11

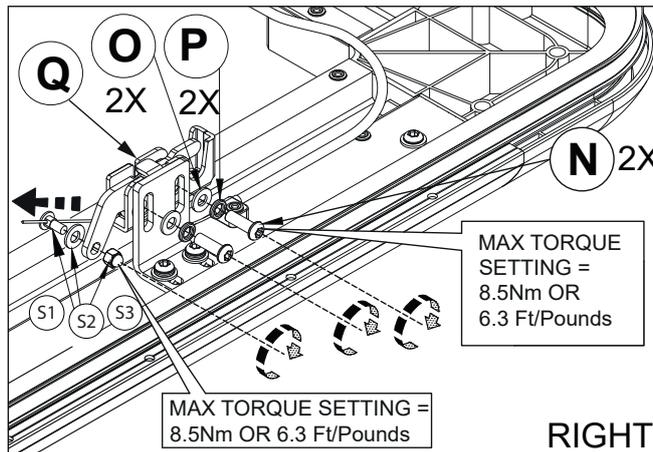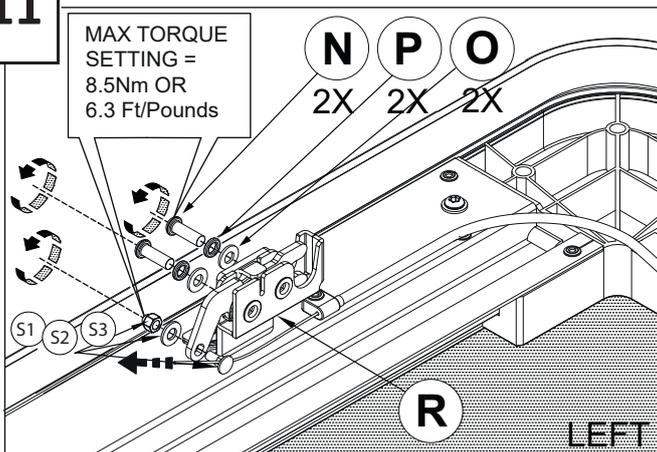

Fitting Kit Number

Product

Revision

Date

Page






EVOSR330/EVOSR350

FORD RANGER

1

22.07.2024

4

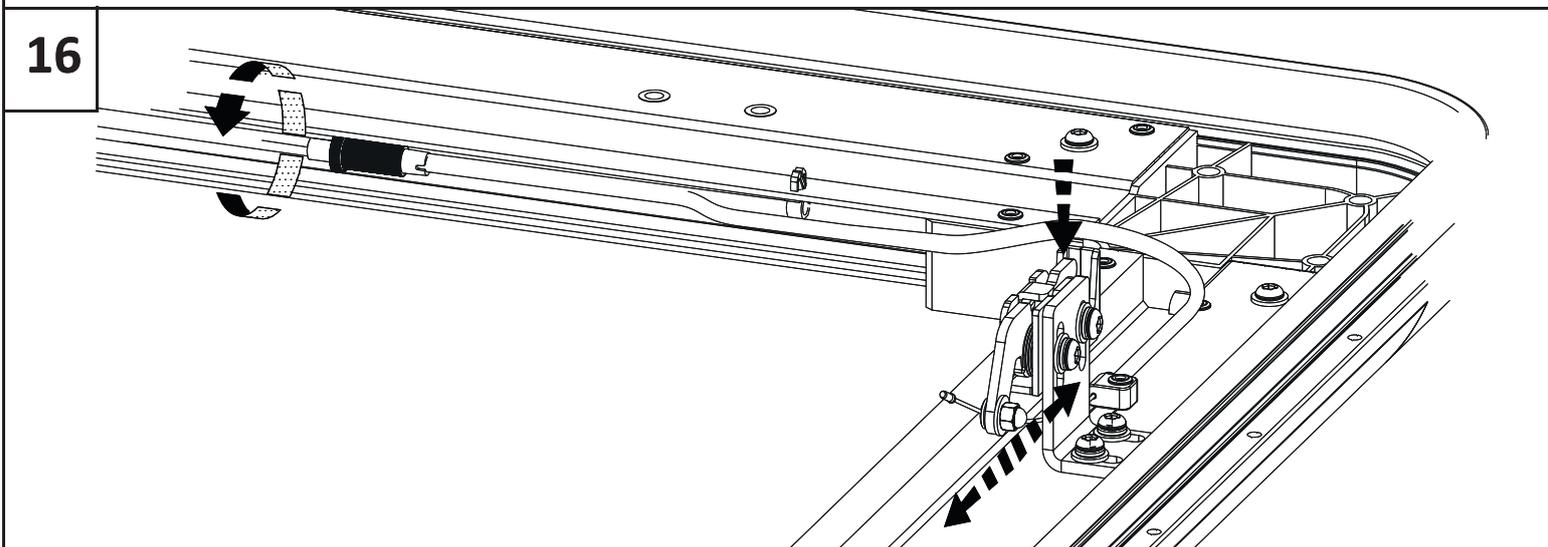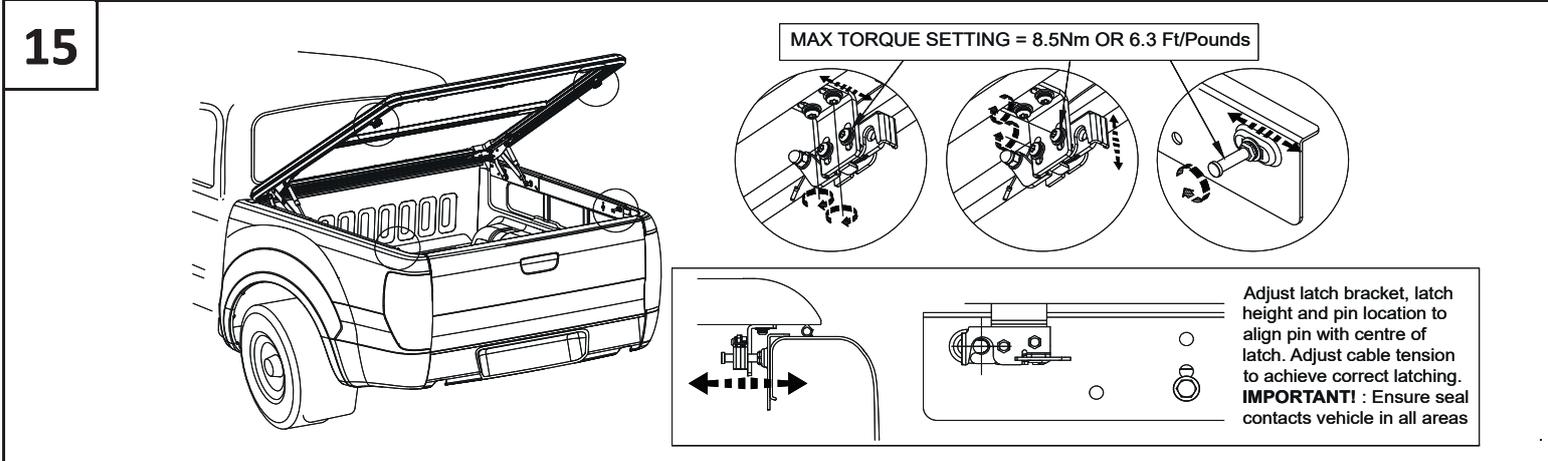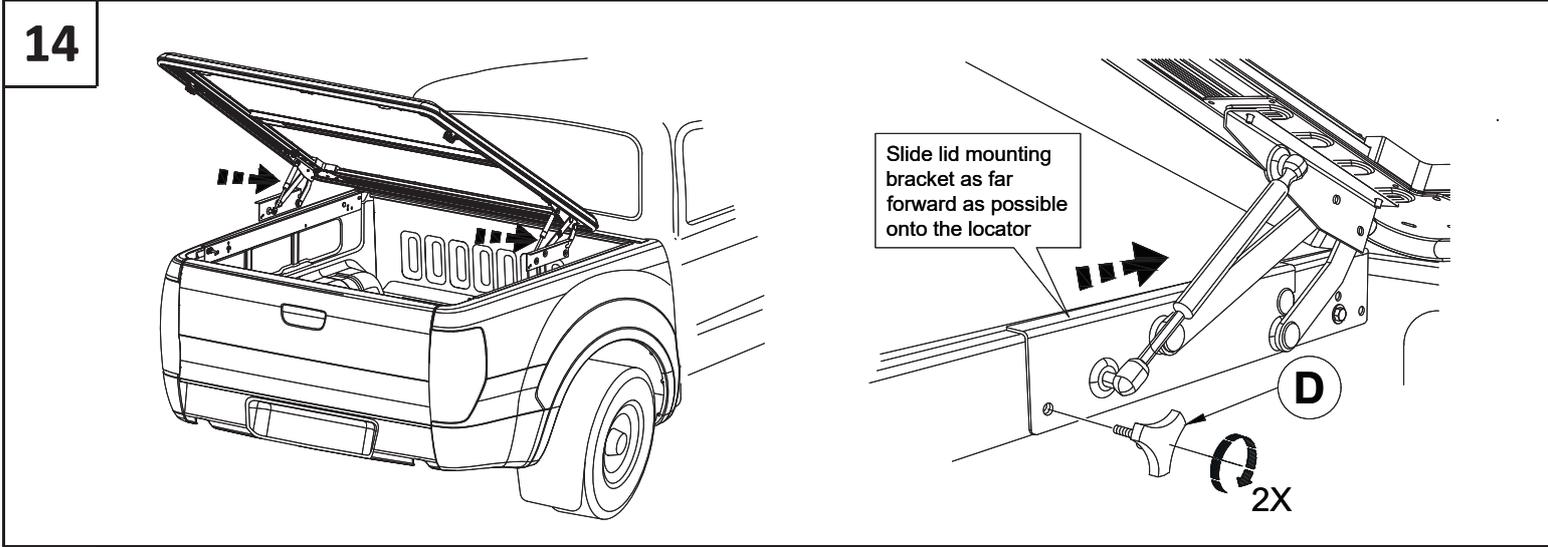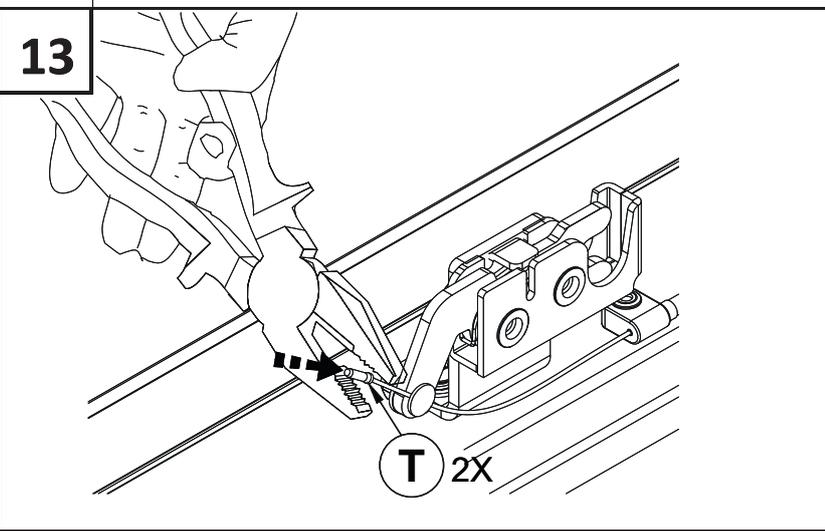
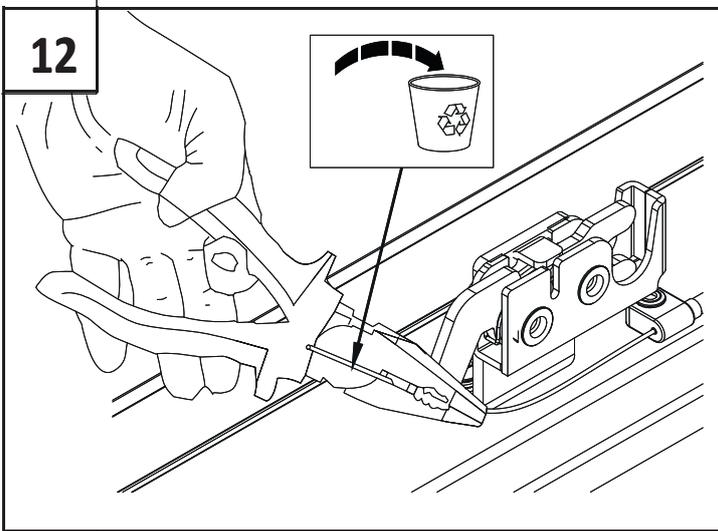


Fitting Kit Number	Product	Revision	Date	Page
EVOSR330/EVOSR350	FORD RANGER	1	22.07.2024	5




17




Insure hinge is not twisted.
Adjust connection to lid if nessessary.

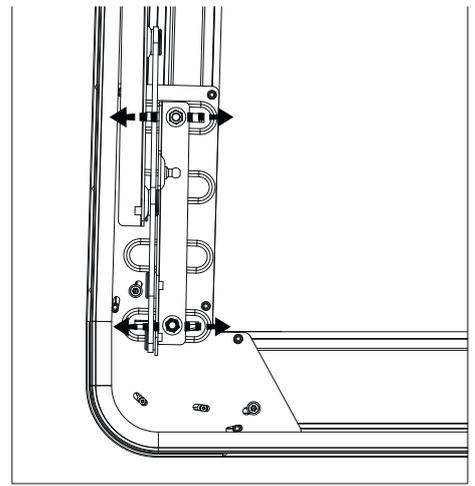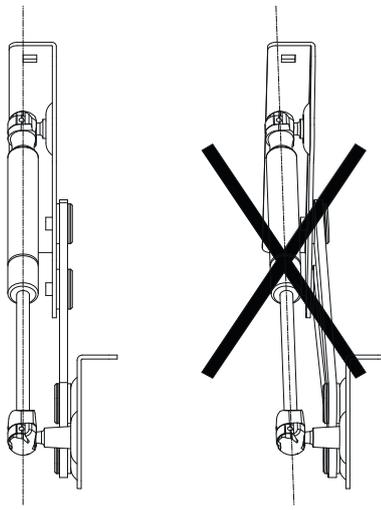

18

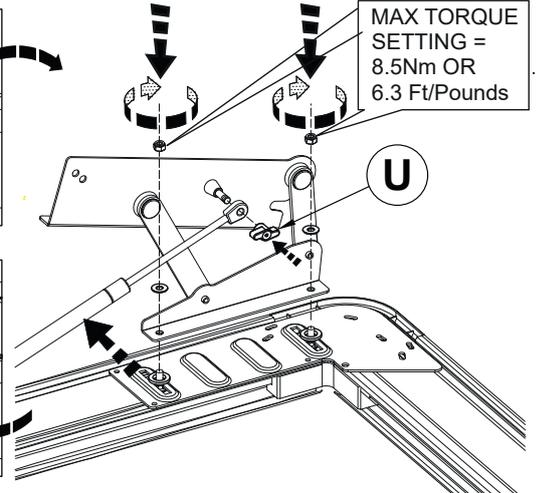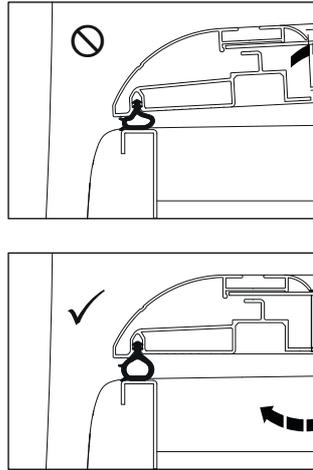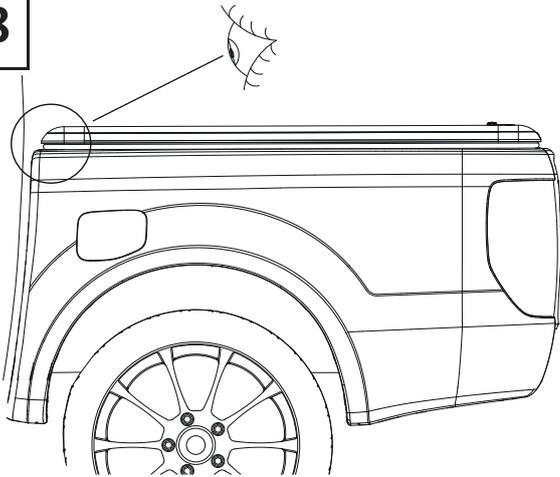

19

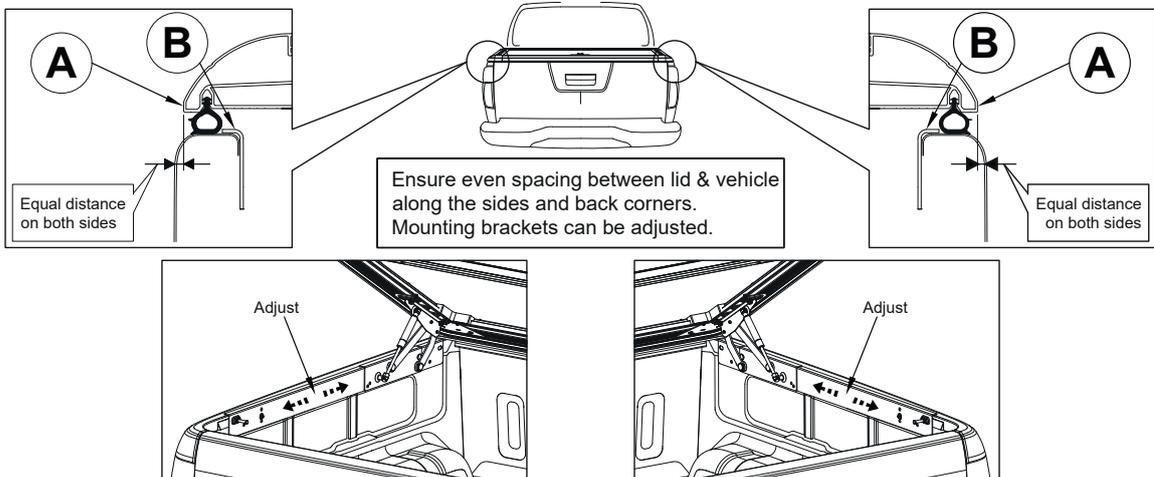

UpStoneEvolve



CAUTION!

- NEVER allow people or animals under the closed cover
- Do not place unsealed solvents or chemicals under the cover
- Do not stand or place heavy objects on the cover
- Do not open lid when under load.
- Close the cover before operating the vehicle
- Do not allow oil, solvents or chemicals to contact the cover
- Clean only with a mild detergent and water solution

After installation carefully and thoroughly clean all debris from the inside of the cargo box.
Retain these instructions for future reference

<http://www.upstone.eu>










info@upstone.fr





Fitting Kit Number	Product	Revision	Date	Page
EVOSR330/EVOSR350	FORD RANGER	1	22.07.2024	7

UpStoneEvolve


INSTALLATION INSTRUCTIONS FORD RANGER 2012+ DOUBLE/ SUPER CABINE

EVOSR330 / EVOSR350

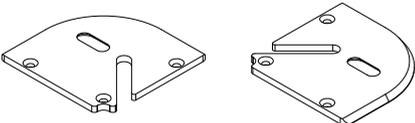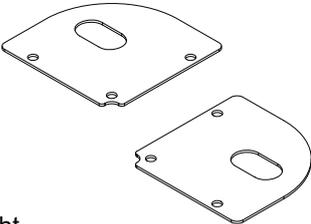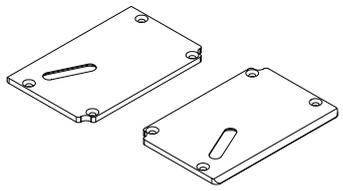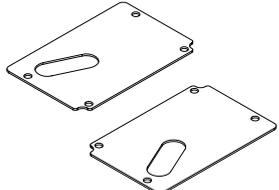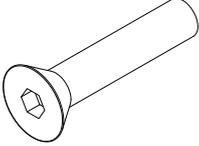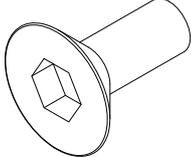
<p>A</p>  <p>Left + Right 2X</p>	<p>B</p>  <p>Left + Right 2X</p>	<p>C</p>  <p>Left + Right 2X</p>		
<p>D</p>  <p>Left + Right 2X</p>	<p>E</p>  <p>M6X25mm 14X</p>	<p>F</p>  <p>M6X13mm 14X</p>		
<p>G</p>  <p>M6 14X</p>	<p>H</p>  <p>M8x20mm 4X</p>			
<p> - New component</p> <p> - Existing component</p>	<p>Note 1: If at any stage of installation you find your sportlid to be an unacceptable fit please contact the manufacturer before continuing.</p> <p>Note 2: This kit is only applicable to the Ford Ranger 11+ DC/XC OE bar compatible Upstone Evolve lids.</p>			
<p style="text-align: center;">Tools Required</p> <div style="display: flex; justify-content: space-around; align-items: center;">    </div> <p style="text-align: center;">4mm & 5mm Hex Key 14mm Wrench</p>				
<p>Fitting Kit Number EVOSR330/EVOSR350</p>	<p>Product FORD RANGER</p>	<p>Revision 1</p>	<p>Date 22.07.2024</p>	<p>Page 8</p>

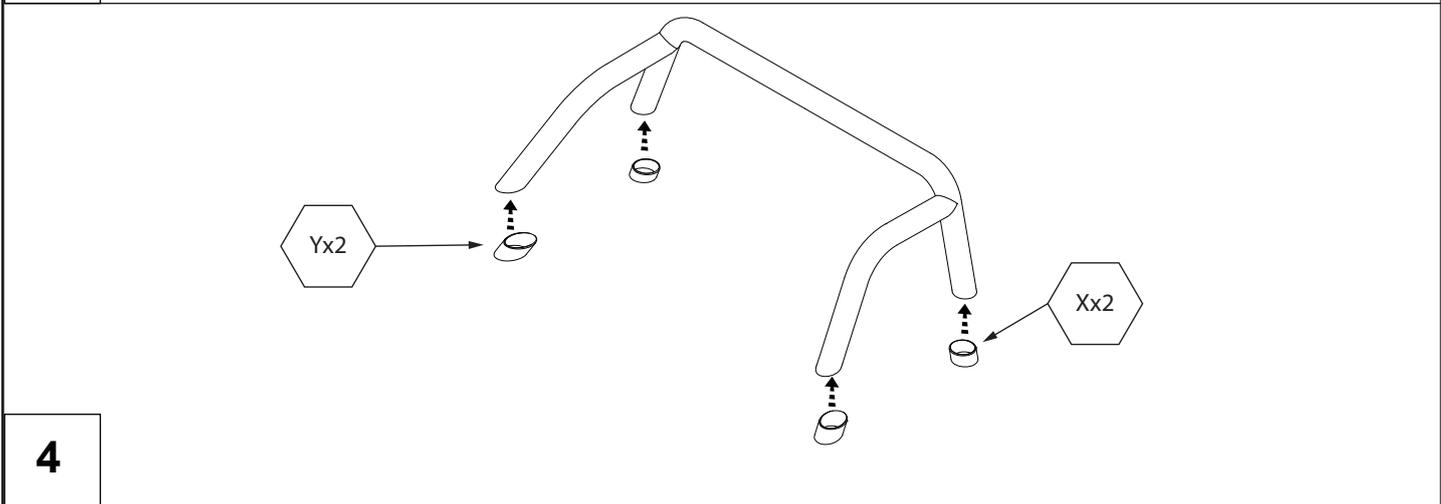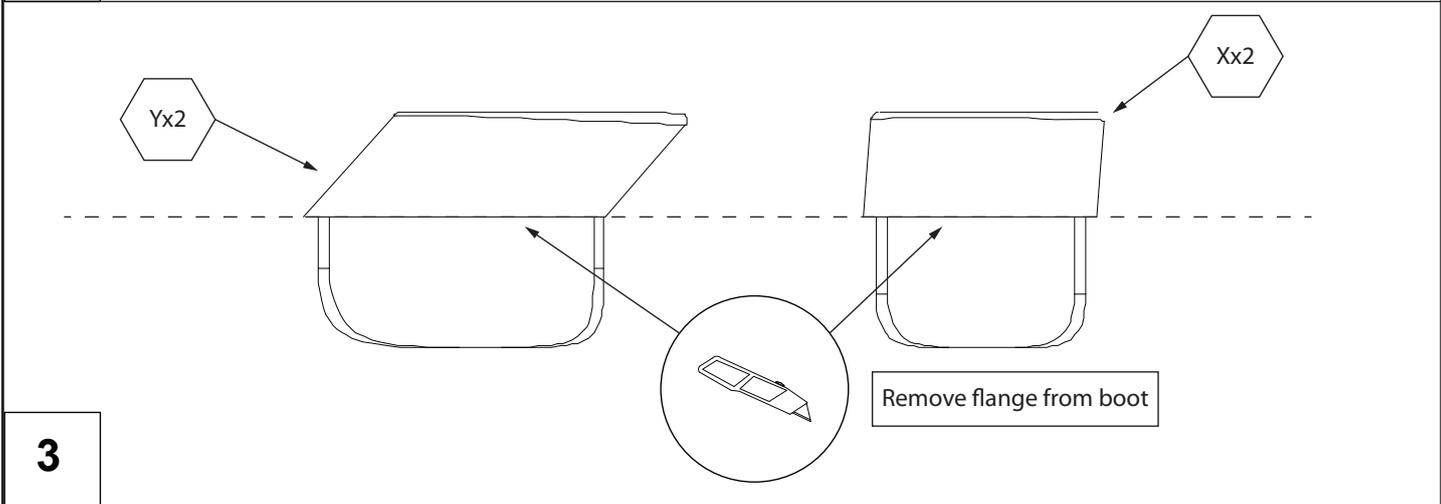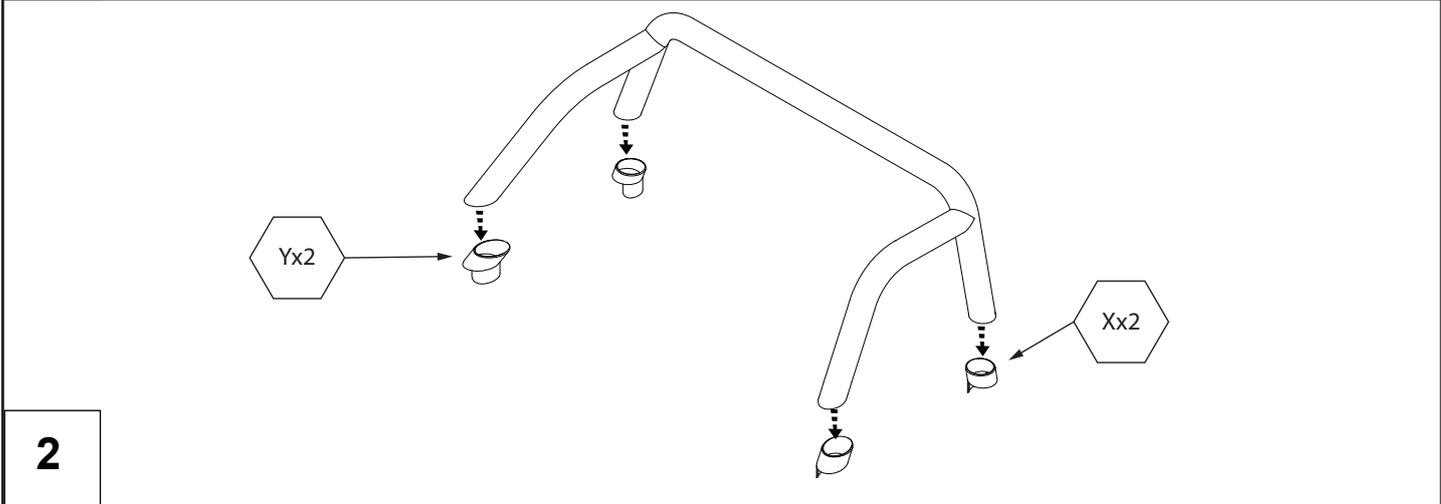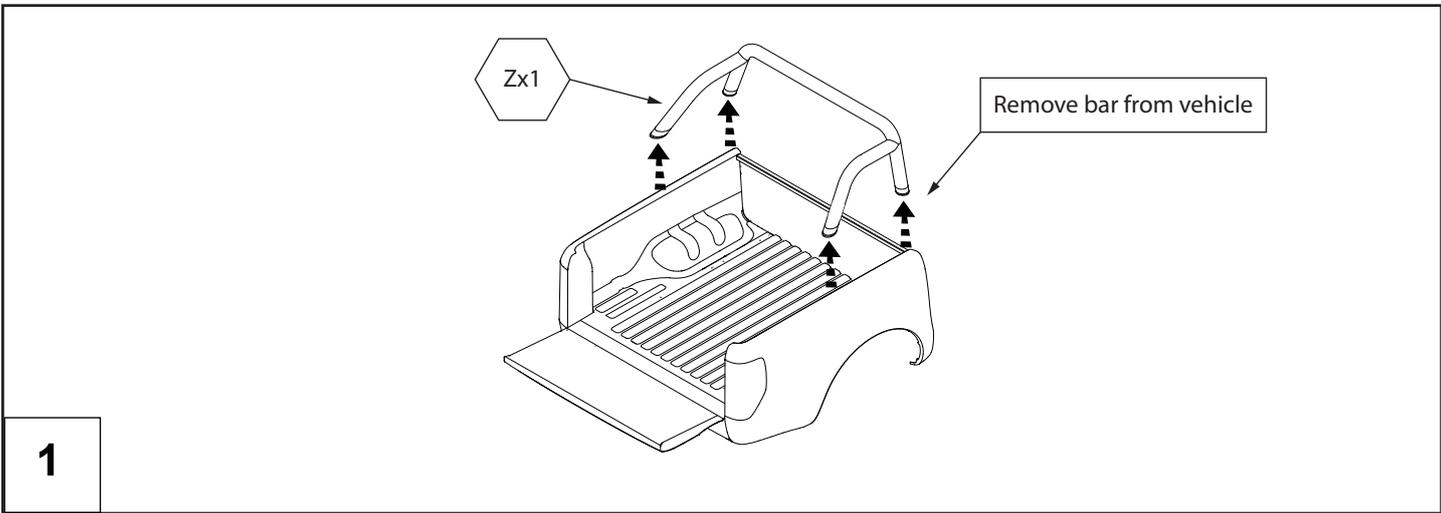

Fitting Kit Number	Product	Revision	Date	Page
EVOSR330/EVOSR350	FORD RANGER	1	22.07.2024	9

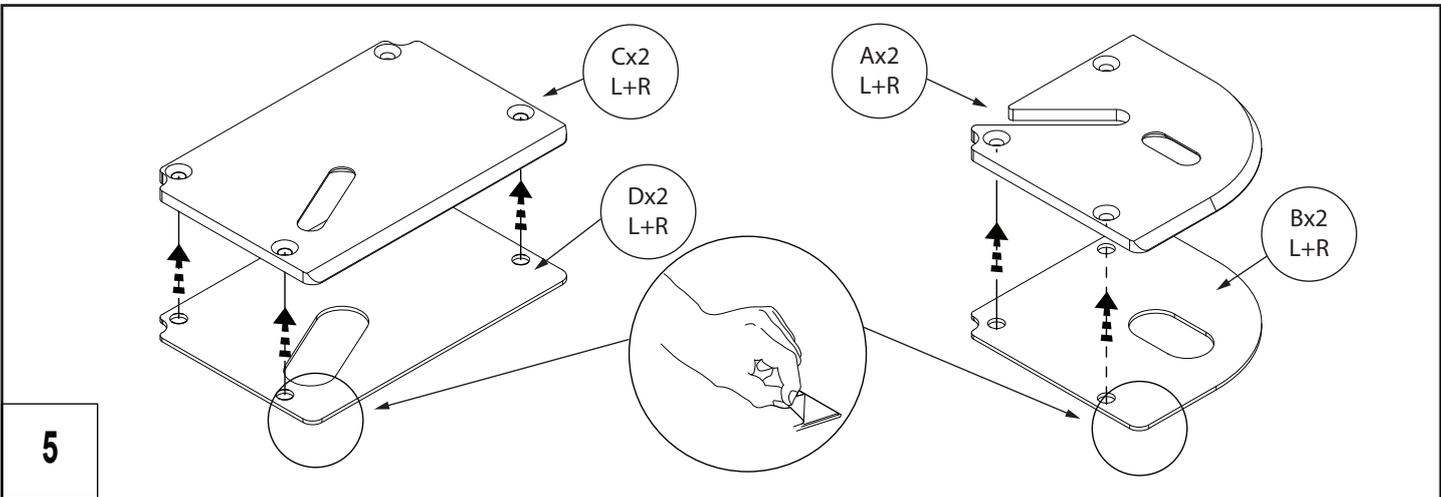


5

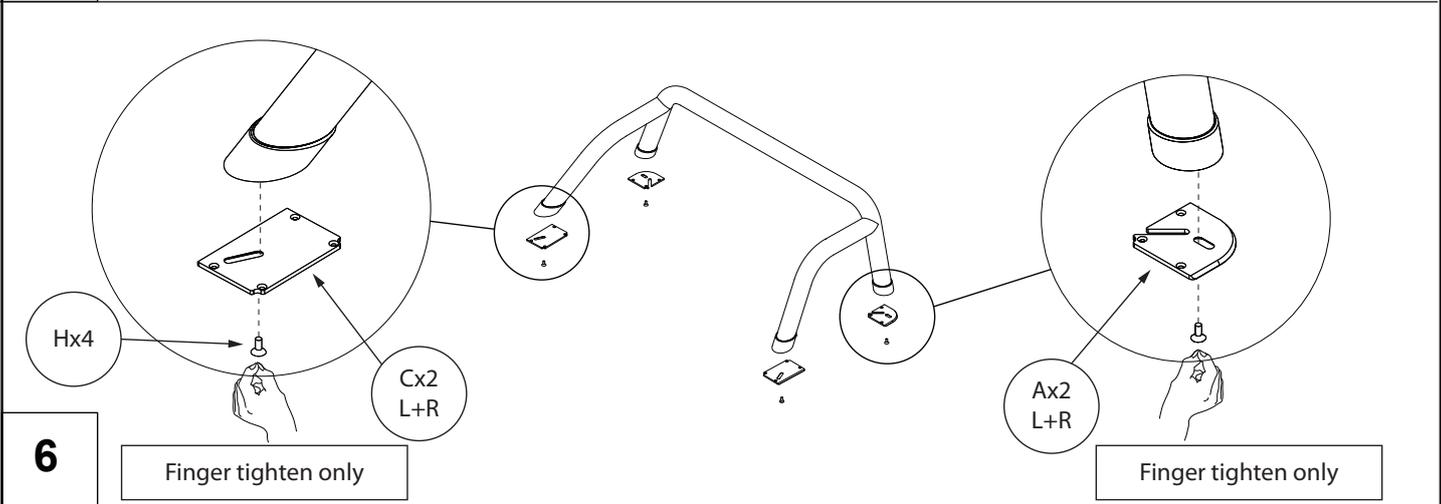


6

Finger tighten only

Finger tighten only

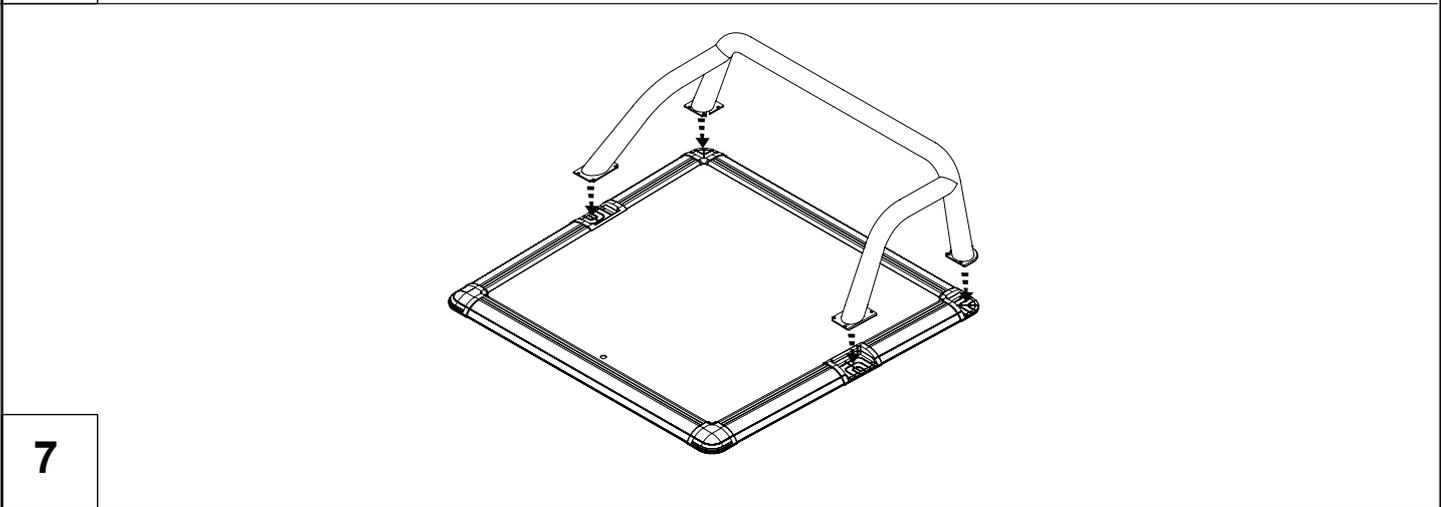


7

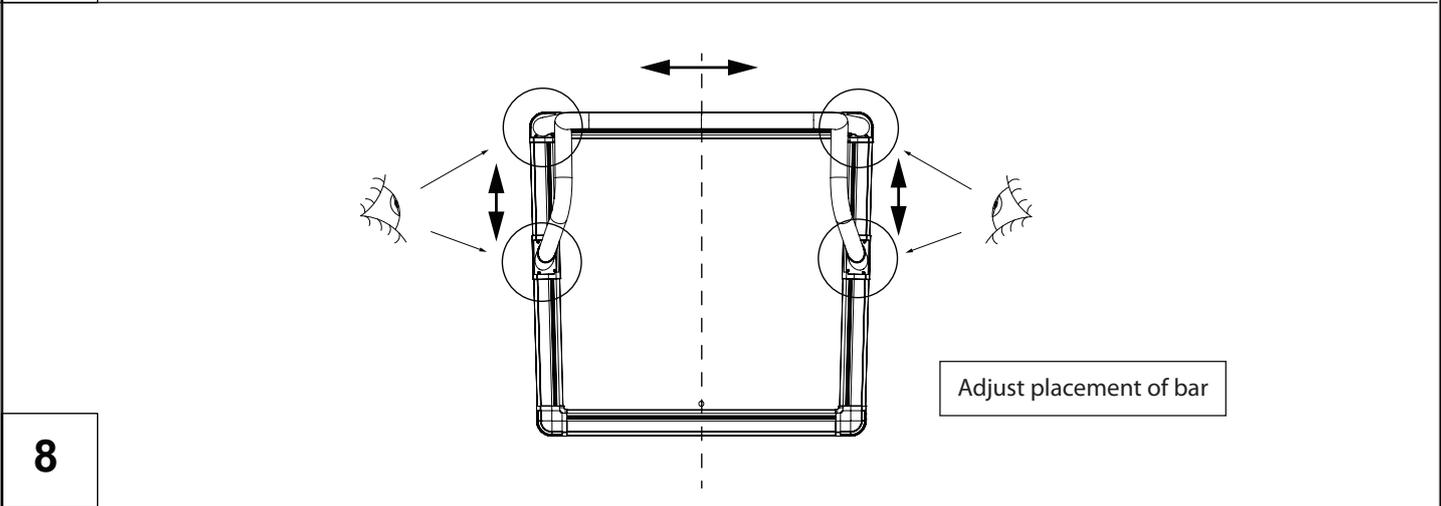


8

Adjust placement of bar


Fitting Kit Number	Product	Revision	Date	Page
EVOSR330/EVOSR350	FORD RANGER	1	22.07.2024	10

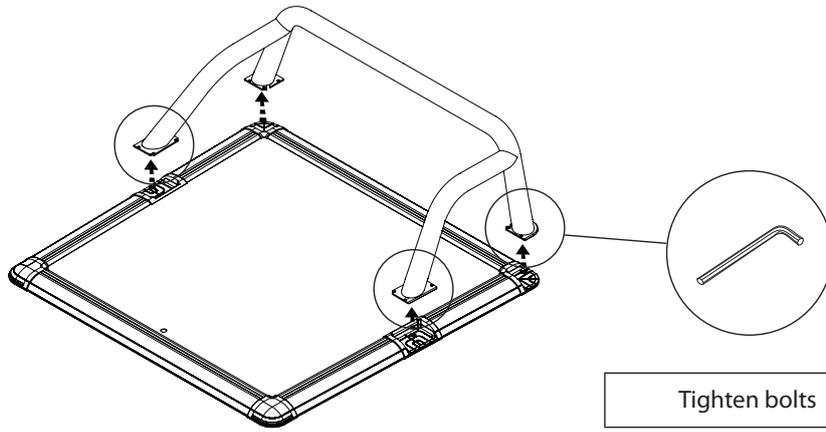

9

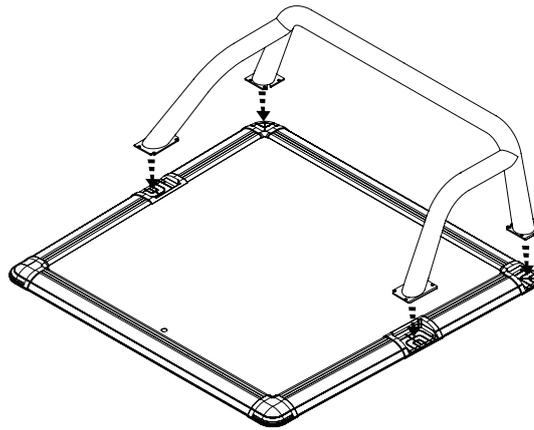


10

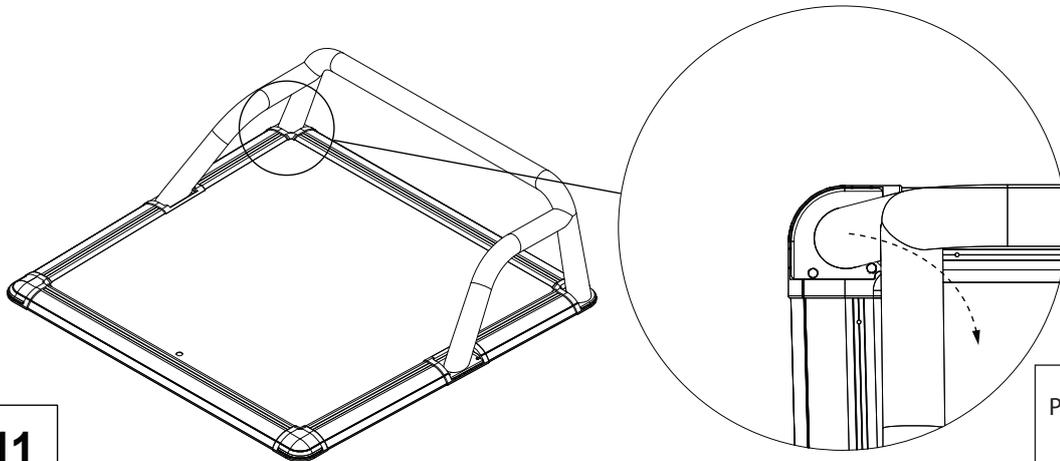


11

Pass brake light cable through drilled hole and into lid.

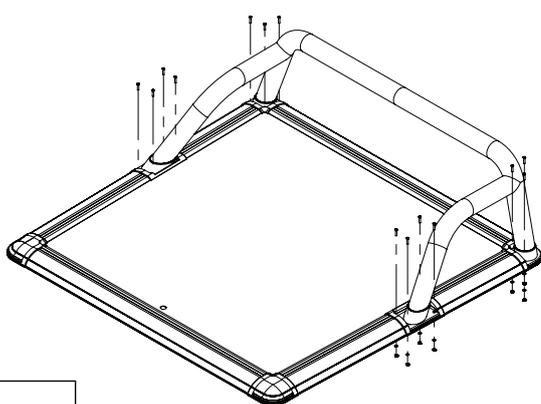

12

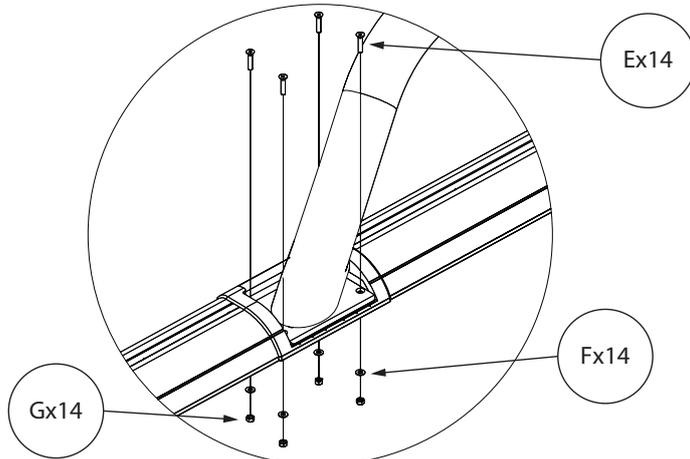

Fitting Kit Number	Product	Revision	Date	Page
EVOSR330/EVOSR350	FORD RANGER	1	22.07.2024	12