



Montaažiskeem / Mounting Instructions / Монтажная схема

Peugeot Expert / Citroën Jumpy / Fiat Scudo 2008- | Art. 826200


Kaitseplekk

Protective plate

Защитный лист




- | | |
|---|---|
| 1. Kaitseplekk / protective plate / защитный лист | 1 |
| 2. Tõmbeneet / blind rivet / заклепка | 7 |

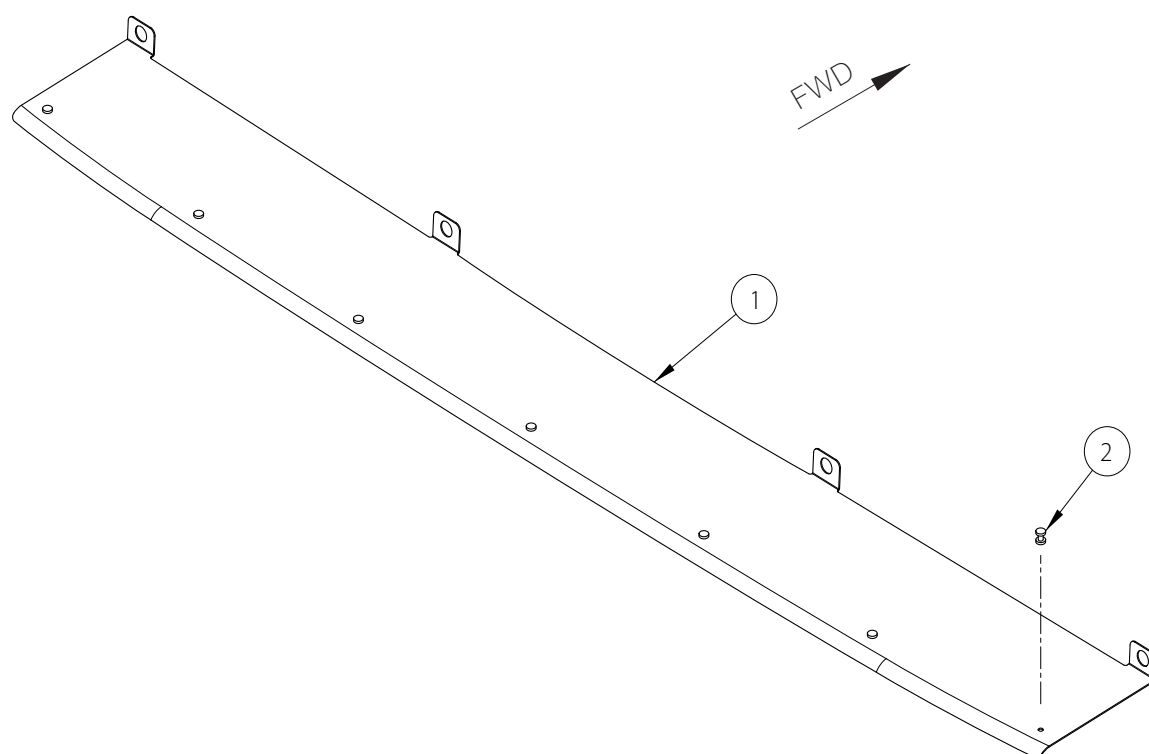

Vajalikud tööriistad / Required Tools / Необходимые инструменты



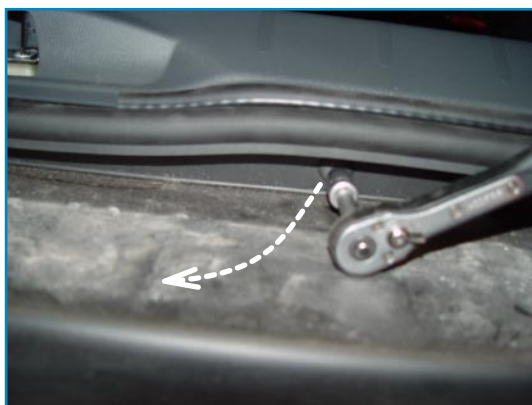

Pilt 1 / Pic. 1 / Рис. 1



Pilt 2 / Pic. 2 / Рис. 2



Pilt 3 / Pic. 3 / Рис. 3



Pilt 4 / Pic. 4 / Рис. 4


Toote andmed / Data of the product / Данные о товаре

- Mõõdud / Measures / Размеры: 35x185x1350 mm.
- Kaal / Weight / Масса: 1,4 kg.
- Paigaldusaeg / Time of mounting / Время установки: 20 min.
- Tähtsad markeeringud / Important labels / Важные этикетки:


1.




2.

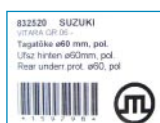

3.

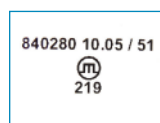

4.

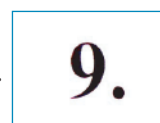

1. Komplekteerija number. / The number of the assembler / Номер комплектовщика
2. Tooteinfo pakendil / Product information on the package / Информация на упаковке
3. Tooteinfo tootel / Product information on the product / Информация на товаре
4. Kvaliteedi kontrolli tähis / Quality control number / Знак контроля качества