



## Montaažiskeem / Mounting Instructions / Монтажная схема

Ford Transit Custom/Tourneo 2013-; Transit 2014-

Art. 807085  
Art. 888601


Montaažikomplekt

Mounting kit

Монтажный комплект




- |                                                    |   |
|----------------------------------------------------|---|
| 1. Kronstein / bracket / кронштейн                 | 1 |
| 2. Kronstein / bracket / кронштейн                 | 1 |
| 3. Latt / bracket / кронштейн                      | 2 |
| 4. Polt / bolt / болт M8x25 mm                     | 4 |
| 5. Polt / bolt / болт M10x30 mm Wülock             | 8 |
| 6. Mutter / nut / гайка M8 DIN 985                 | 8 |
| 7. Mutter / nut / гайка M10 DIN 985                | 8 |
| 8. Seib / washer / шайба 8,4x24x2 mm               | 8 |
| 9. Seib / washer / шайба 10,5x20x2 mm              | 8 |
| 10. Vedruseib / spring washer / пружинная шайба A8 | 4 |
| 11. U-polt / U-bolt / U-болт                       | 2 |
| 12. U-polt / U-bolt / U-болт                       | 2 |

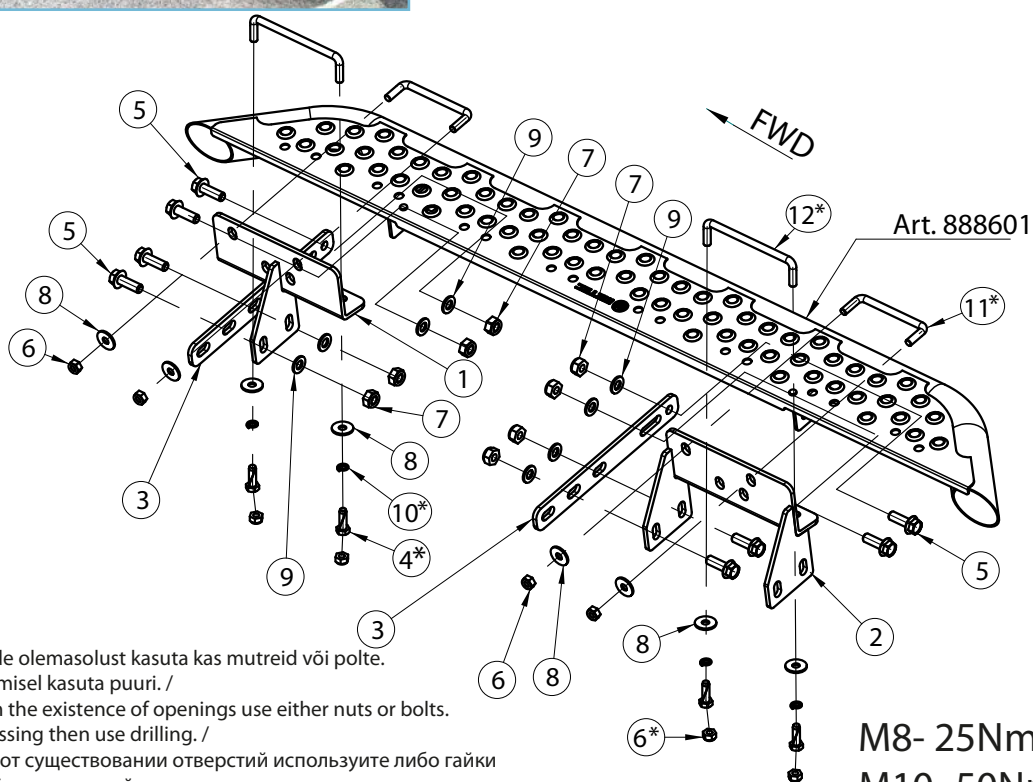

\* - Sõltuvalt avade olemasolust kasuta kas mutreid või polte.  
Avade puudumisel kasuta puuri. /  
Depending on the existence of openings use either nuts or bolts.  
If holes are missing then use drilling. /  
Зависимости от существования отверстий используйте либо гайки  
либо болты. Если отверстий не хватает, просверлите отверстия сами.

M8- 25Nm  
M10- 50Nm

## Vajalikud tööriistad / Required Tools / Необходимые инструменты

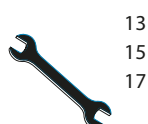

13  
15  
17



13  
17



Ø10



# Montaažiskeem / Mounting Instructions / Монтажная схема

Ford Transit Custom/Tourneo 2013-; Transit 2014-


Art. 807085  
Art. 888601

Montaažikomplekt


Mounting kit

Монтажный комплект


## Paigaldamine / Instructions / Инструкция установки

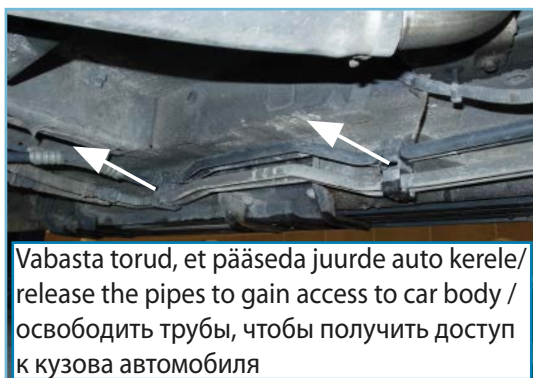


Pilt 1 / Pic. 1 / Рис. 1

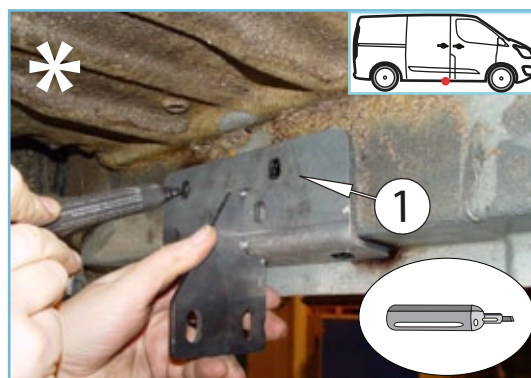


Pilt 2 / Pic. 2 / Рис. 2

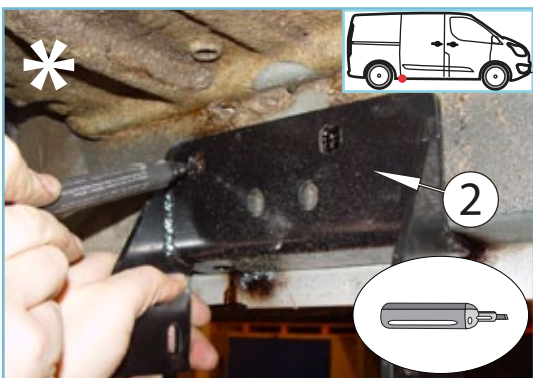


Pilt 3 / Pic. 3 / Рис. 3

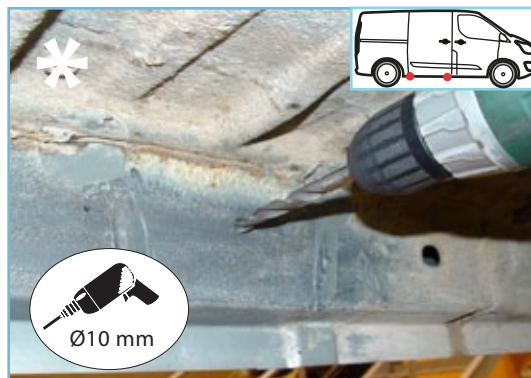

Pilt 4 / Pic. 4 / Рис. 4

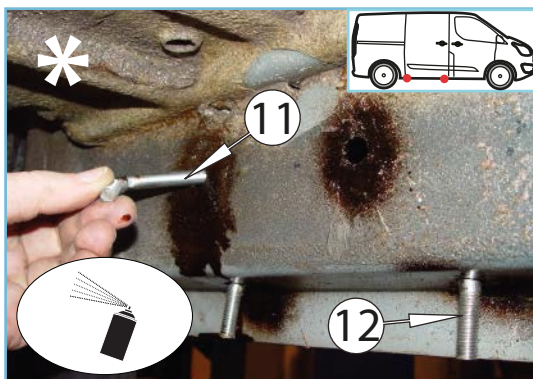

Pilt 5 / Pic. 5 / Рис. 5

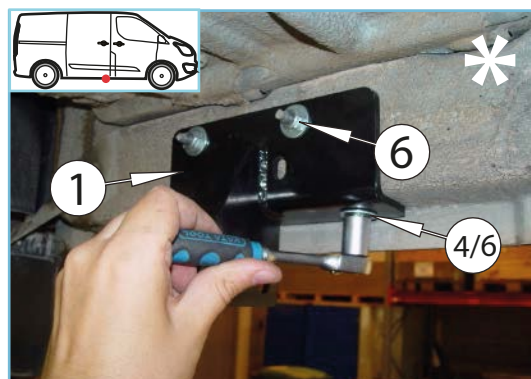

Pilt 6 / Pic. 6 / Рис. 6

# Montaažiskeem / Mounting Instructions / Монтажная схема

Ford Transit Custom/Tourneo 2013-; Transit 2014-


Art. 807085  
Art. 888601

Montaažikomplekt


Mounting kit

Монтажный комплект


## Paigaldamine / Instructions / Инструкция установки

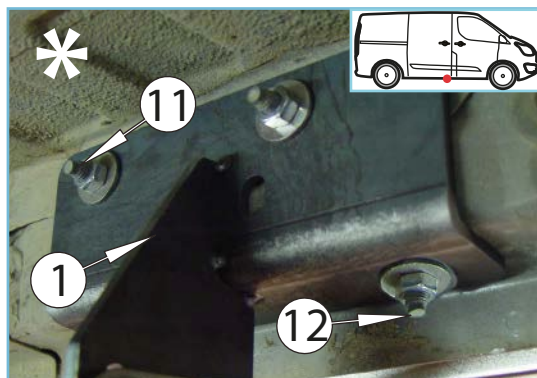


Pilt 7 / Pic. 7 / Рис. 7

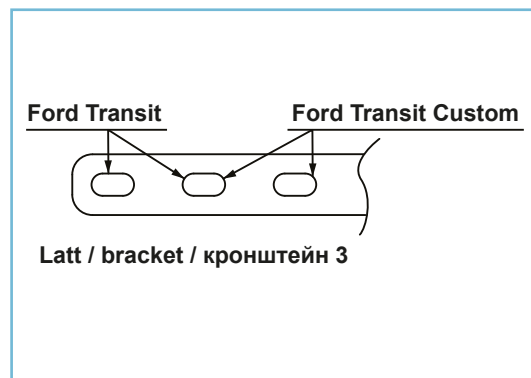

Pilt 8 / Pic. 8 / Рис. 8

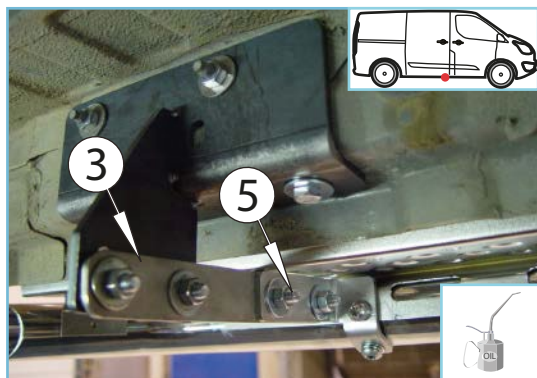

Pilt 9 / Pic. 9 / Рис. 9

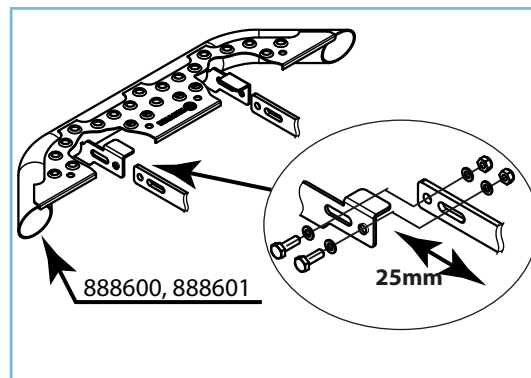

Pilt 10 / Pic. 10 / Рис. 10

## Toote andmed / Data of the product / Данные о товаре

- Mõõdud / Measures / Размеры: 105x150x375 mm.
- Kaal / Weight / Масса: 3,5 kg.
- Paigaldusaeg / Time of mounting / Время установки: 30 min
- Tähtsad markeeringud / Important labels / Важные этикетки:



1. Komplekteerija number. / The number of the assembler / Номер комплектовщика
2. Tooteinfo pakendil / Product information on the package / Информация на упаковке
3. Tooteinfo tootel / Product information on the product / Информация на товаре
4. Kvaliteedi kontrolli tähis / Quality control number / Знак контроля качества