

FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE



Année: 2012+ ➔

Références: MTC293-B Double Cab (DC)
MTC292-B Super Cab (SC)



Poids: 31 / 36 kg



Temps de montage: 2 heures








FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS



NOTICE DE MONTAGE

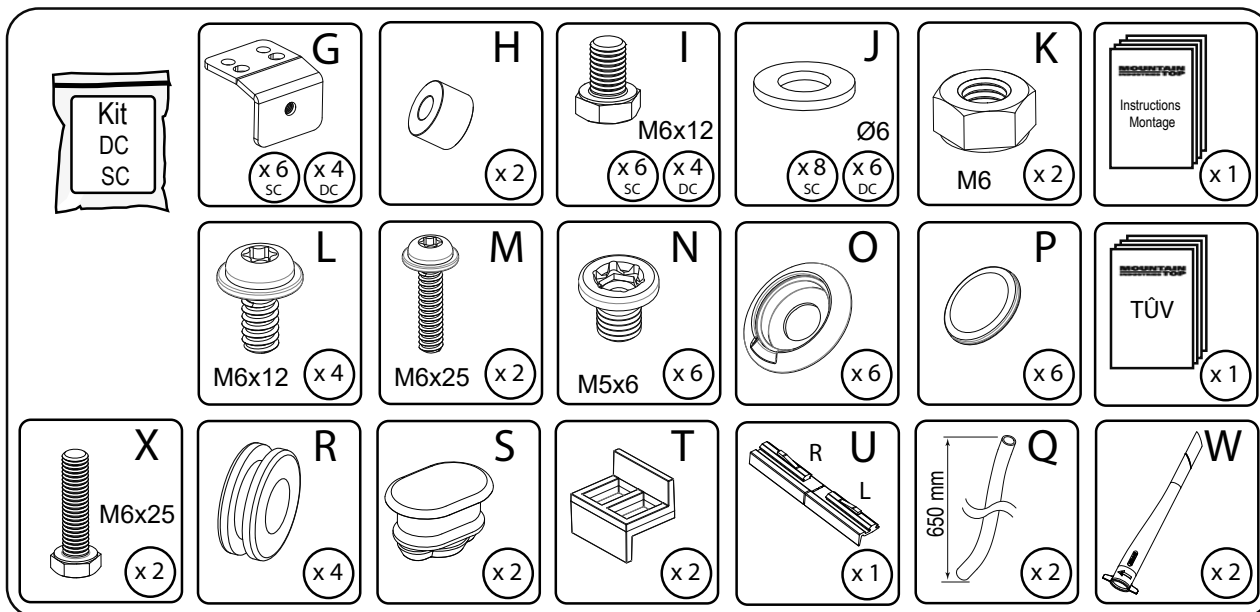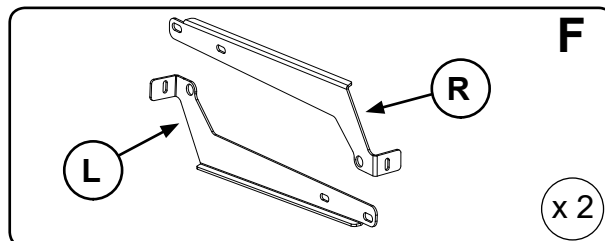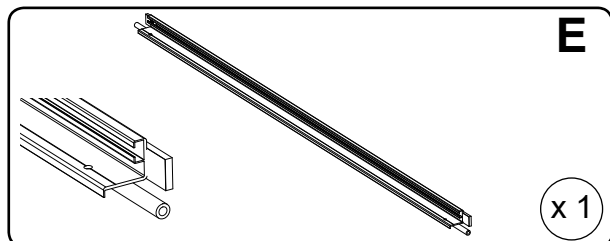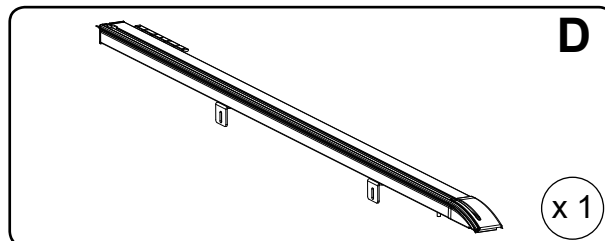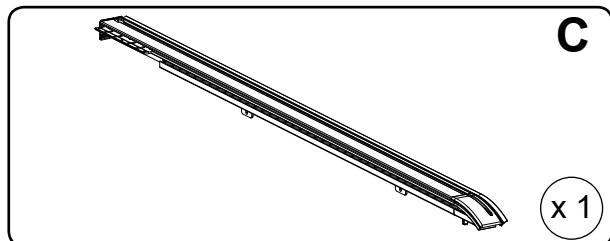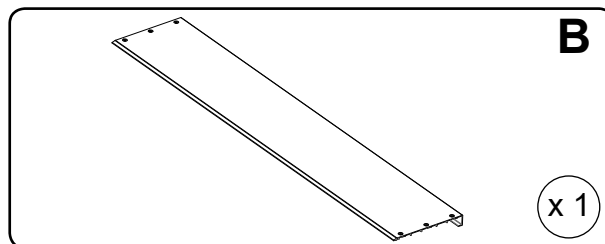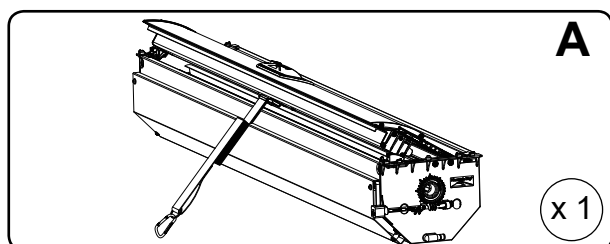














FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS



NOTICE DE MONTAGE

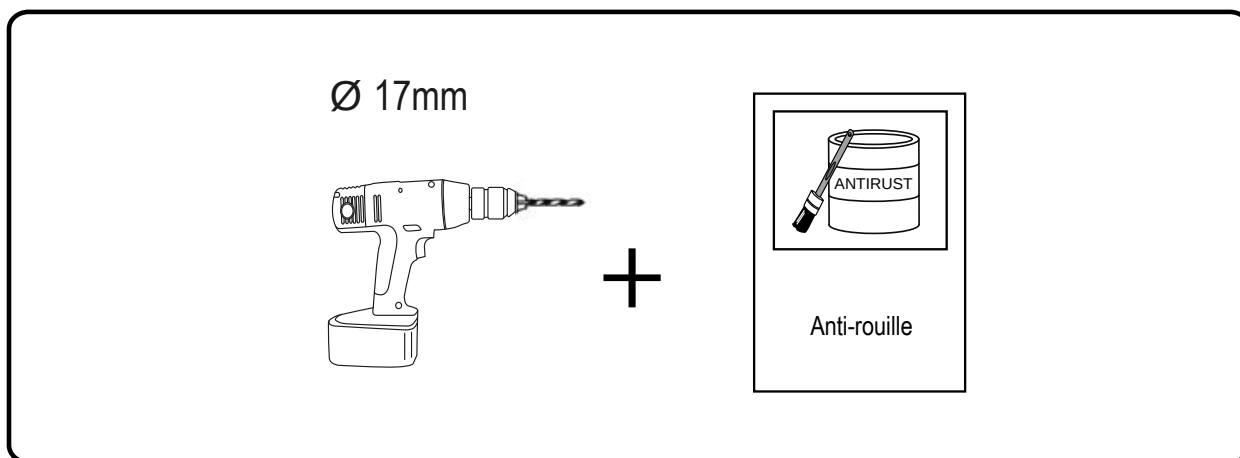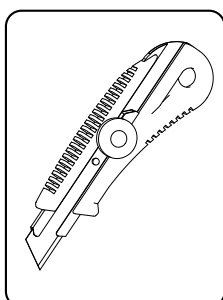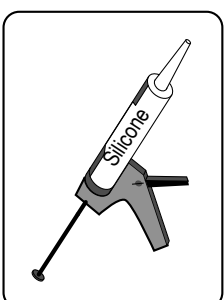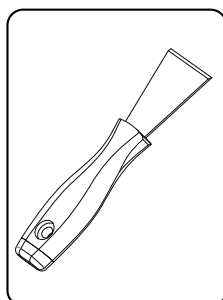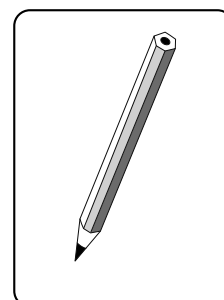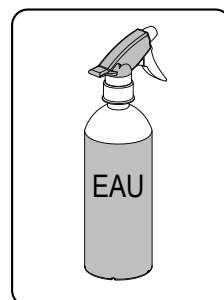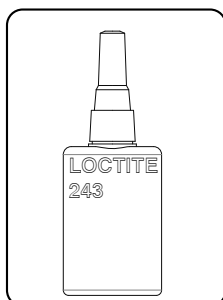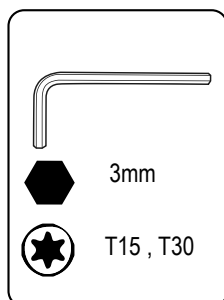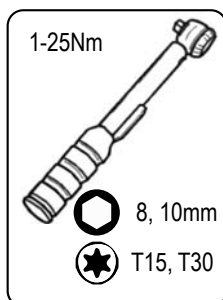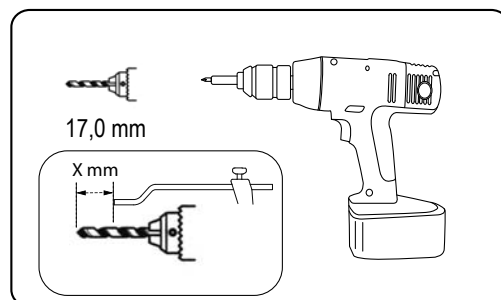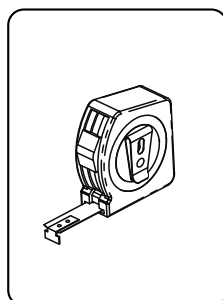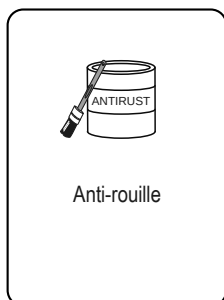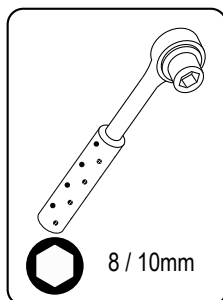


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS



NOTICE DE MONTAGE

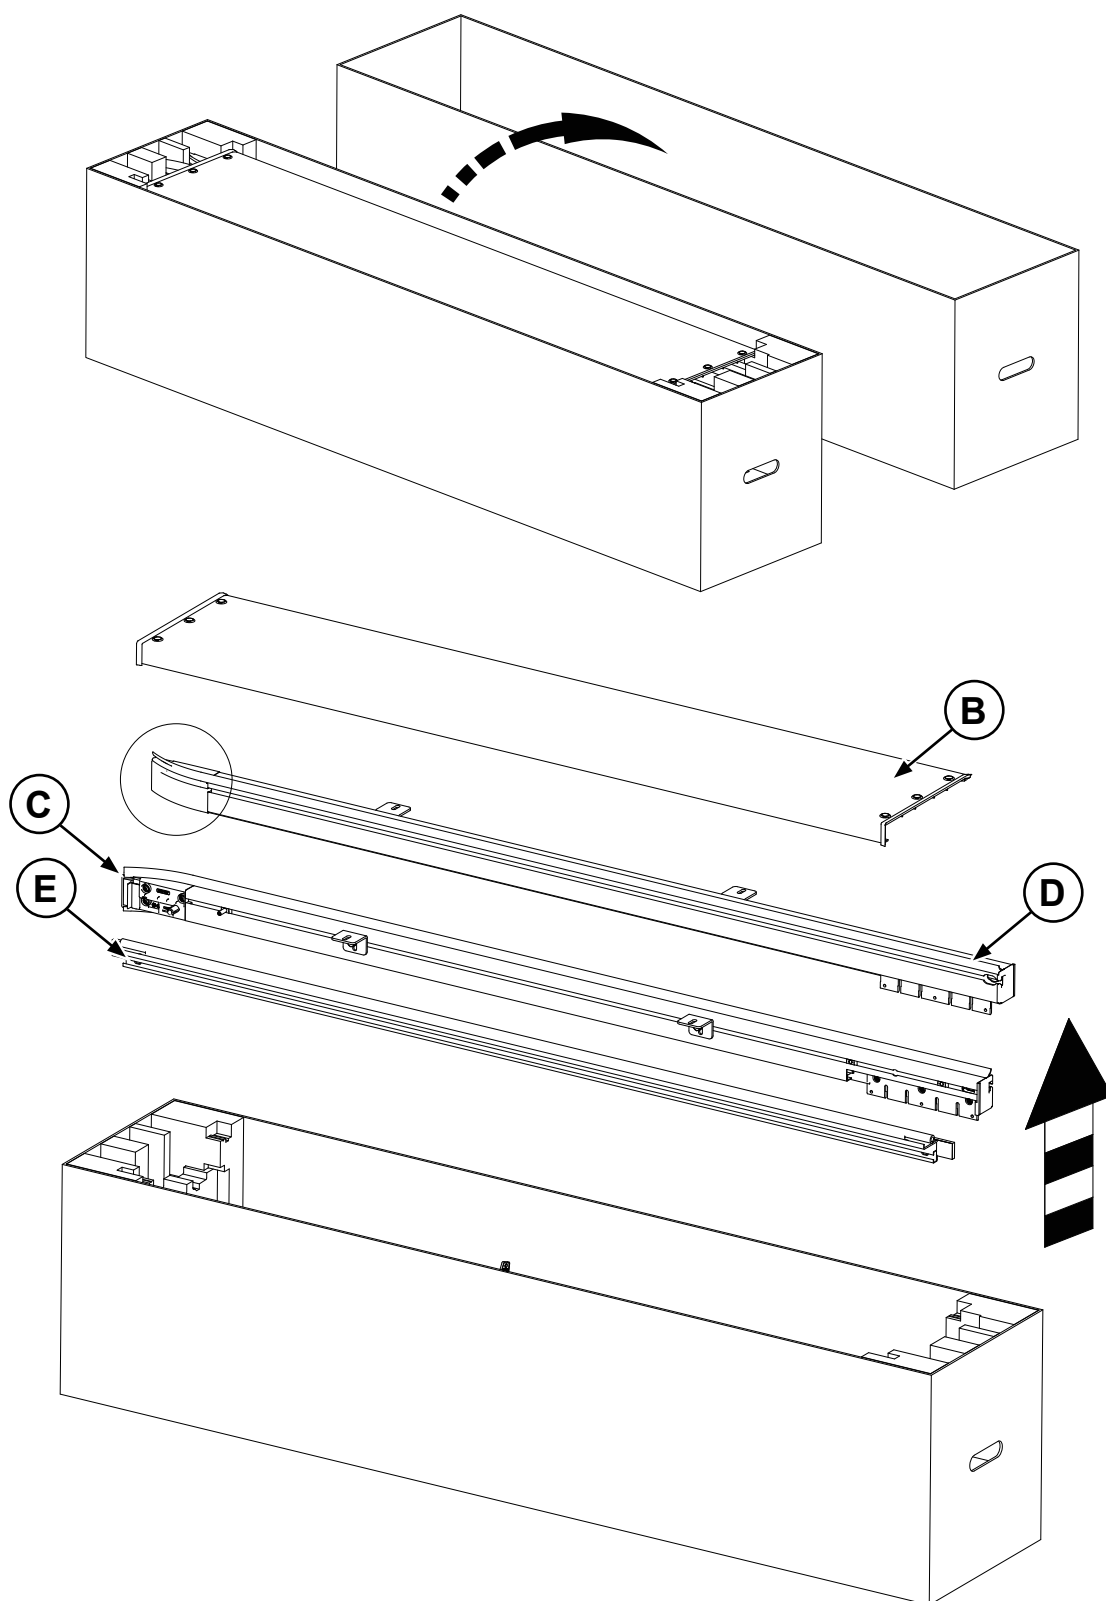


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS



NOTICE DE MONTAGE

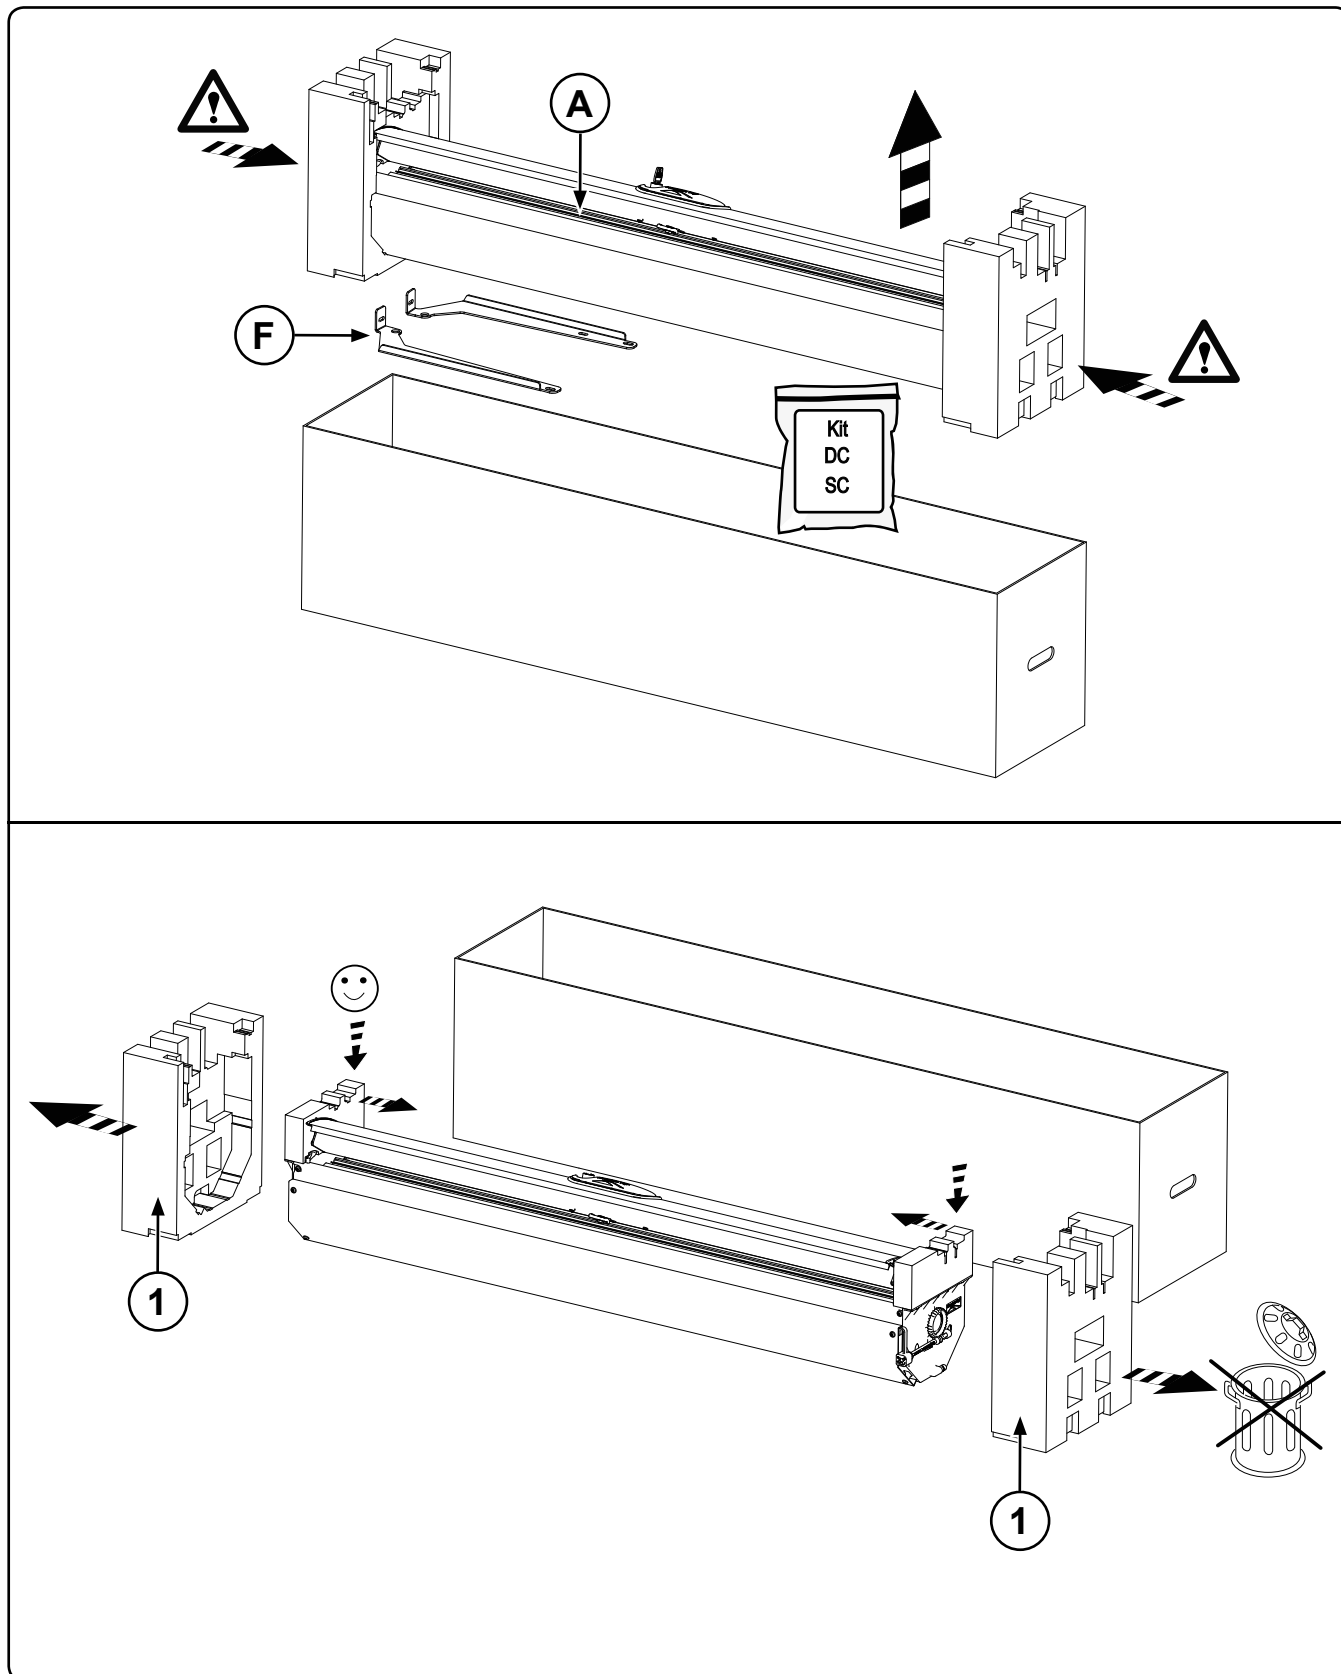




FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS



NOTICE DE MONTAGE

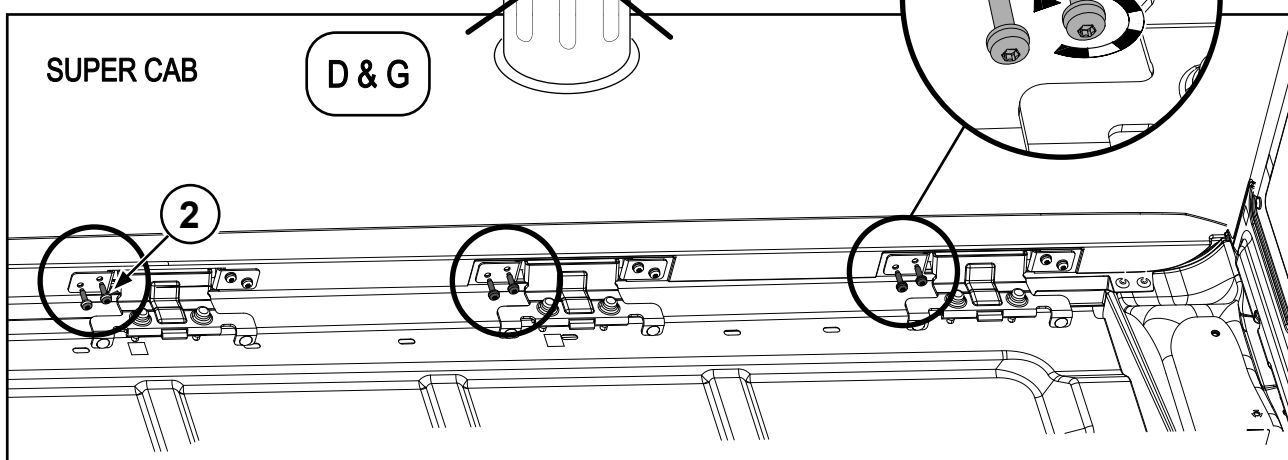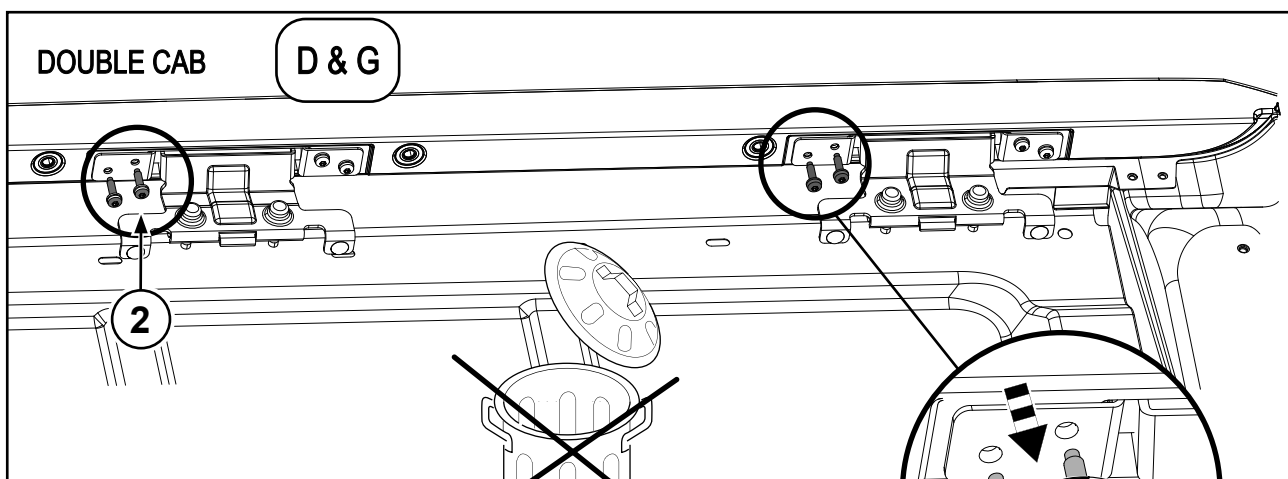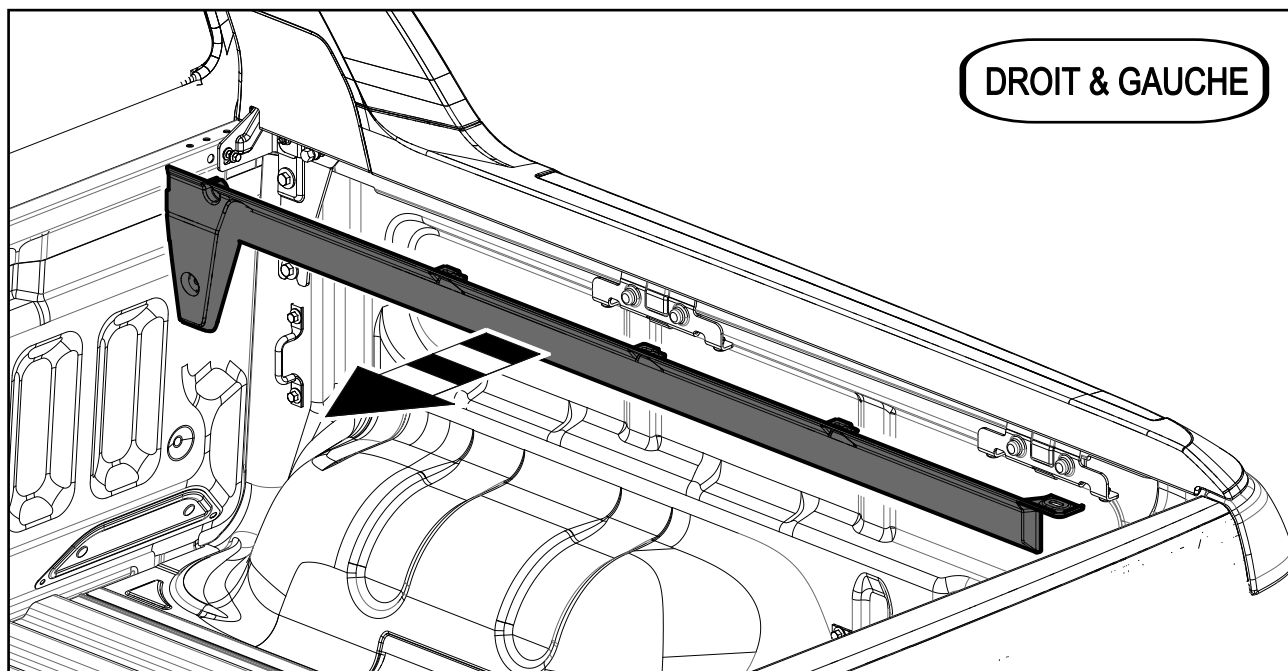


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE


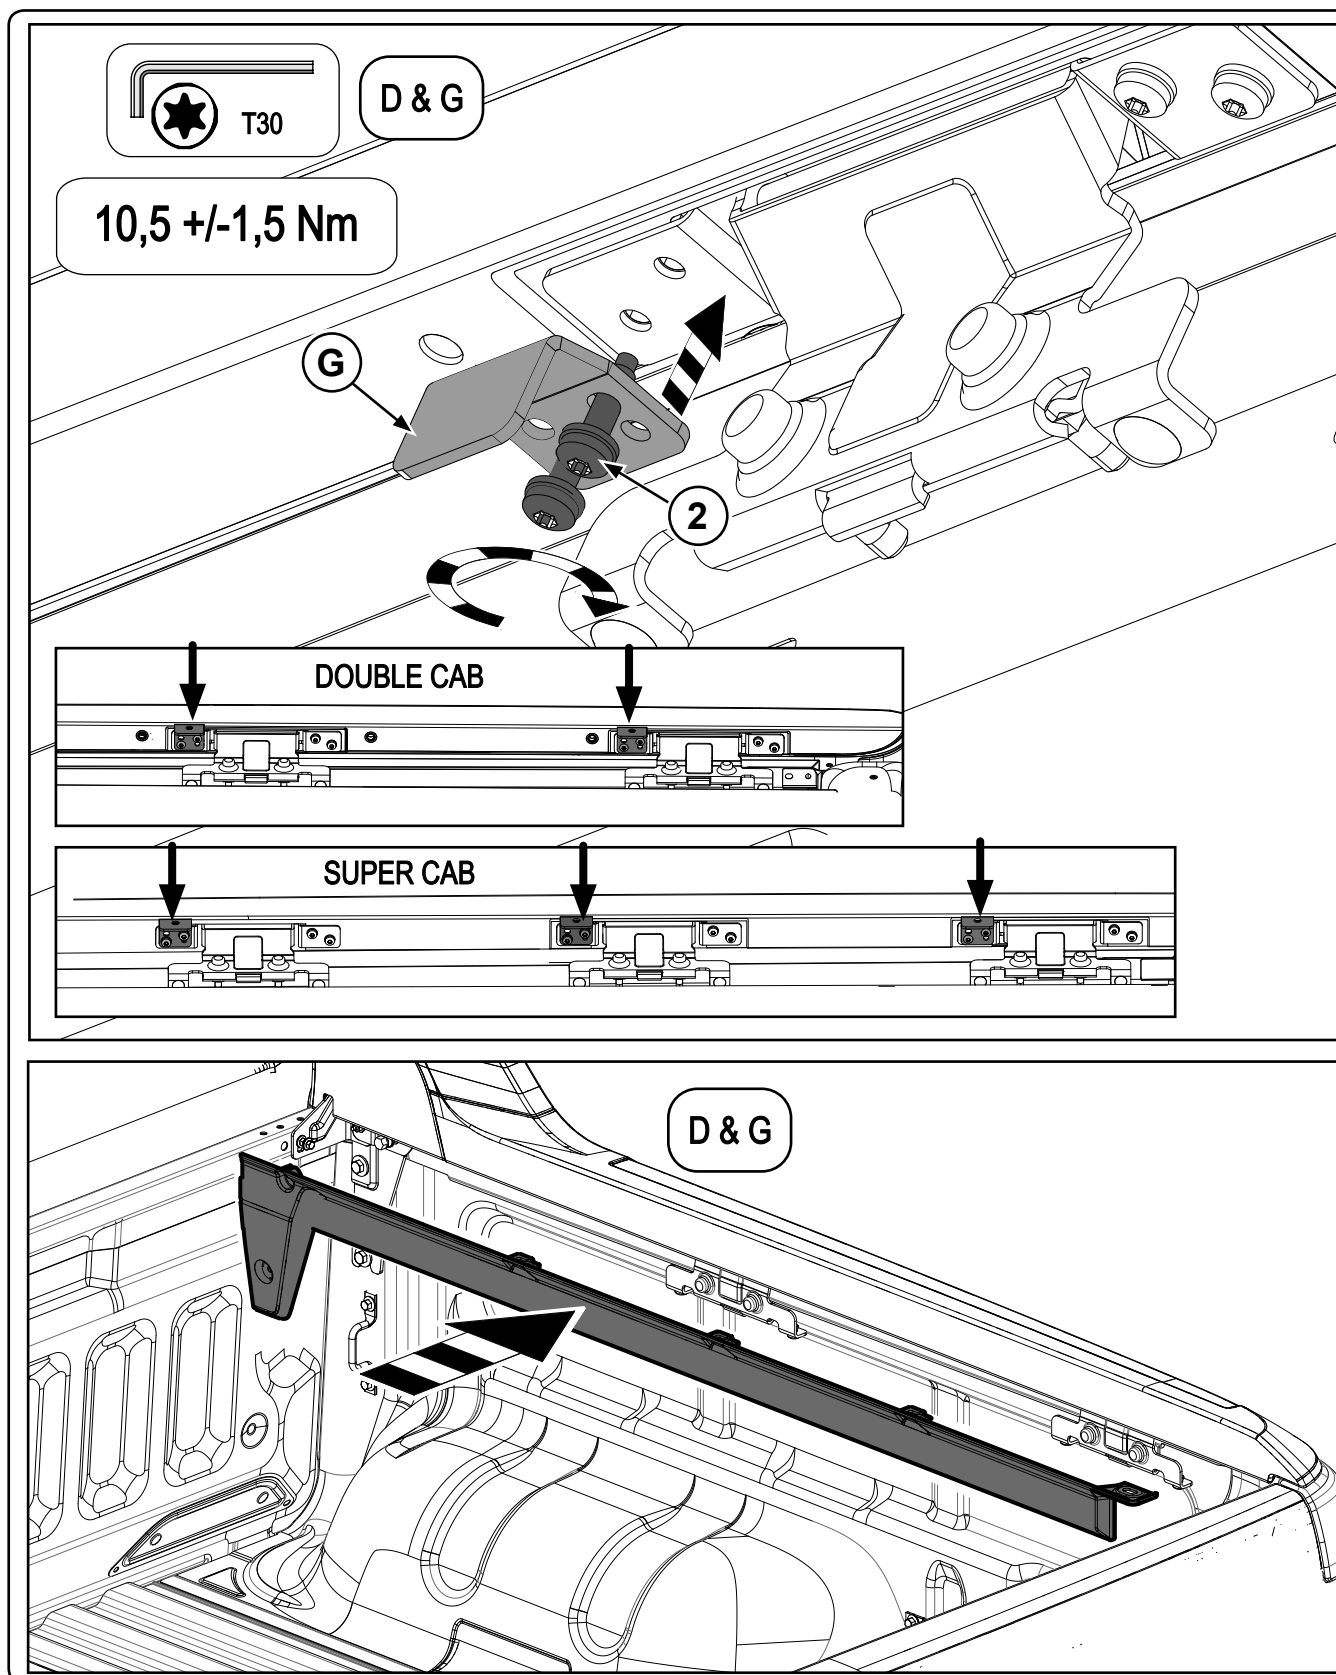


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE



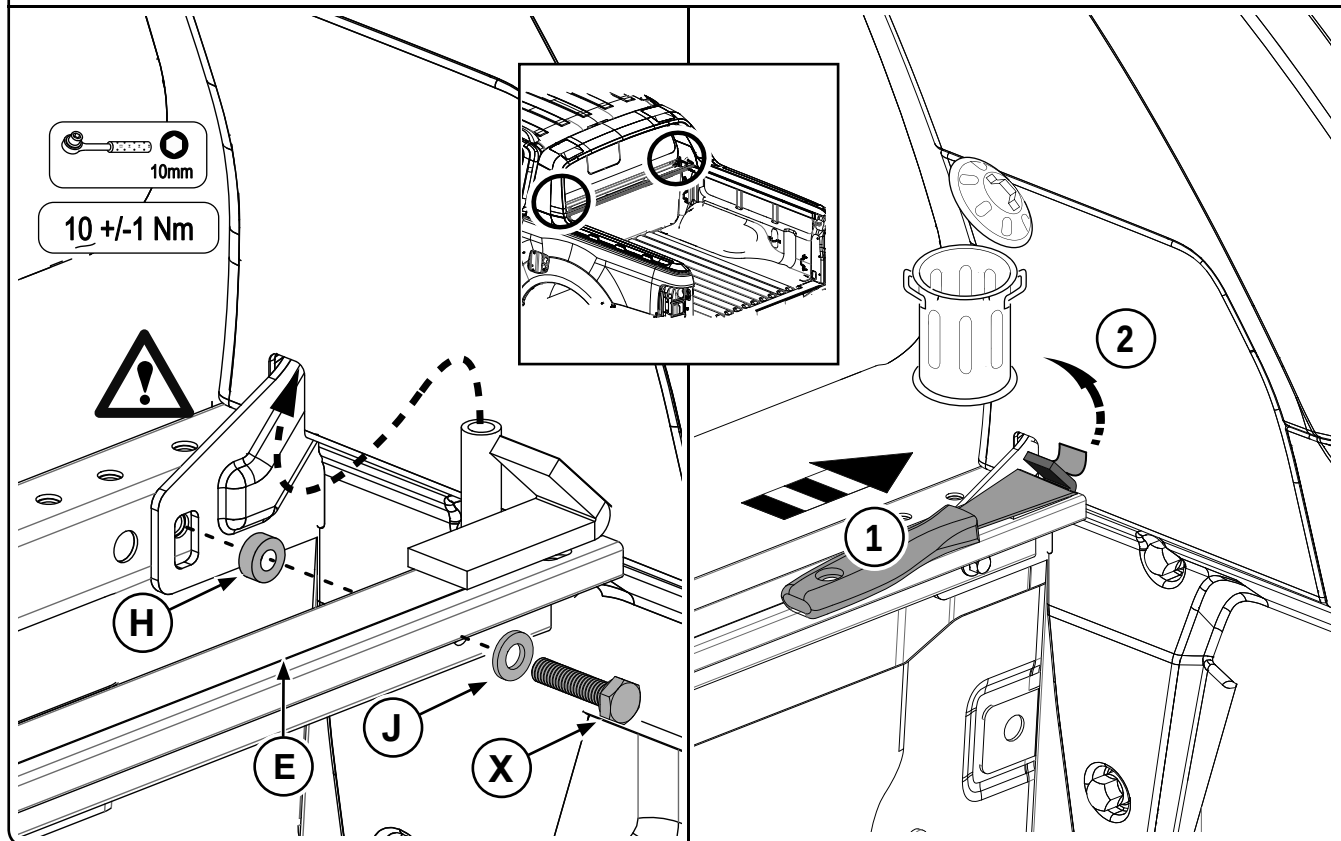
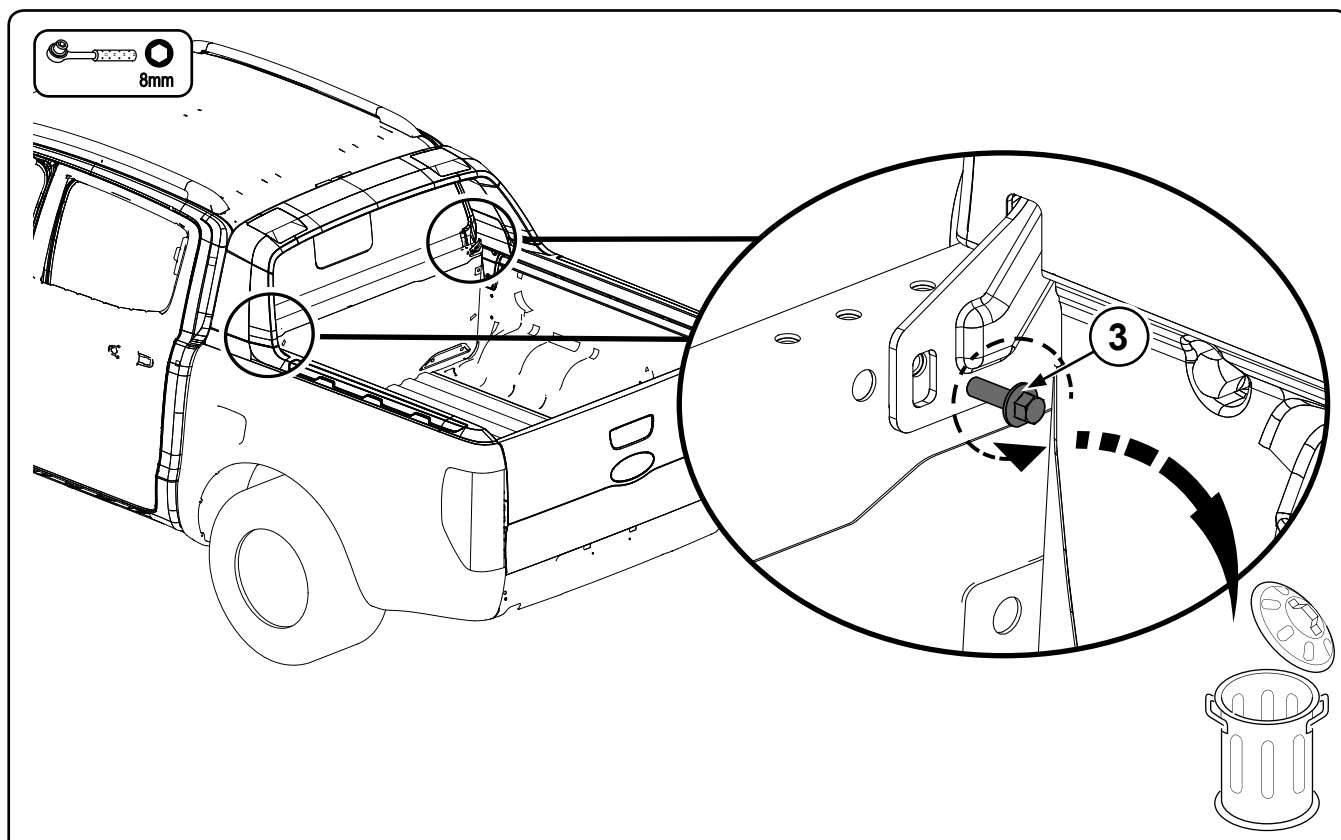


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE

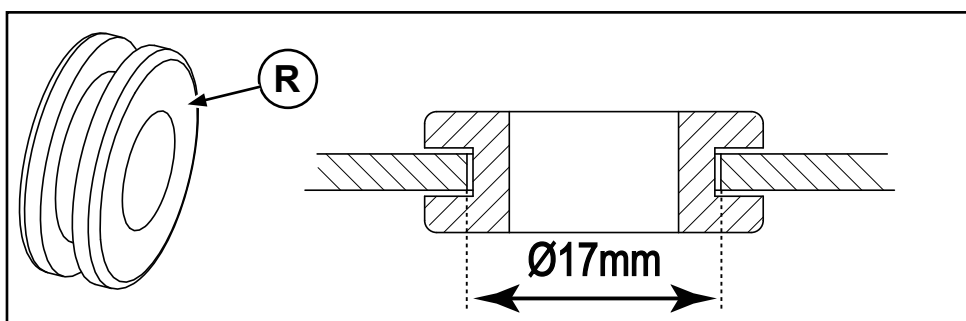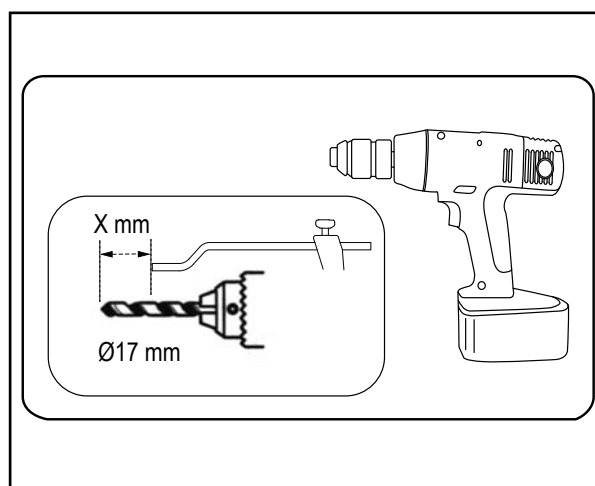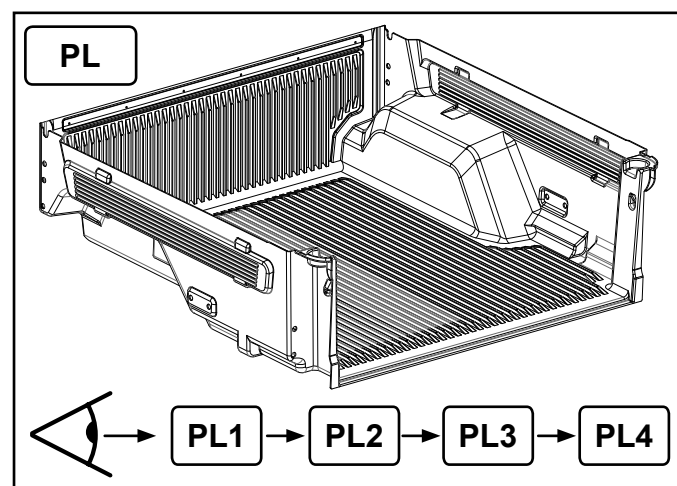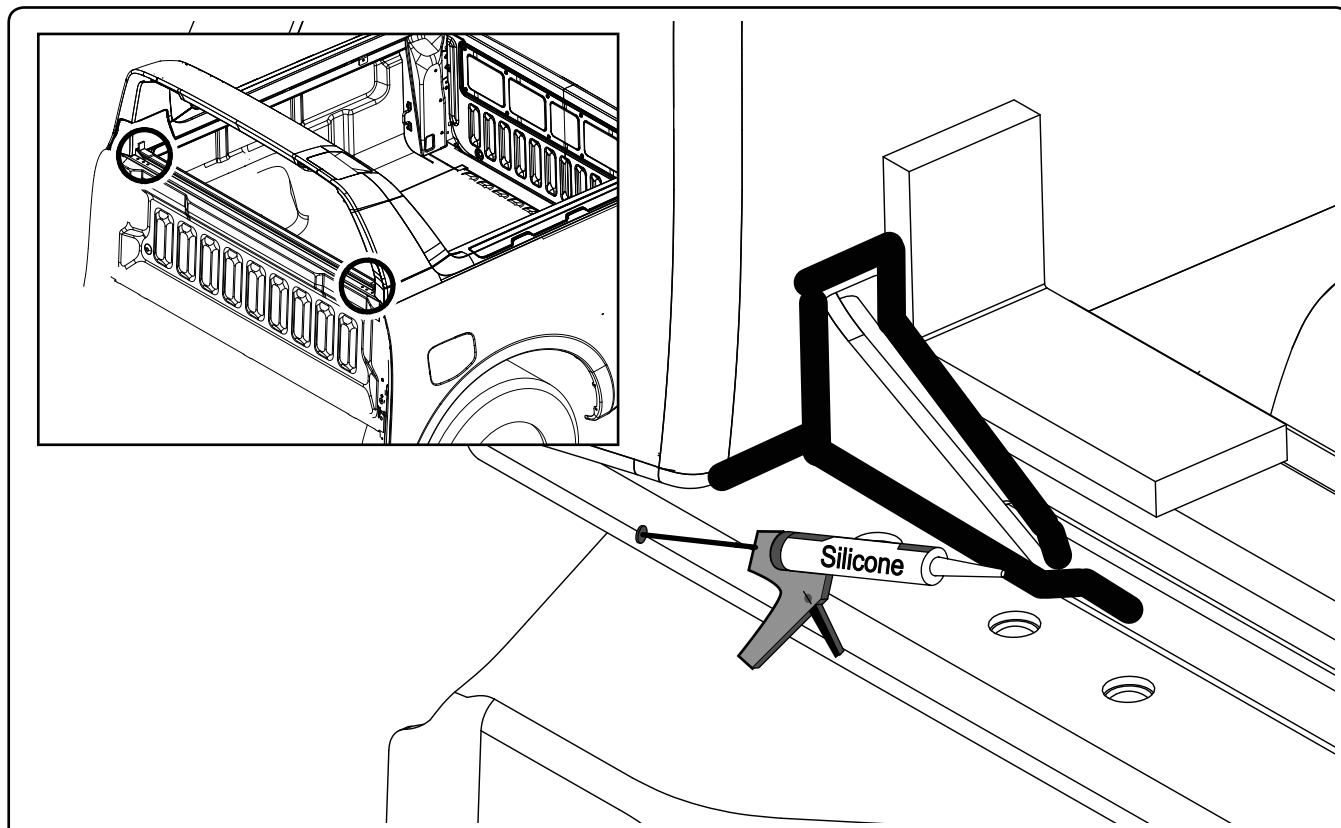


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE

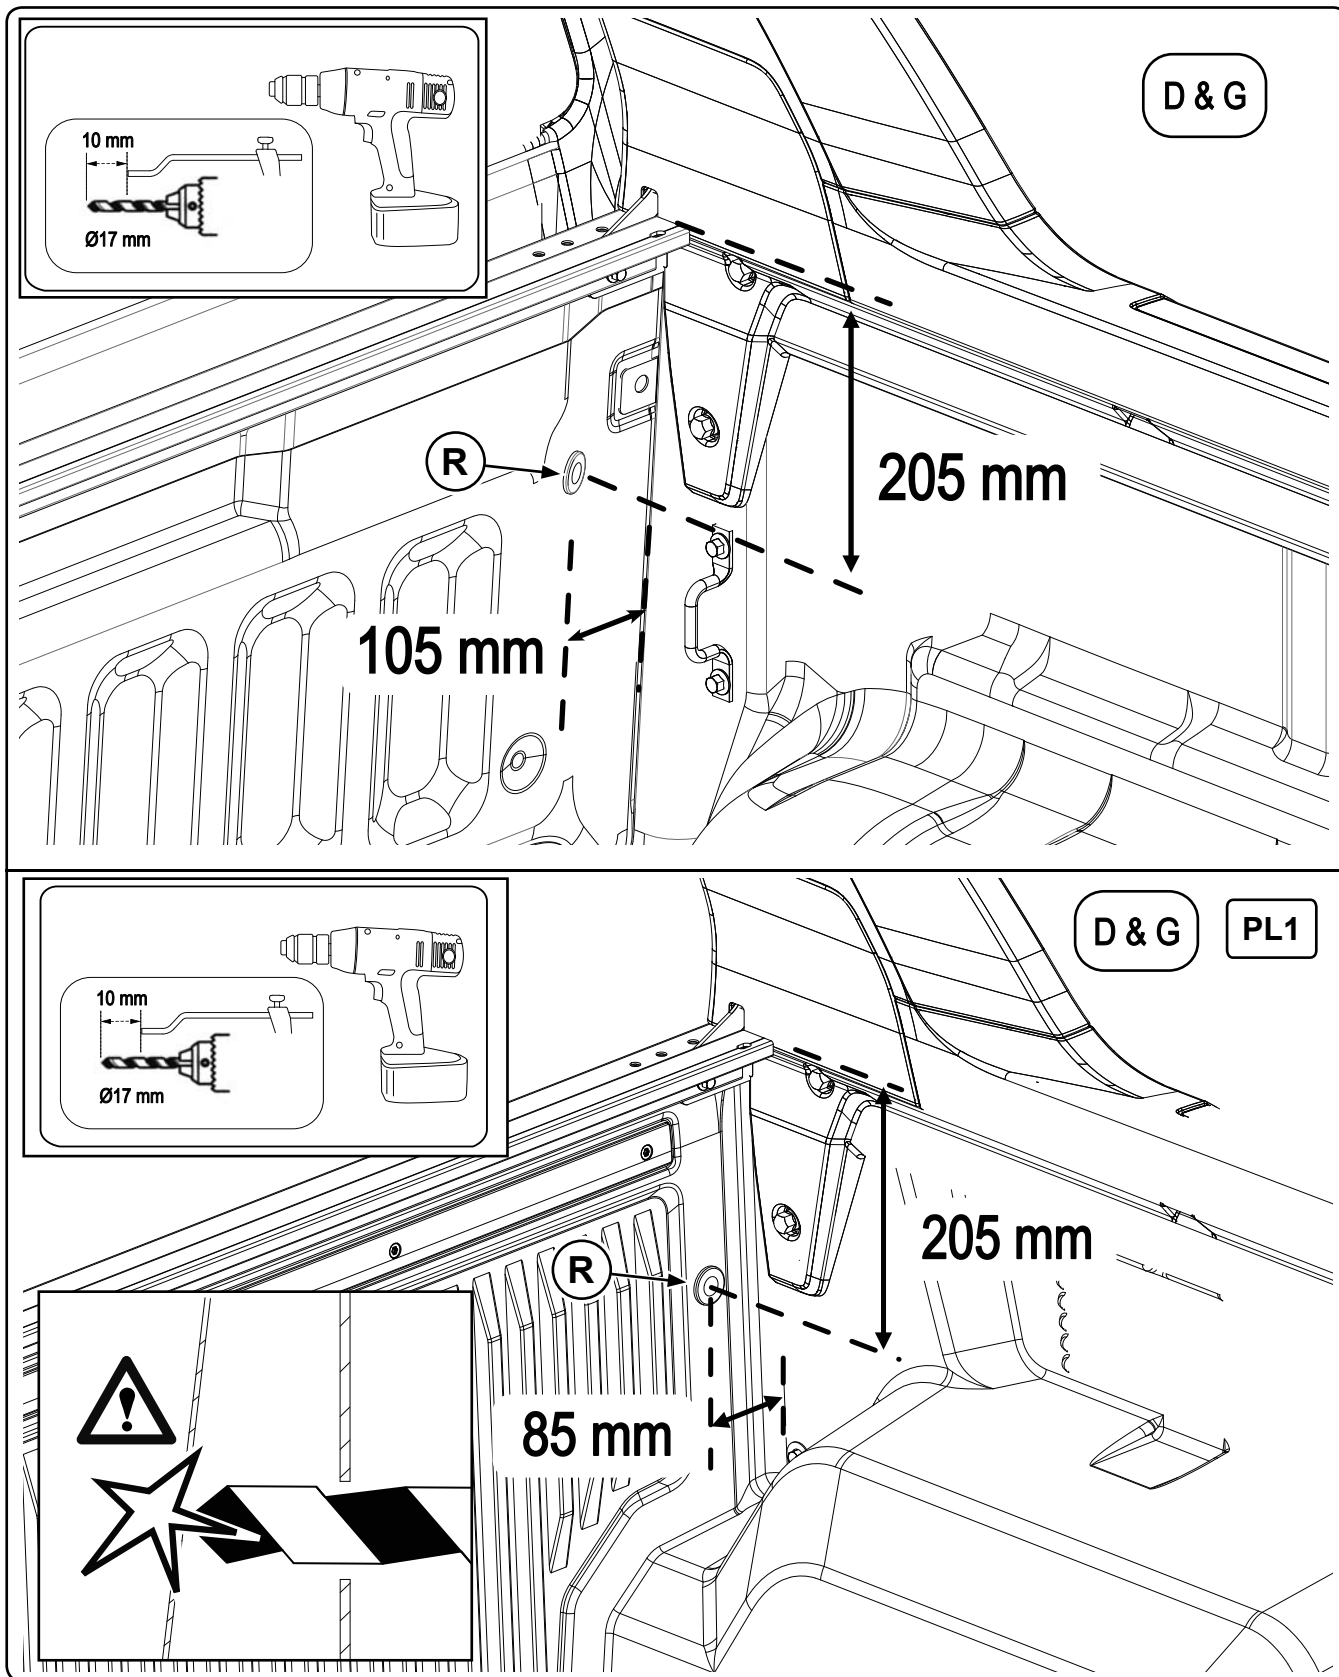


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS



NOTICE DE MONTAGE


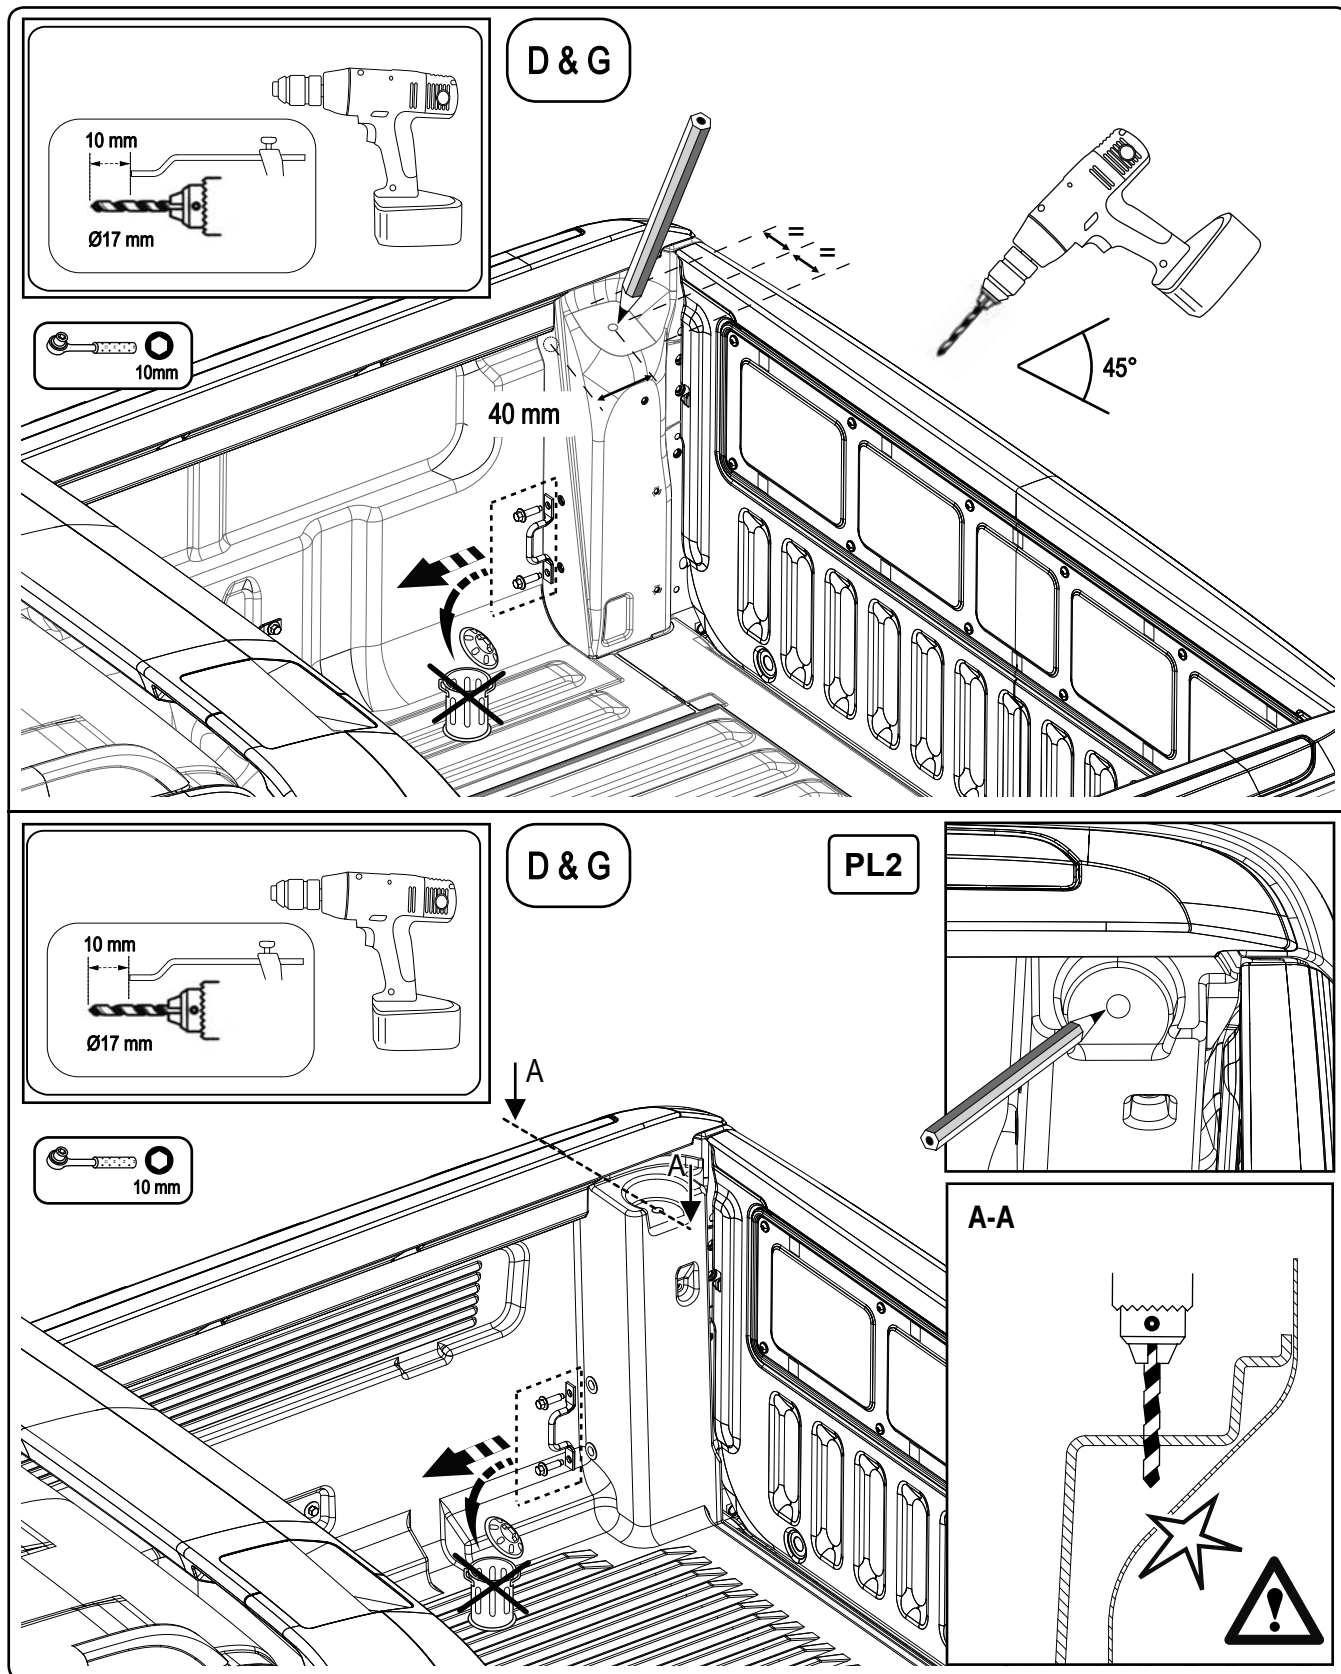


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE

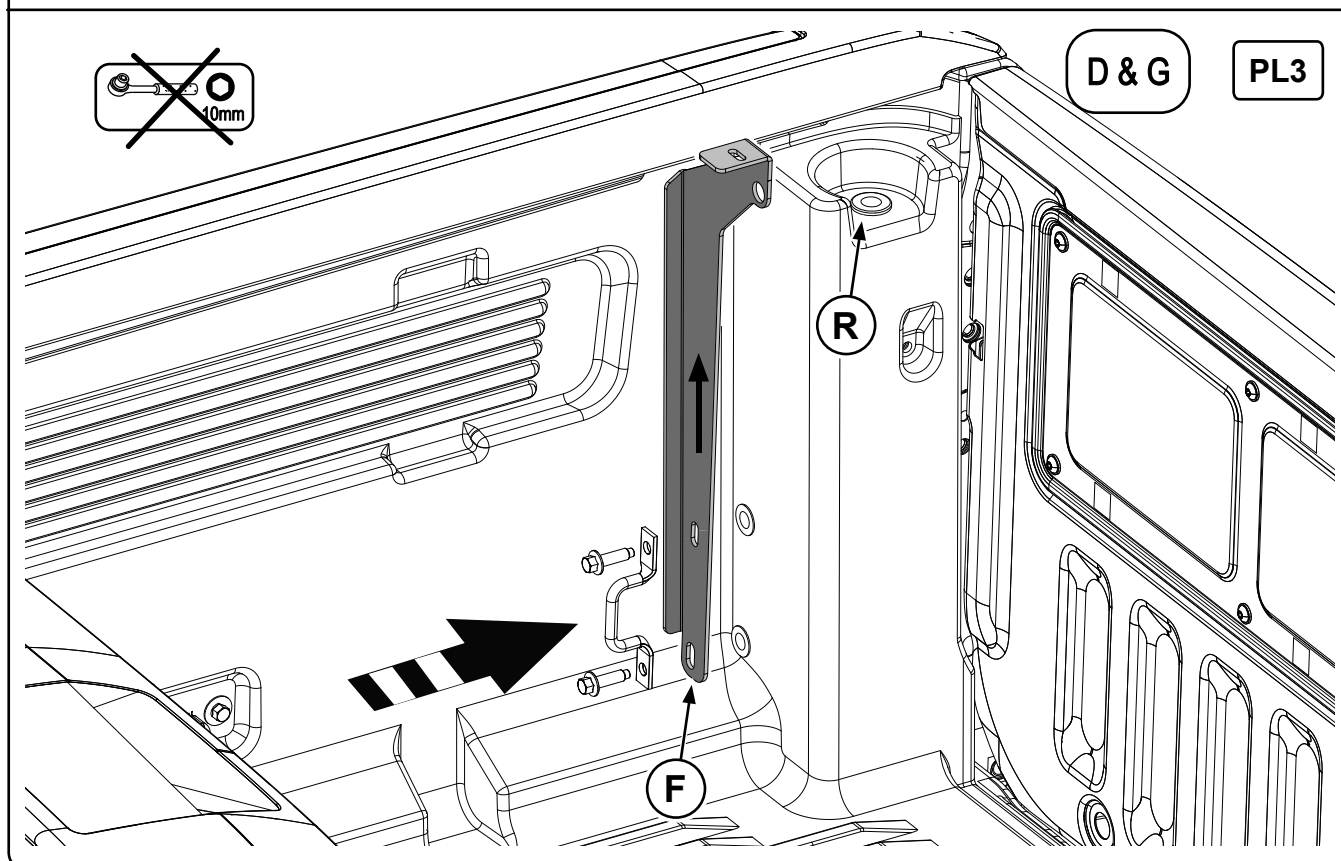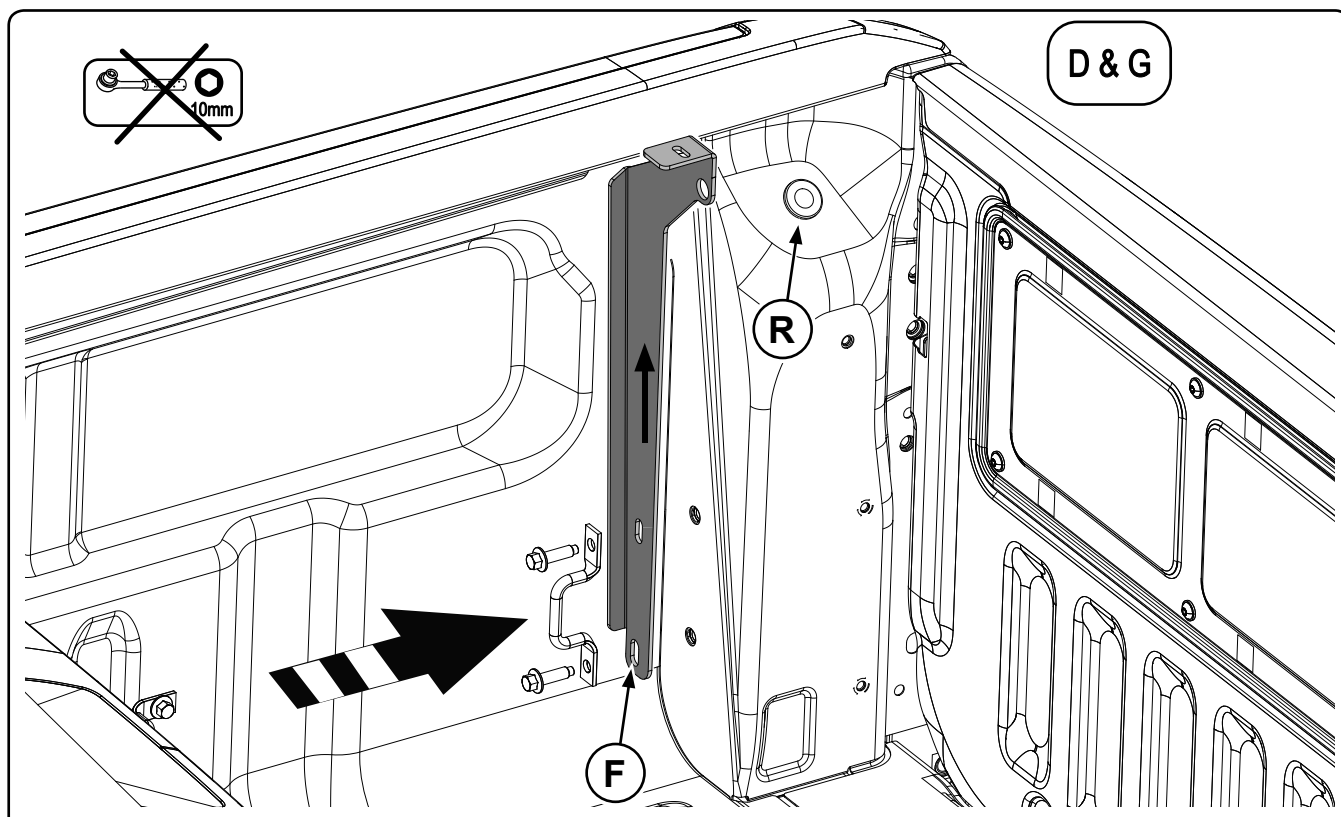


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE

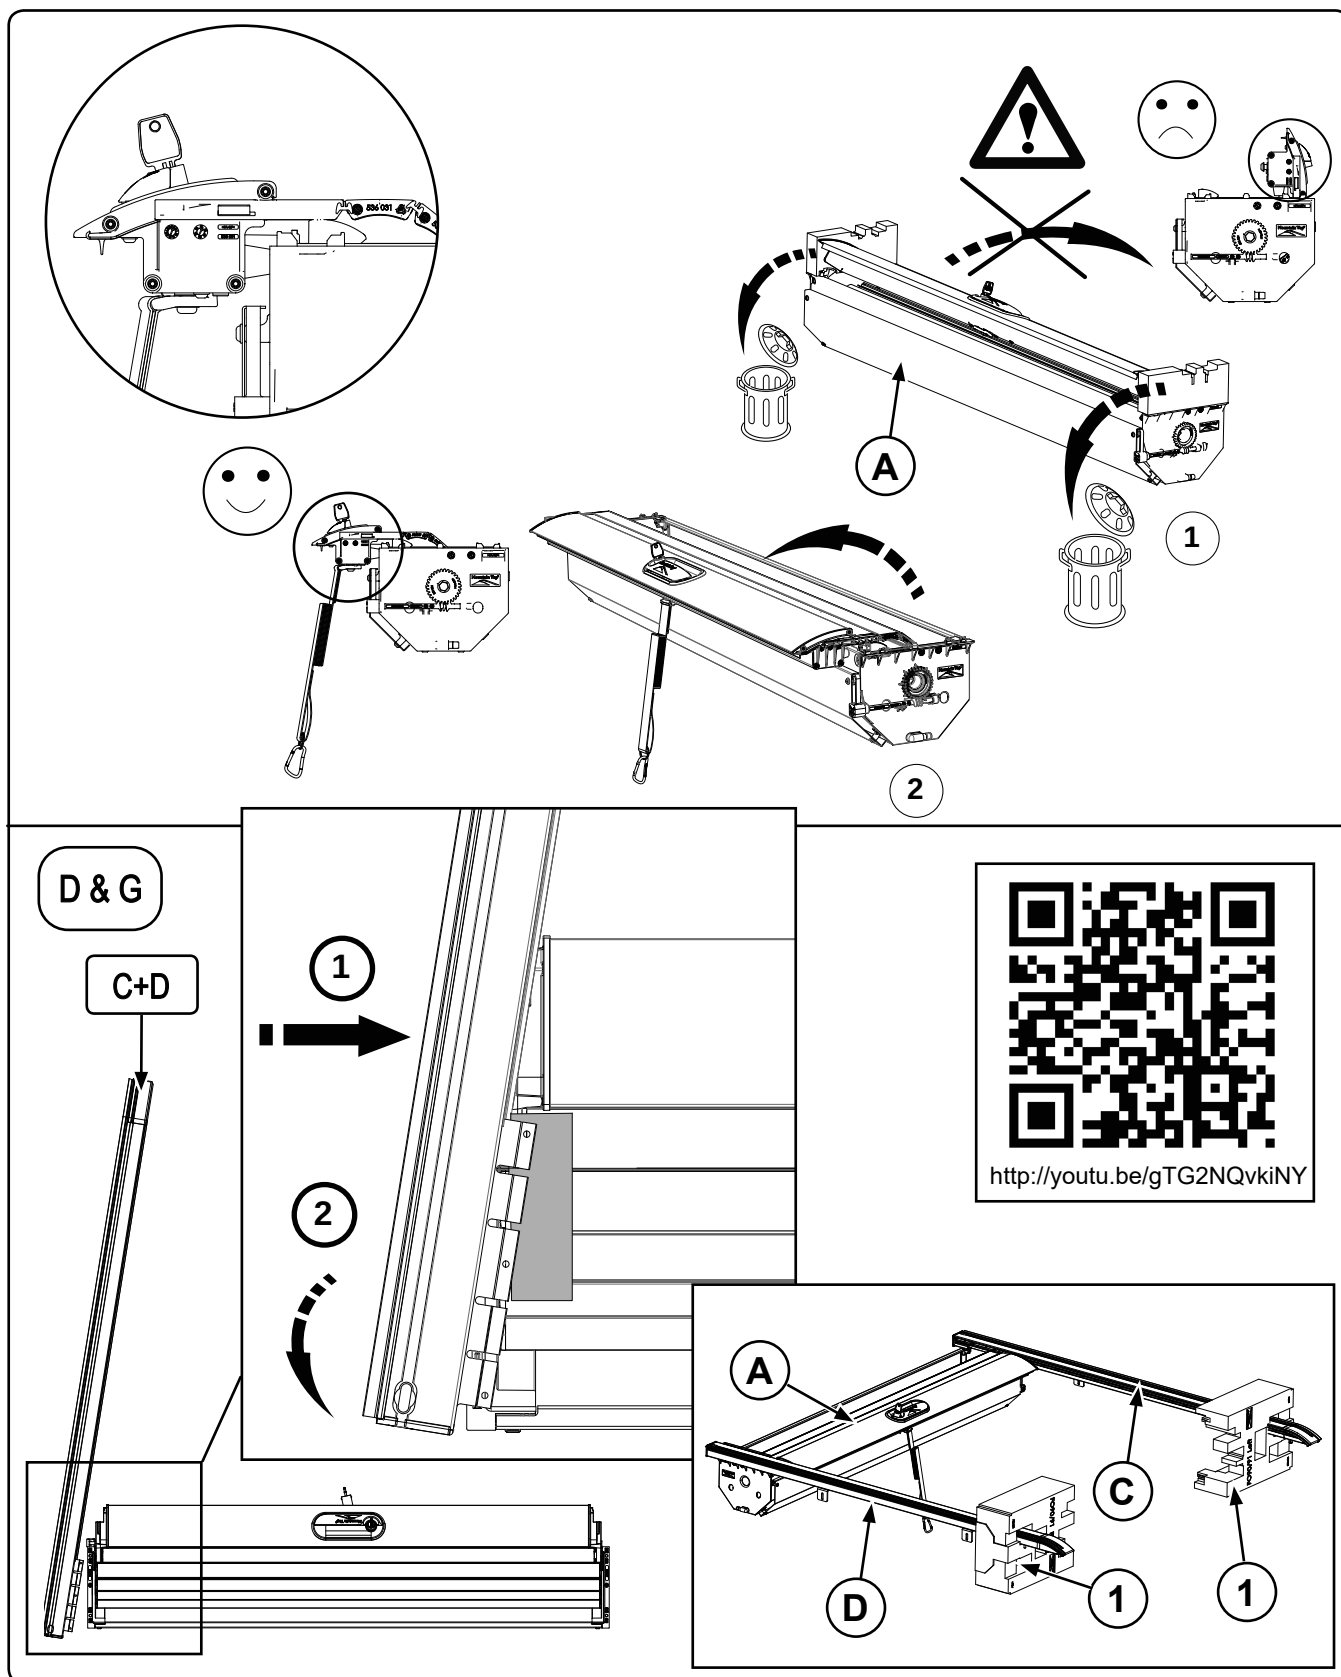


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE

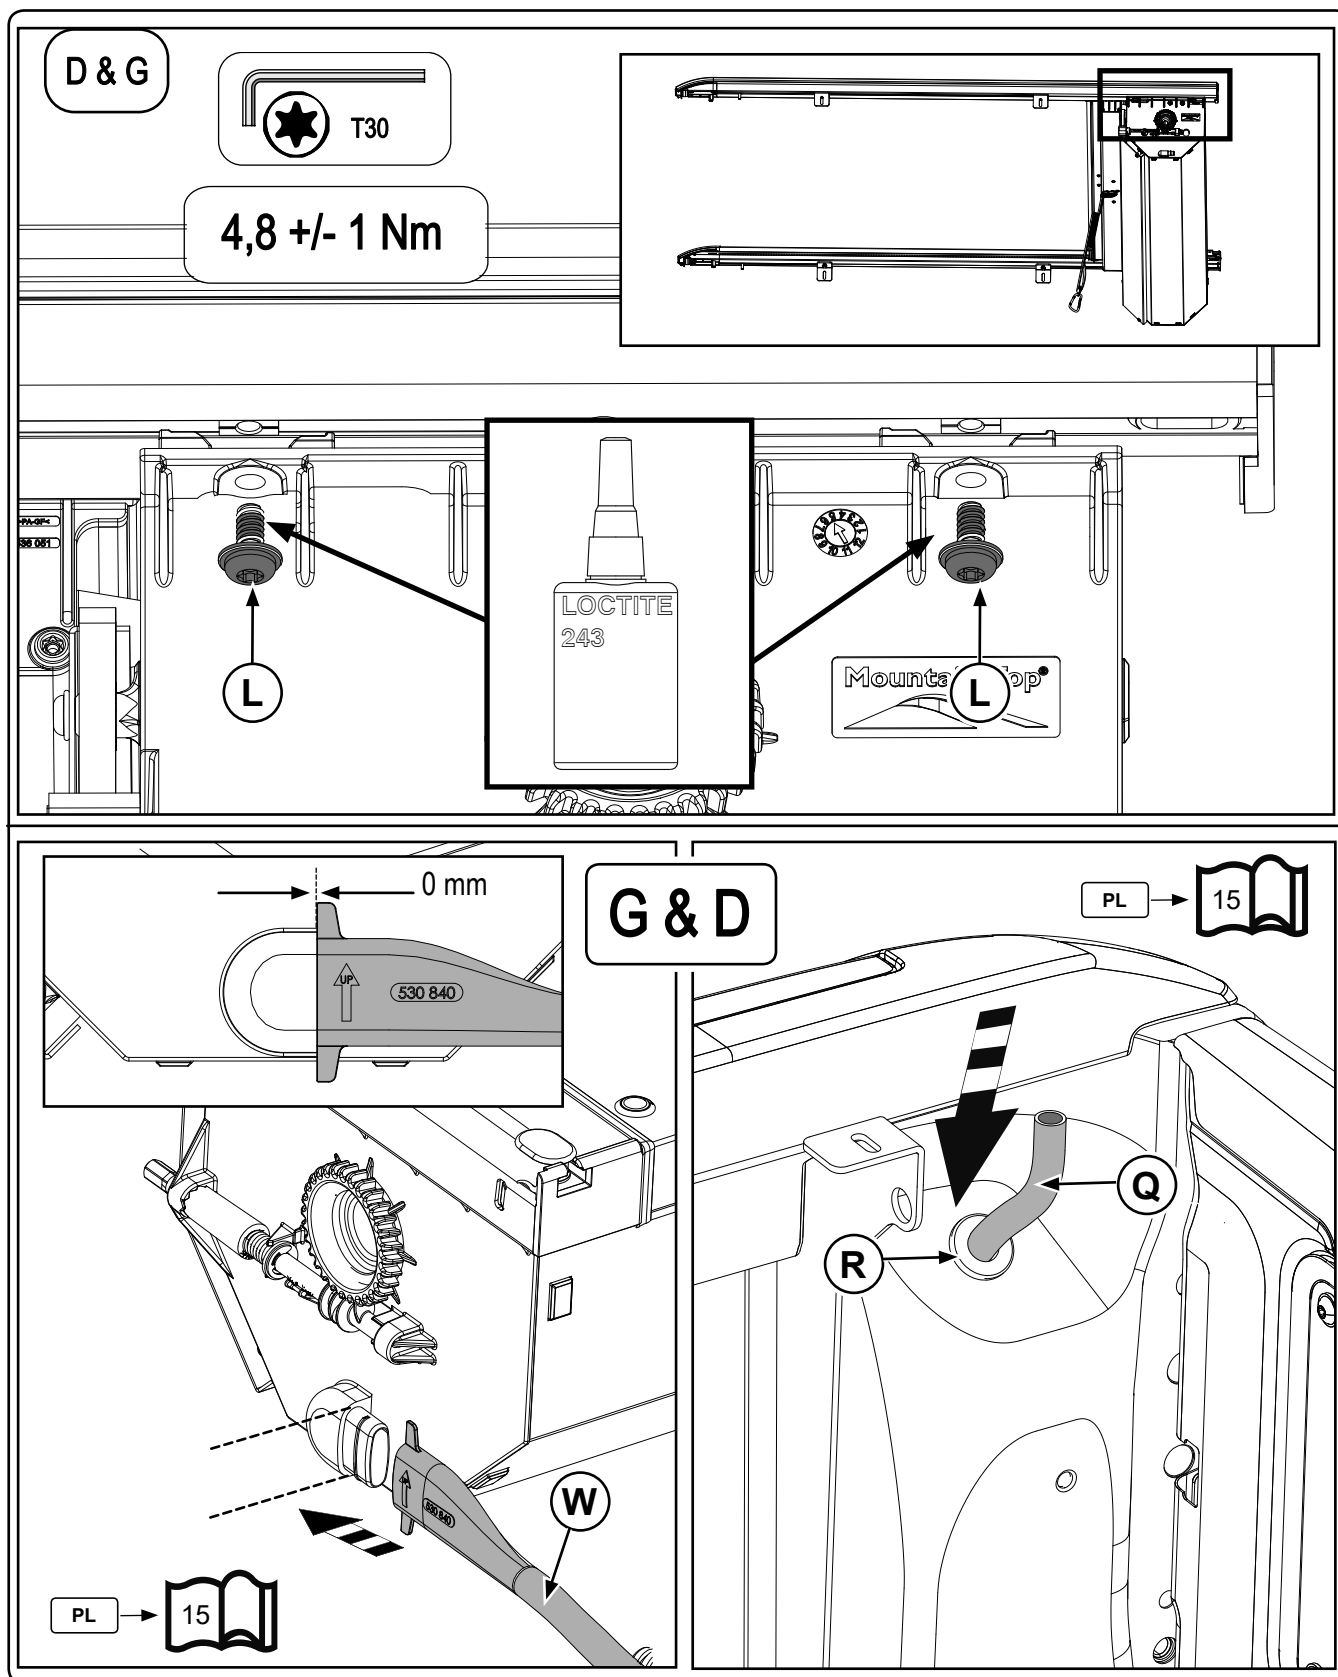

FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB



Mountain Top®
INDUSTRIES APS



NOTICE DE MONTAGE




D & G

PL4

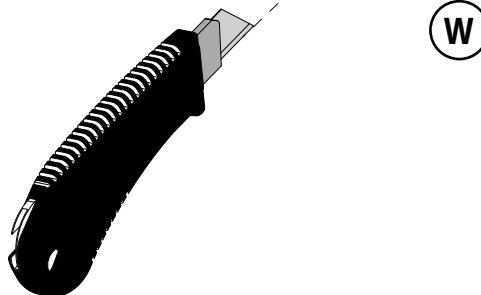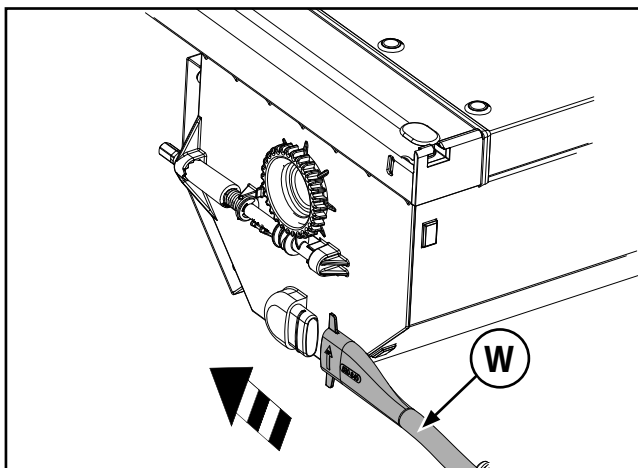

D & G

PL4

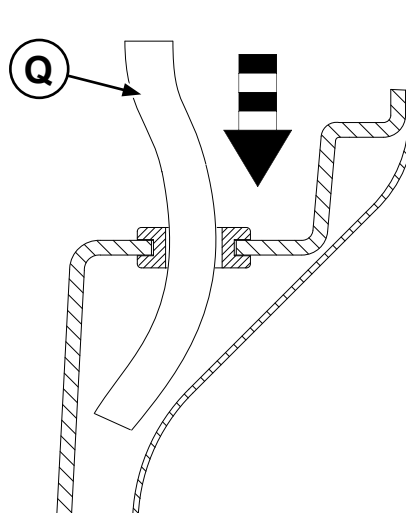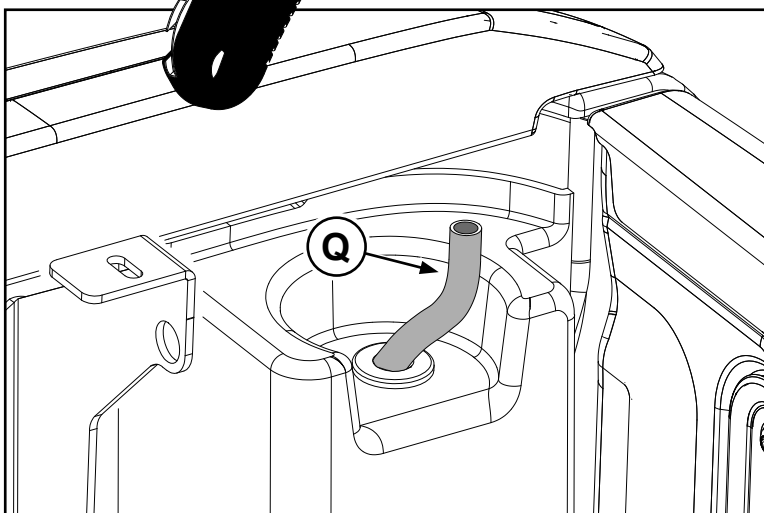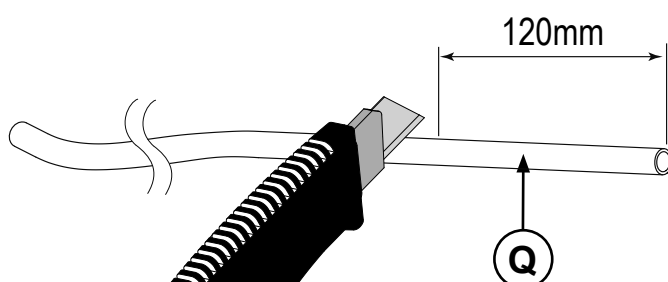


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS



NOTICE DE MONTAGE

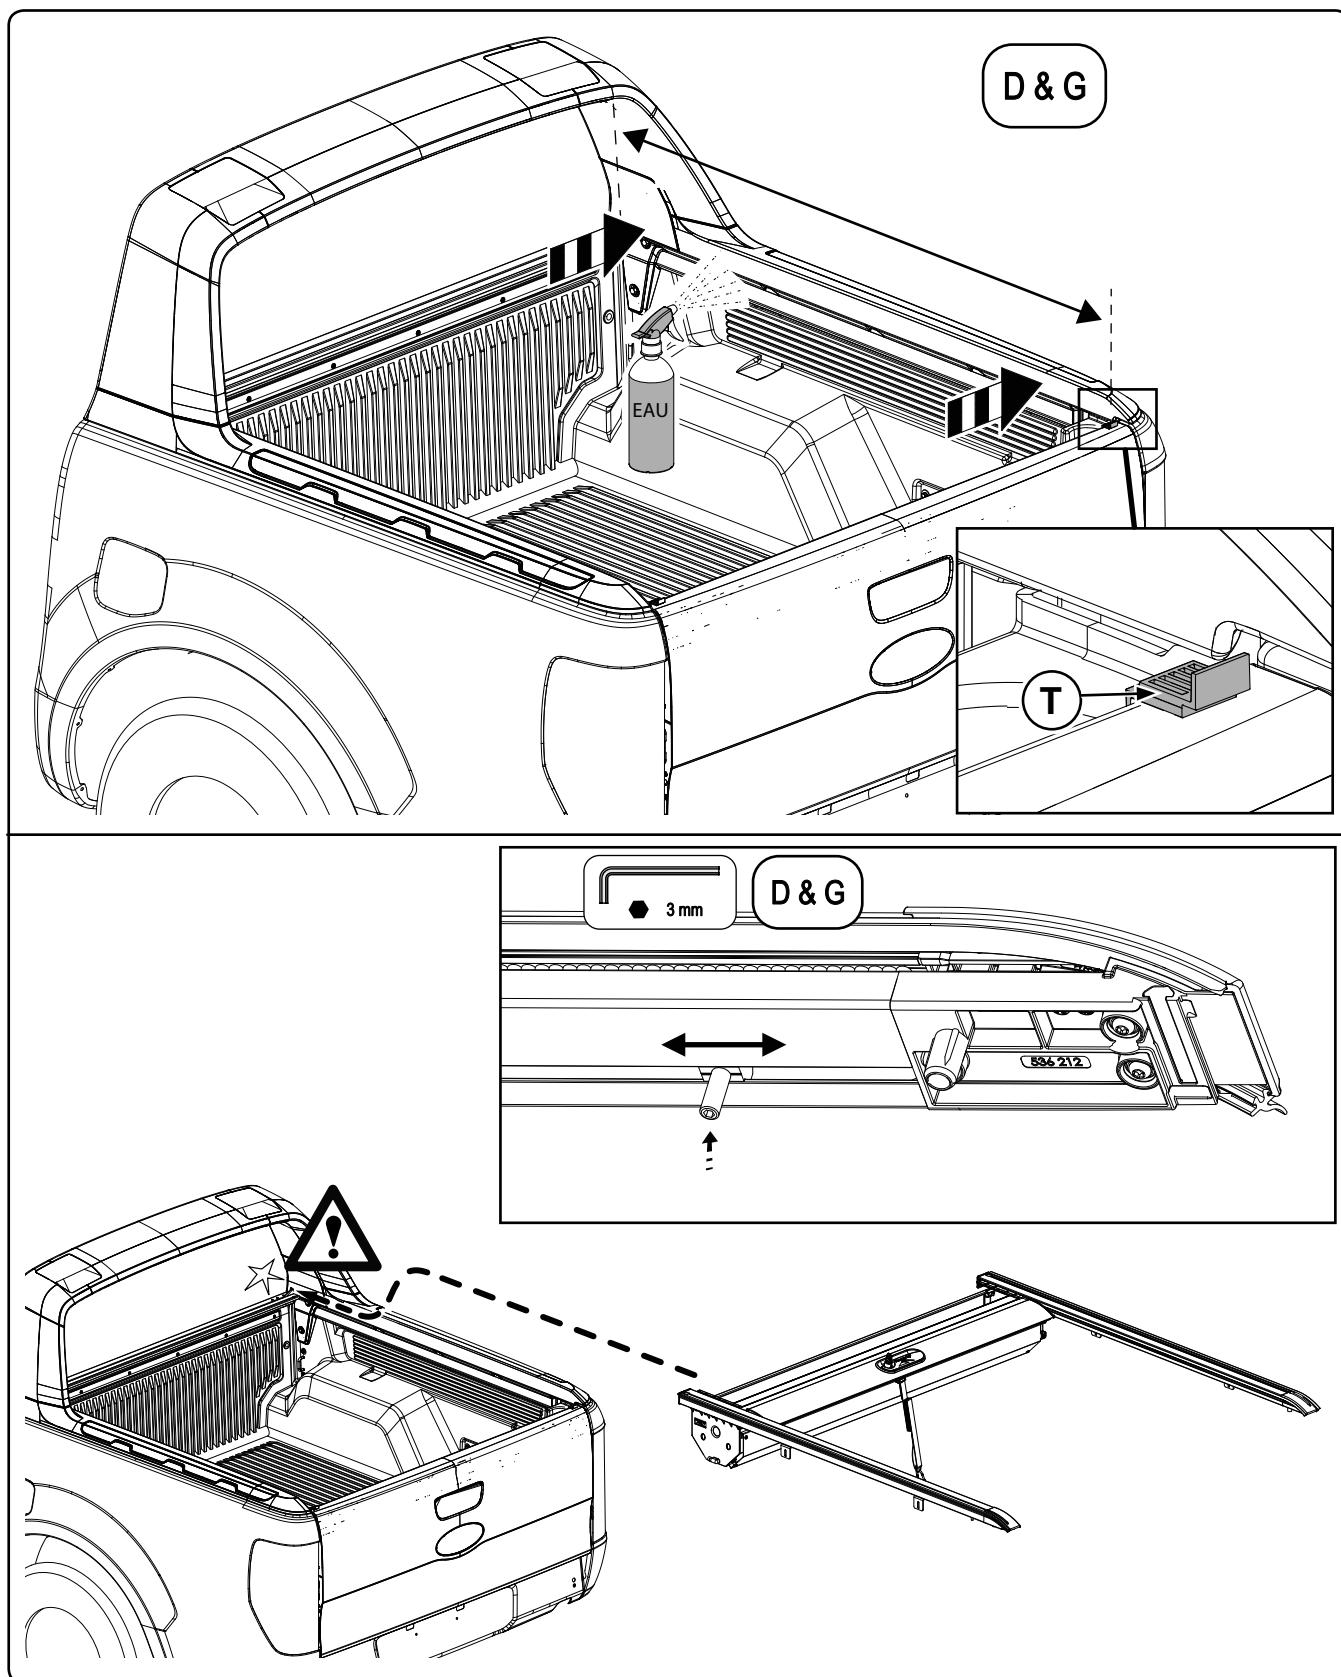


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE

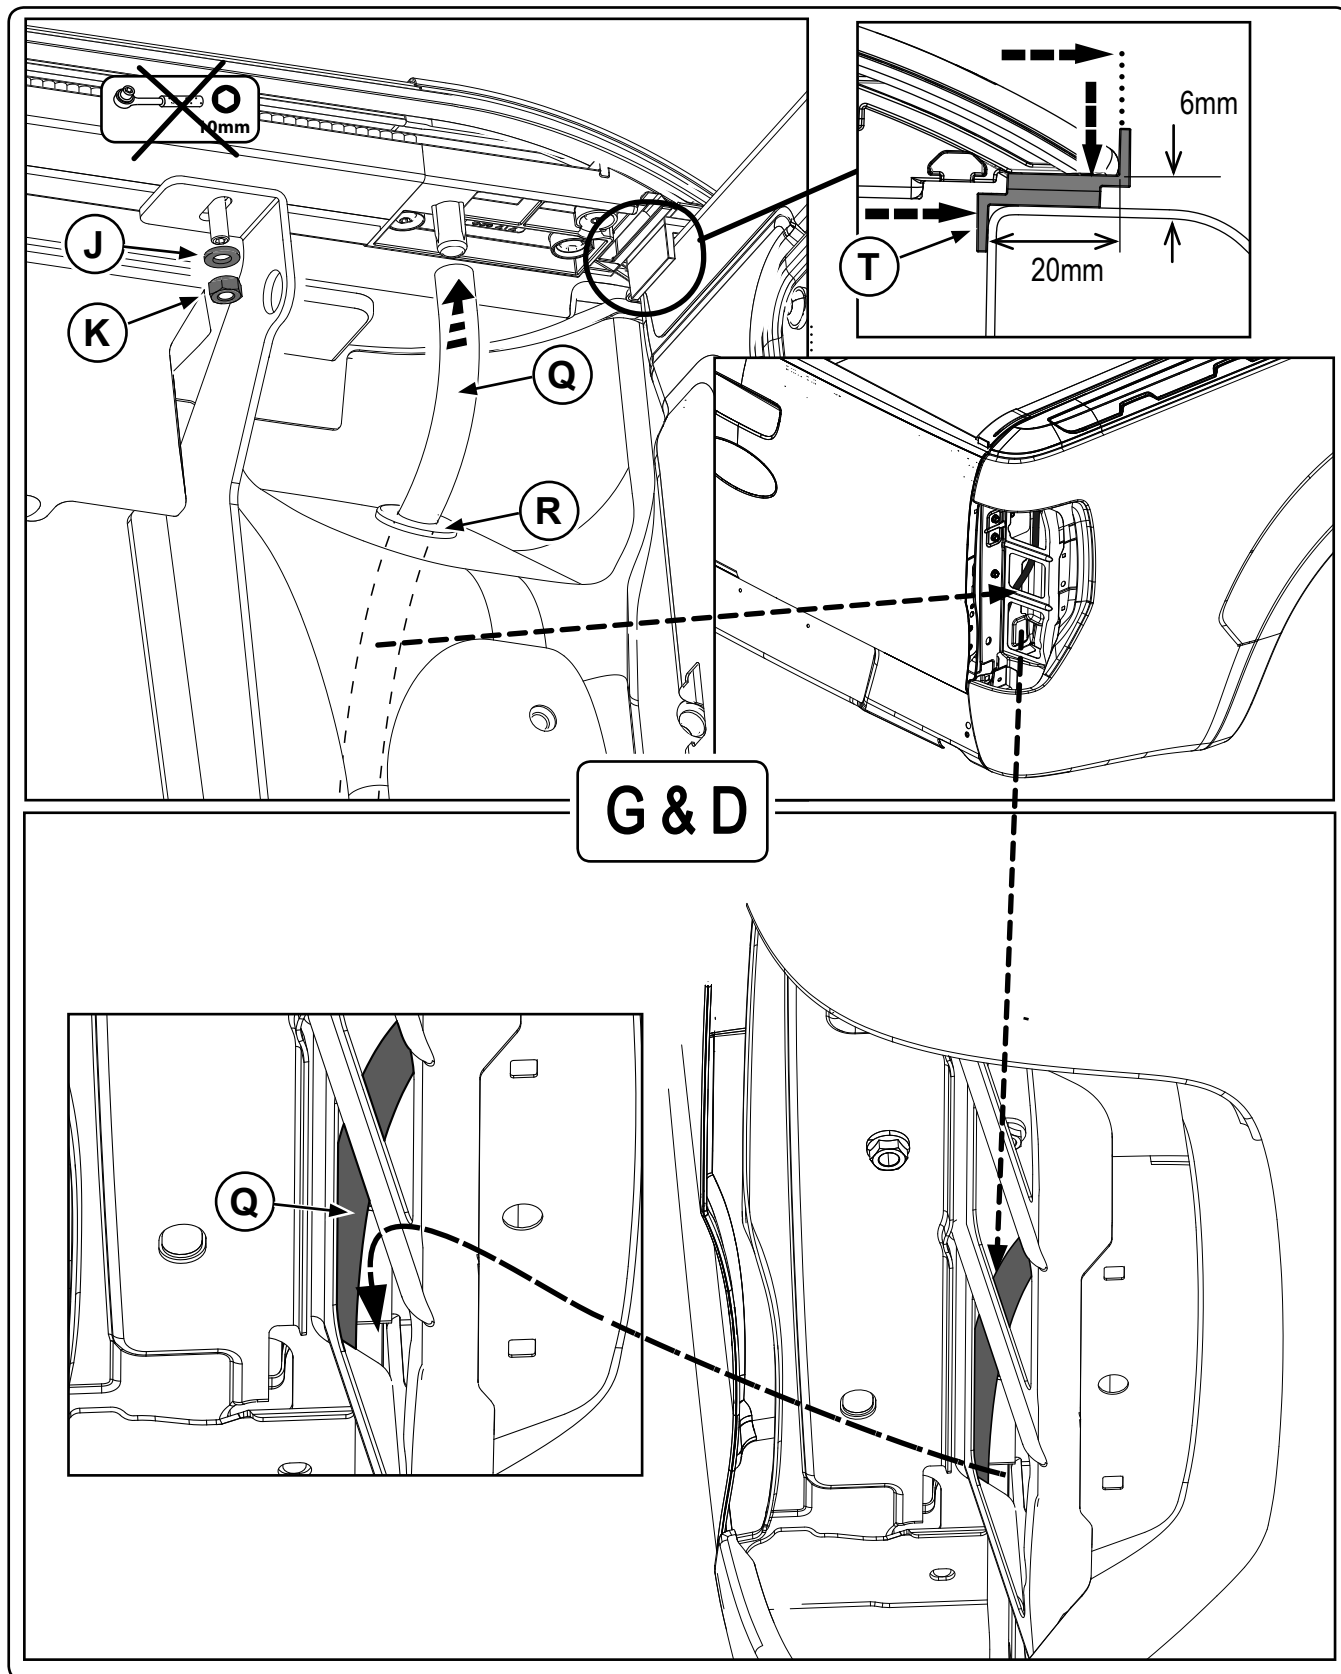


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS



NOTICE DE MONTAGE


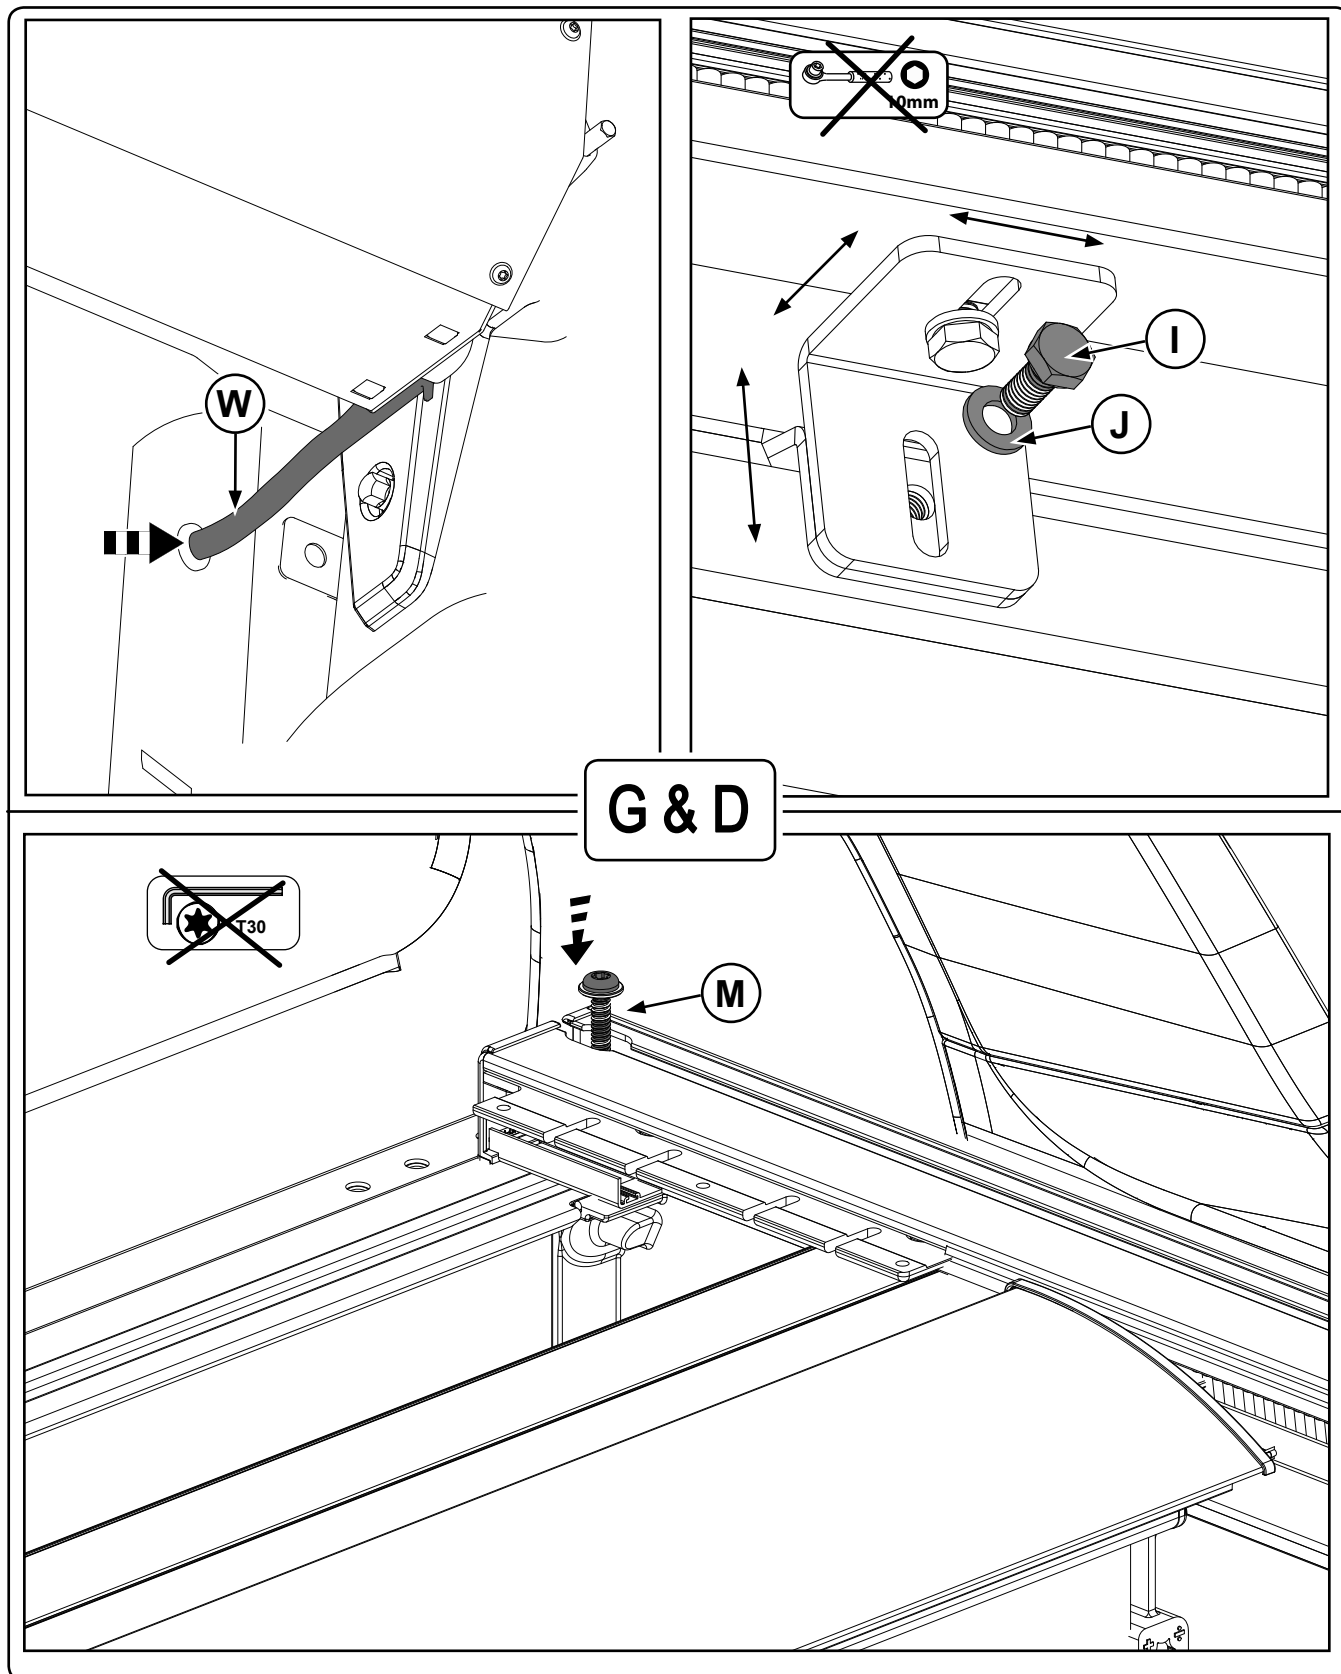


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE

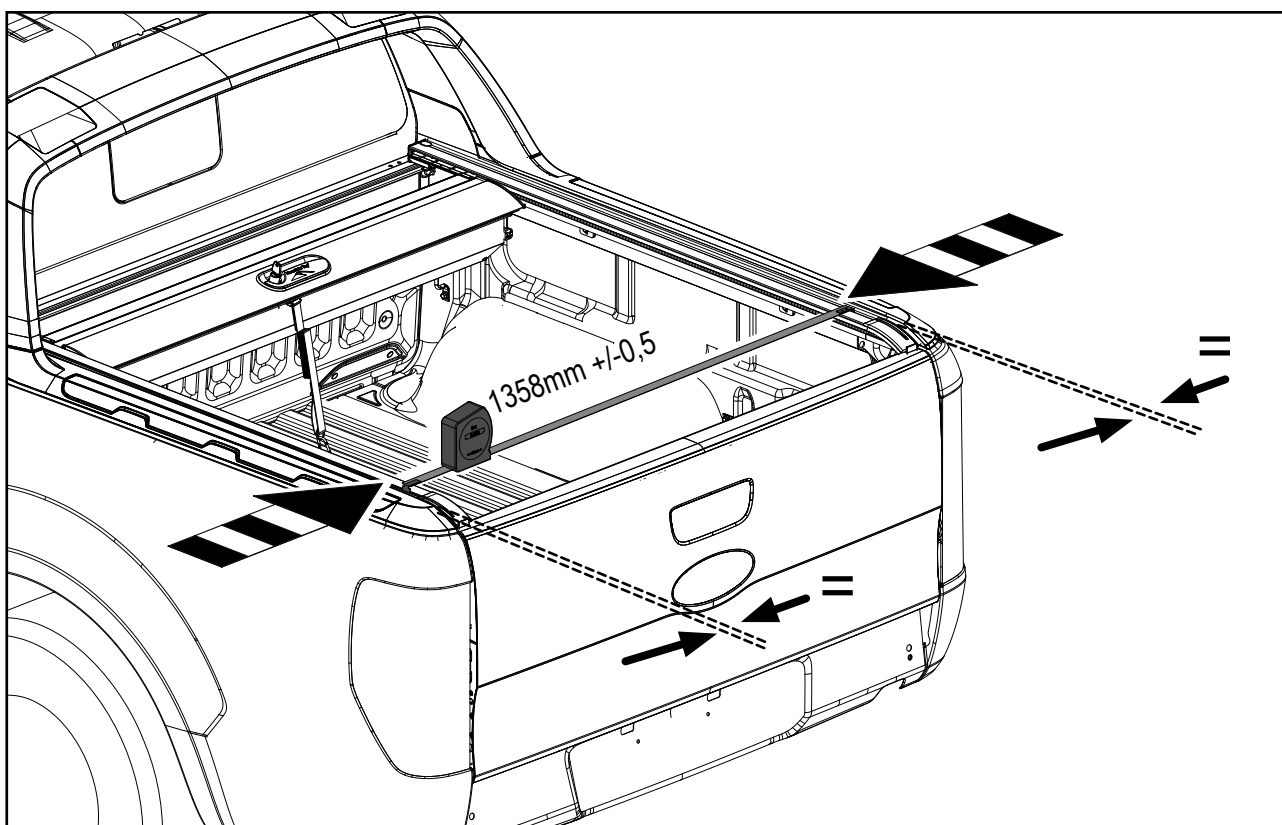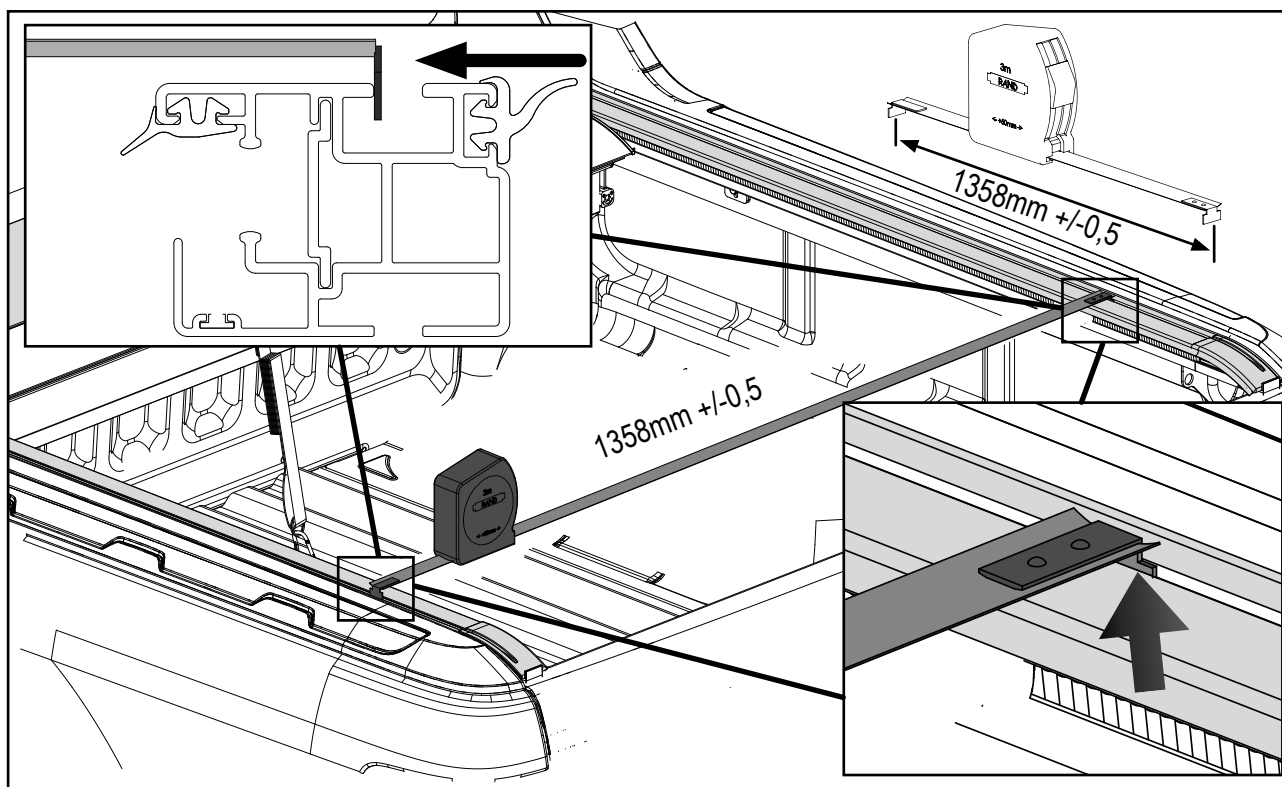


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE


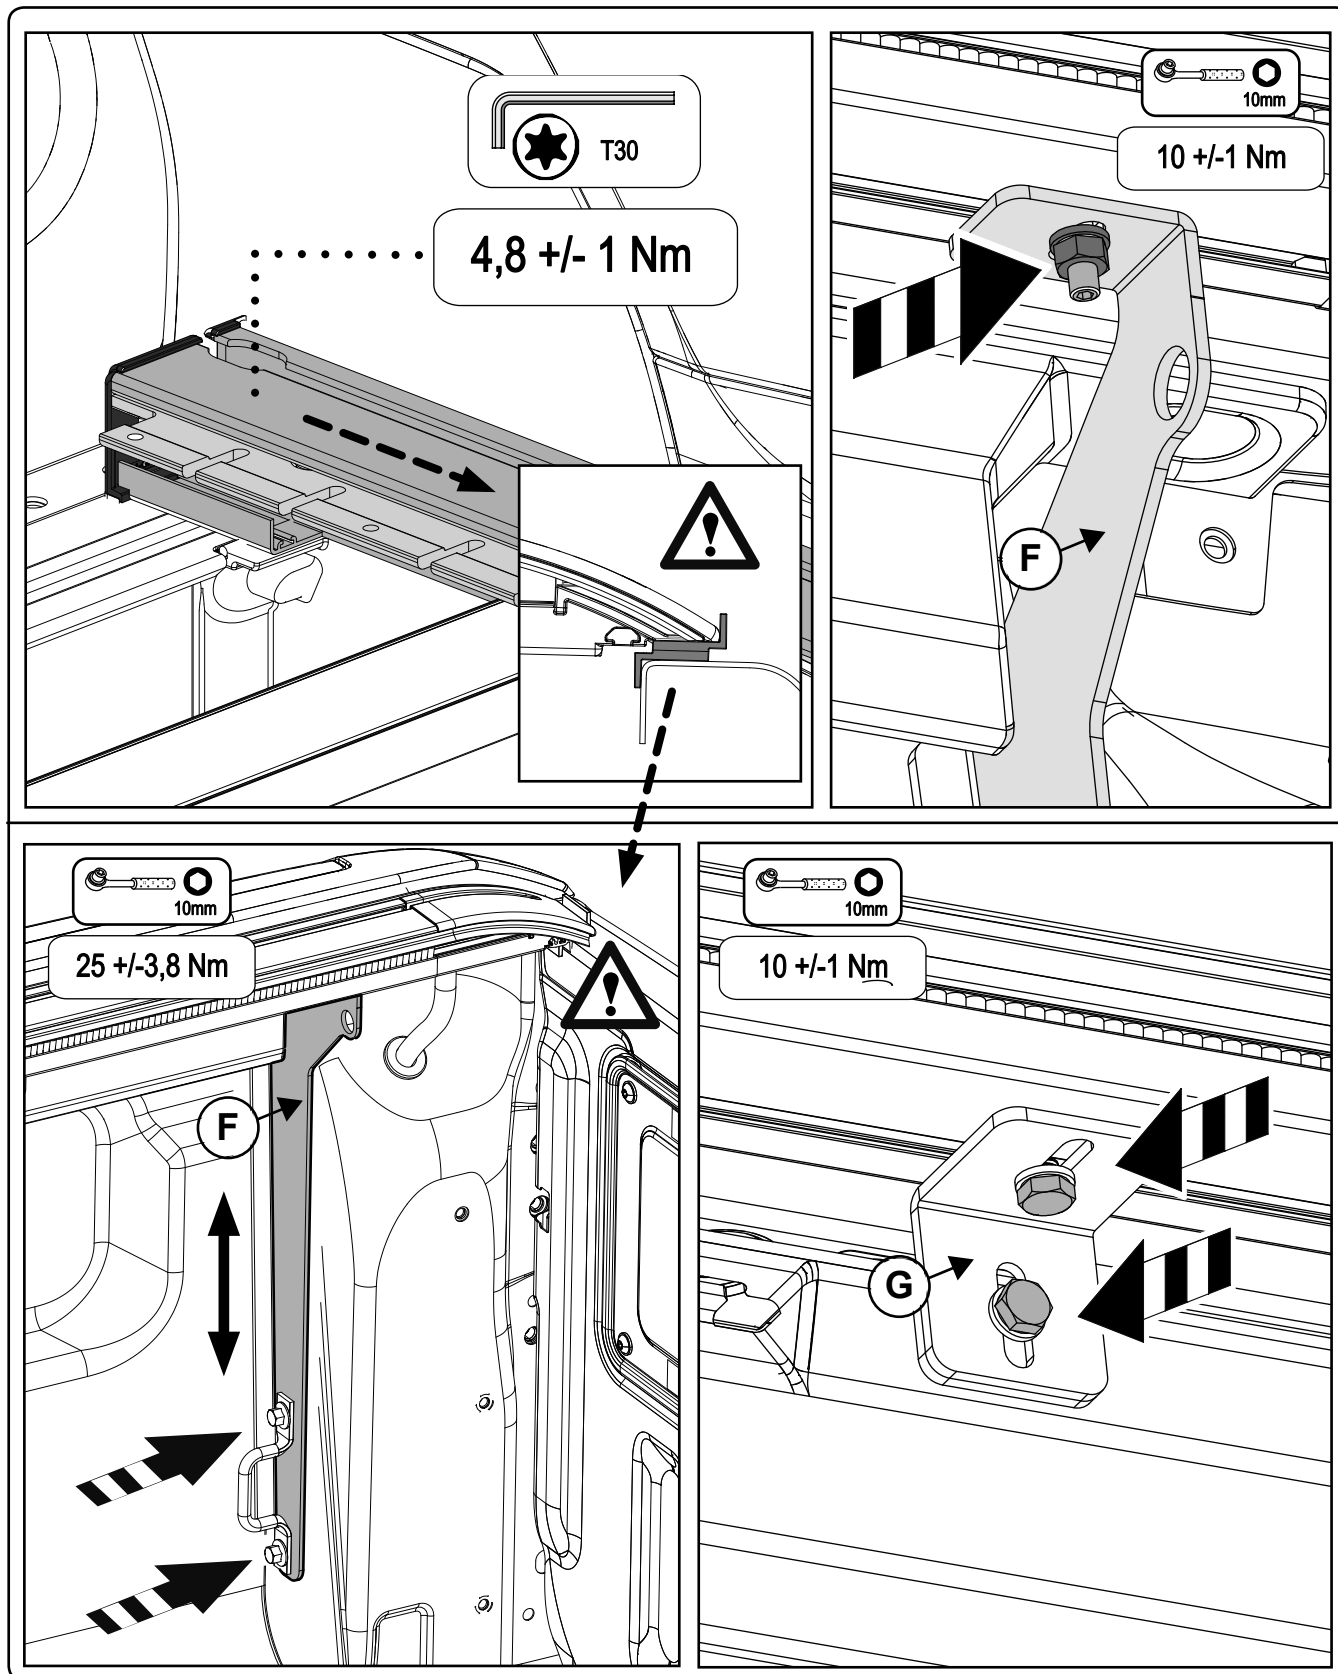


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE

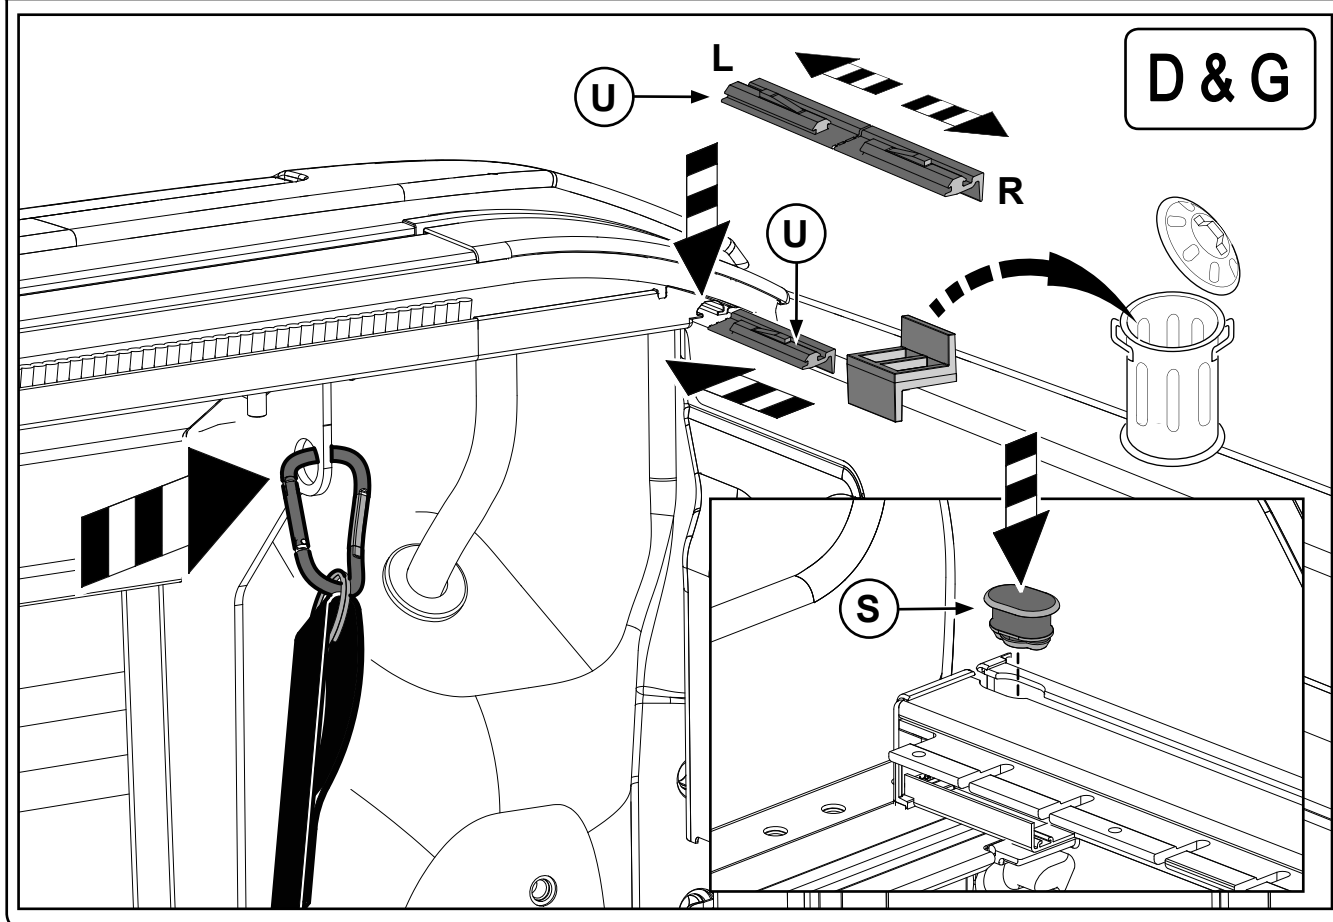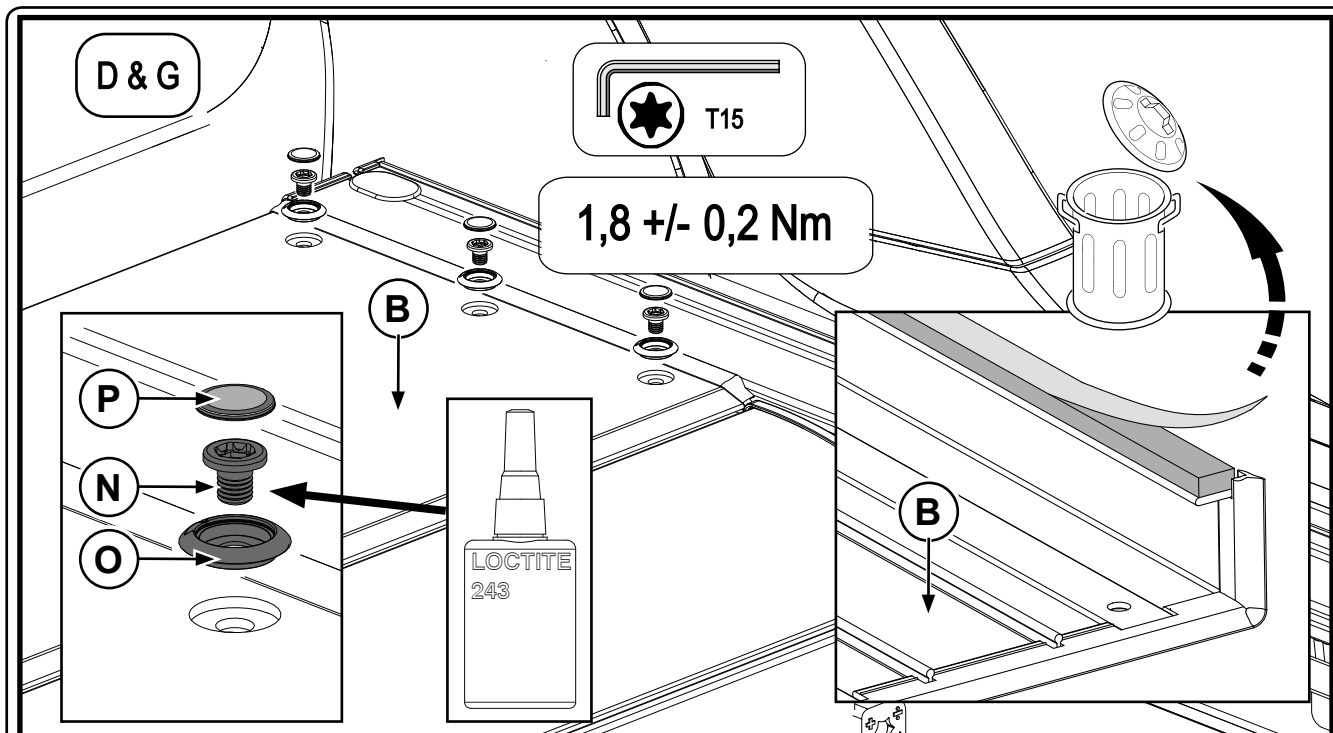



FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS



NOTICE DE MONTAGE



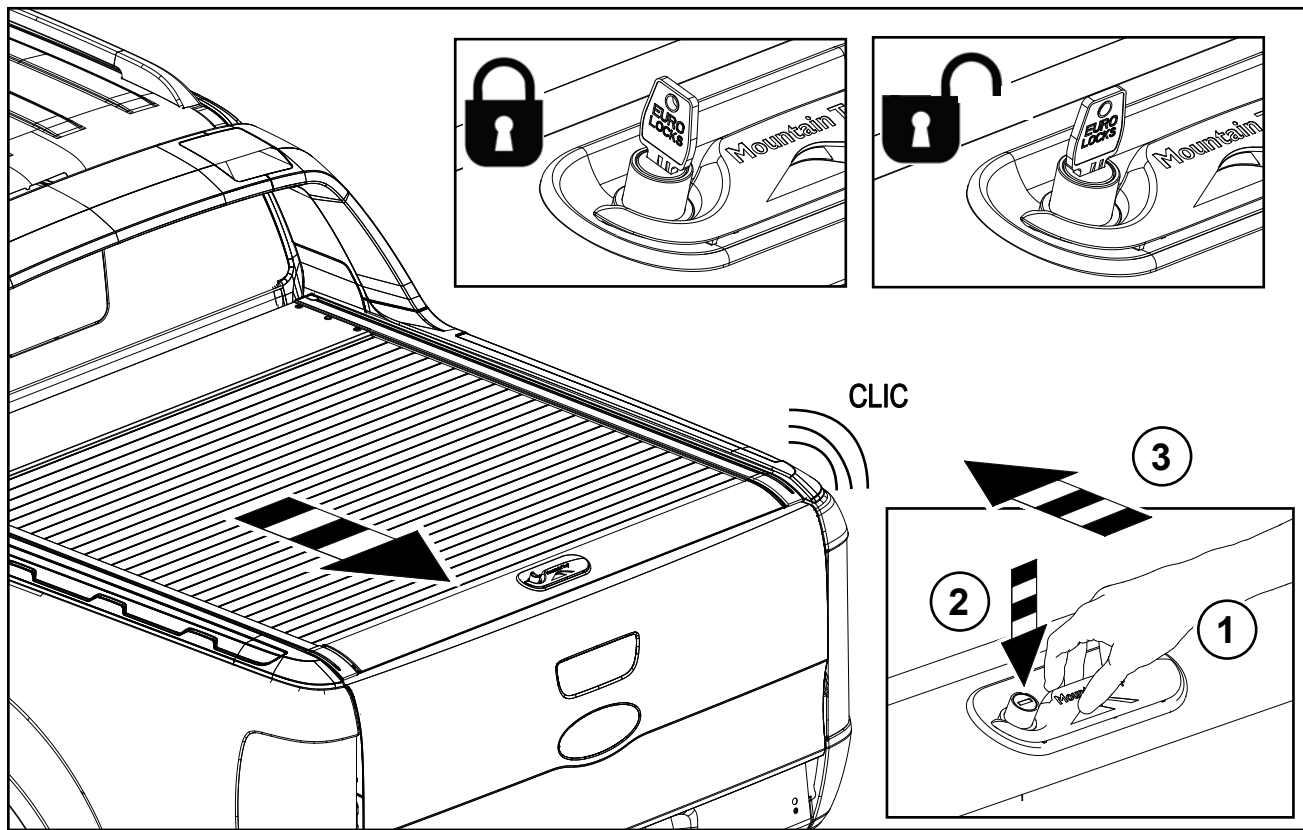
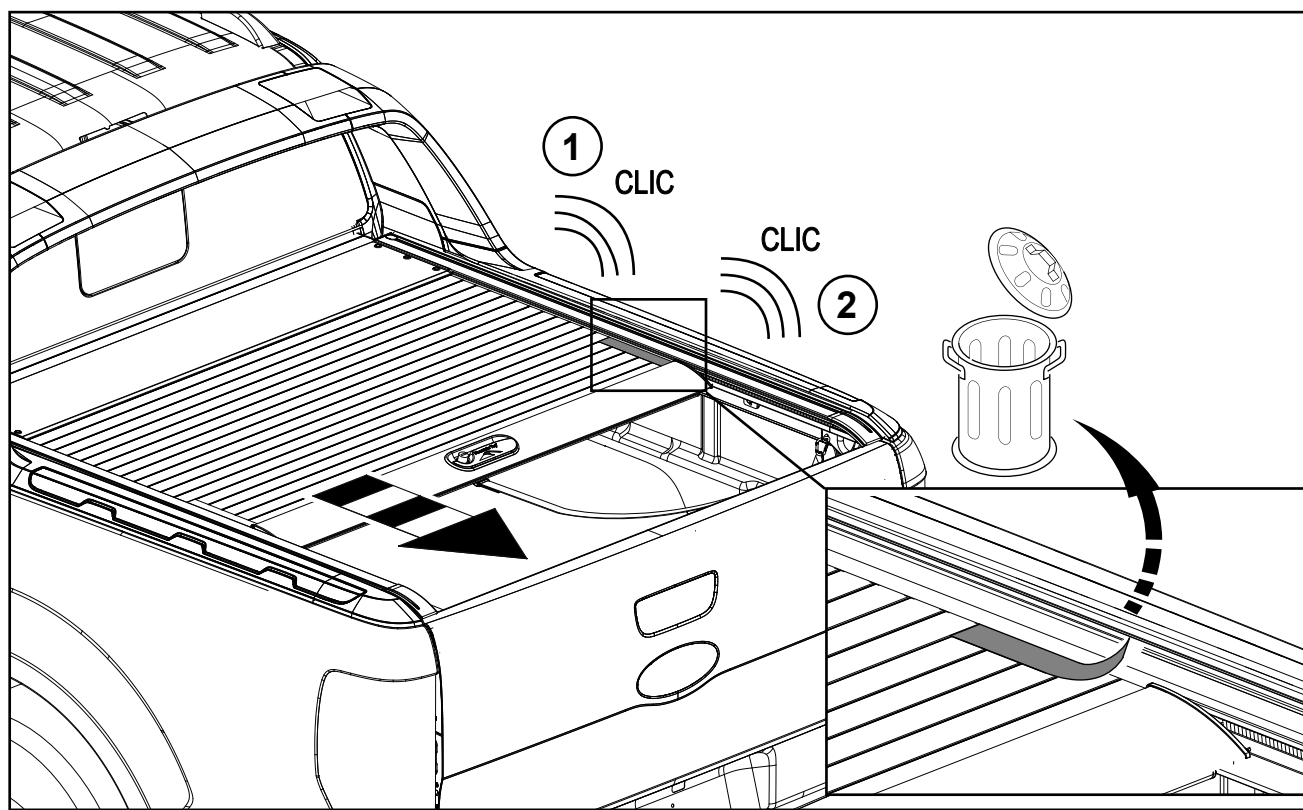


FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS

NOTICE DE MONTAGE

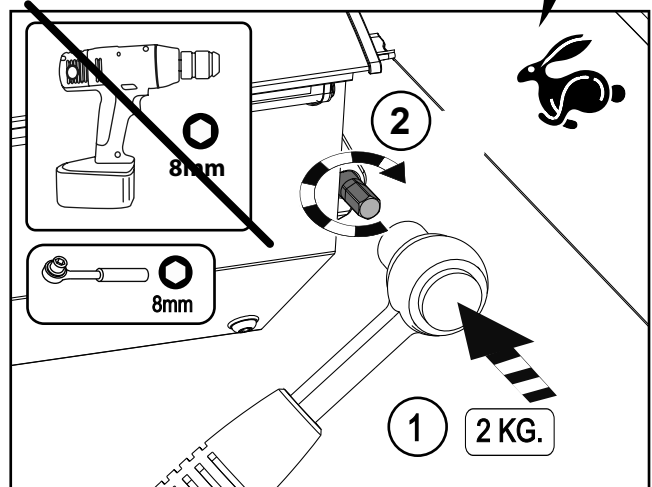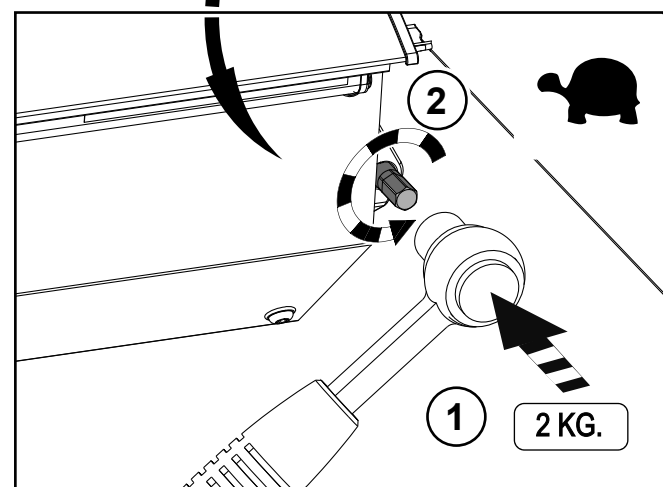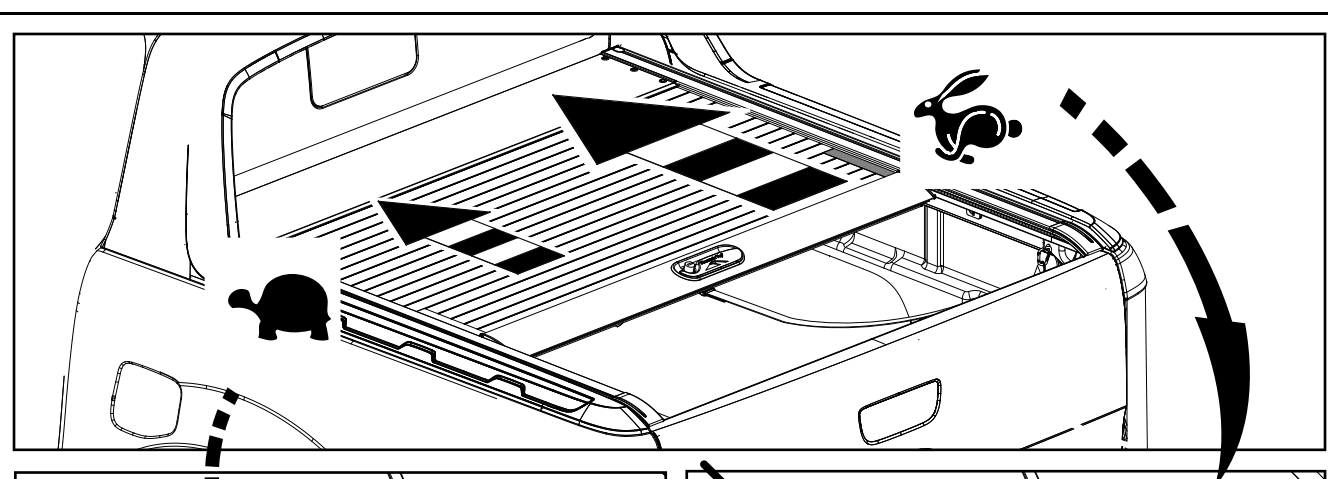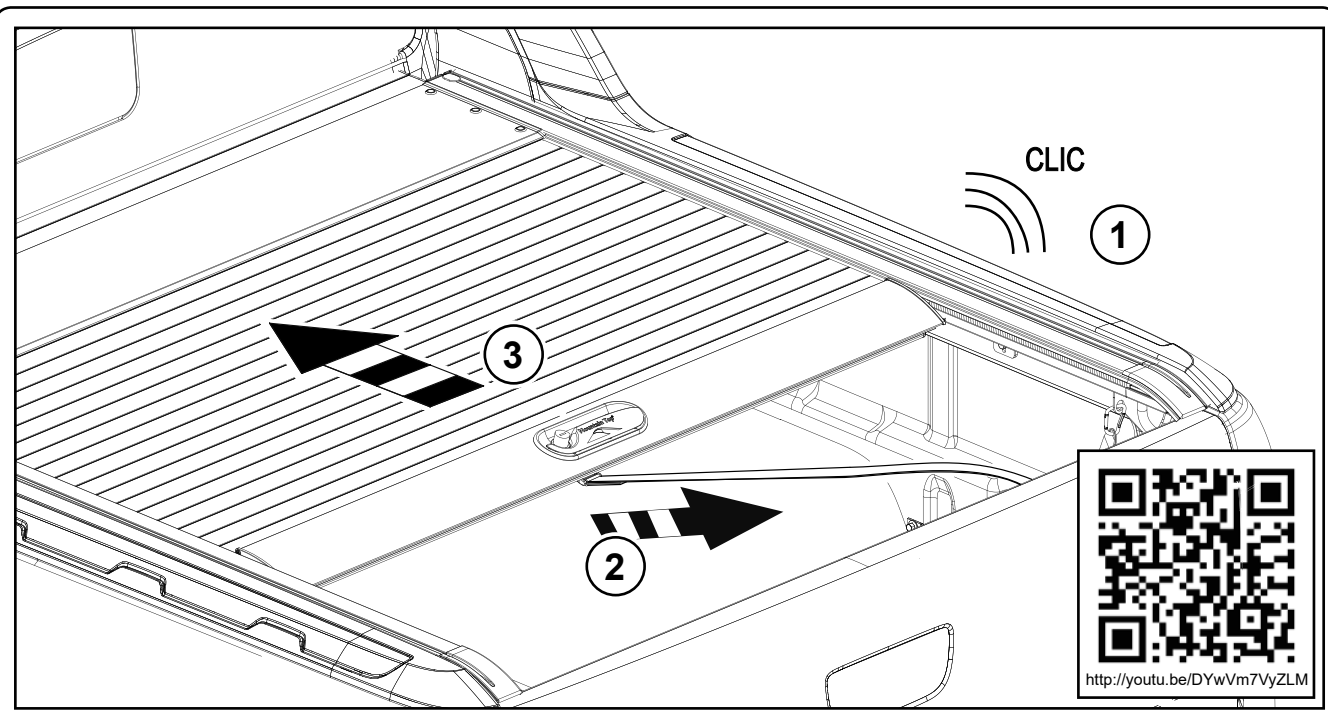

FORD RANGER 2012+ WILDTRAK

DOUBLE CAB / SUPER CAB

Mountain Top®
INDUSTRIES APS



NOTICE DE MONTAGE

