

Roll Bar - Kit d'adaptation

NOTICE DE MONTAGE

VOLKSWAGEN AMAROK CANYON 2016+




TELECHARGER PDF



Composants


A

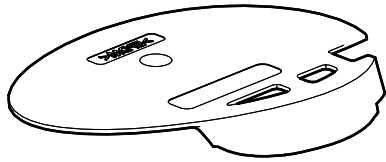

ARRIERE GAUCHE

x 1


B

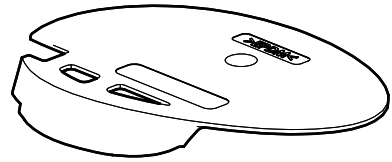

ARRIERE DROIT

x 1


C

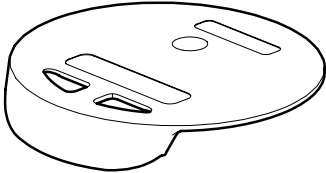

MILIEU GAUCHE

x 1


D

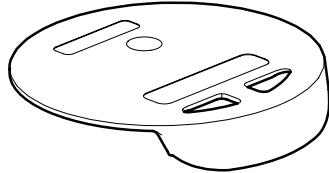

MILIEU DROIT

x 1

E

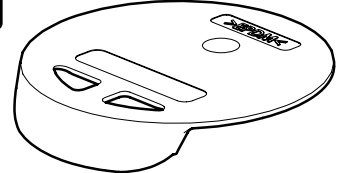


AVANT

x 2




Kit

F

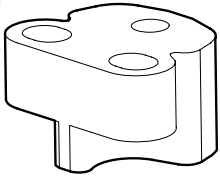


x 2

G

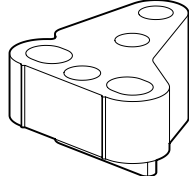


x 3

H

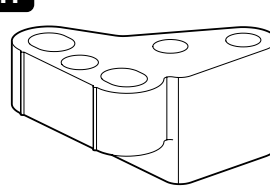

x 1

I

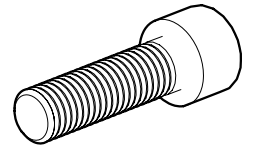

M10x35


x 4

J



x 4

K

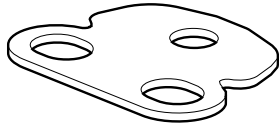

x 2


L



M10

x 4

M

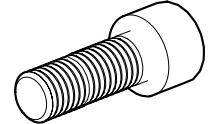


M8x30

x 2




Manuel

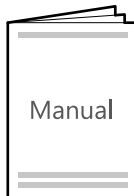


x 1




Outils requis

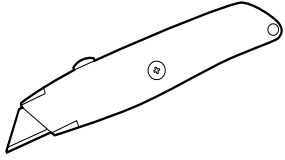

Ø 3,5mm
Ø 14 mm

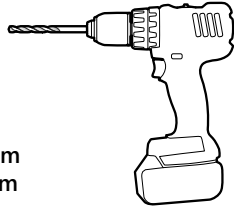




1 - 25 Nm

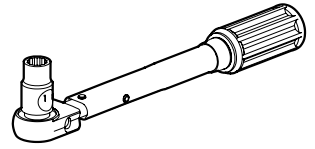


○ 5+6+8 mm


1

Application de l'anti-rouille

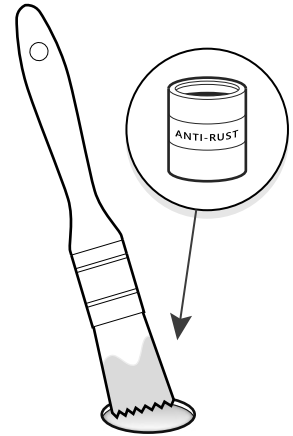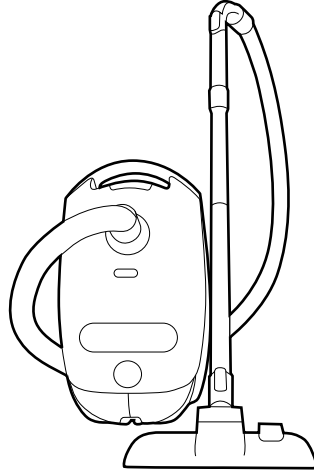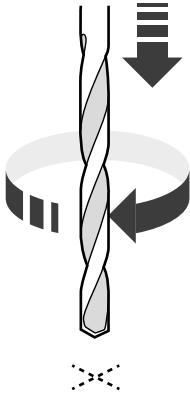








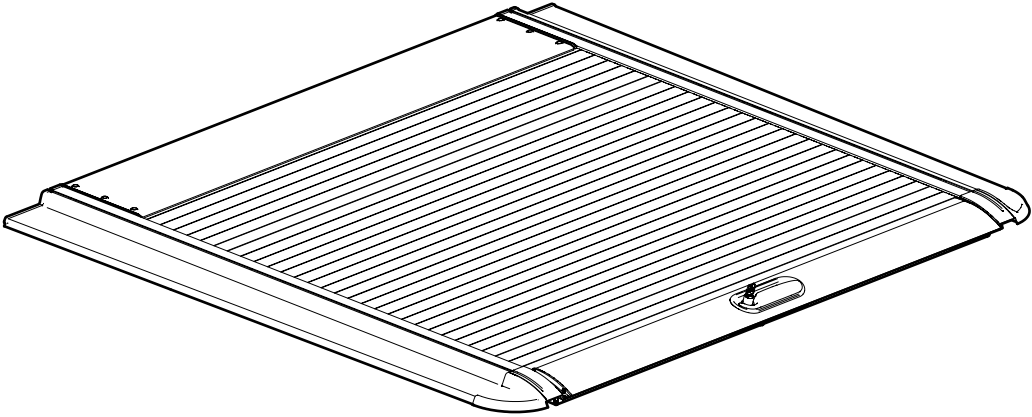





Mountain Top Roll

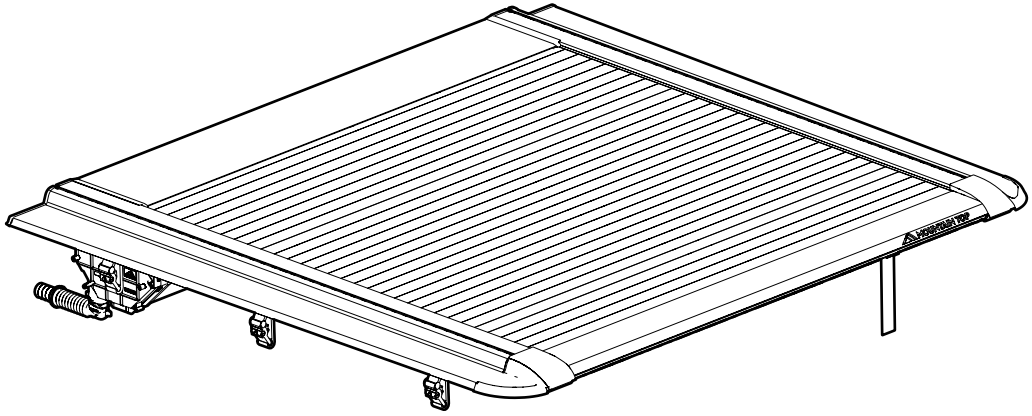

Mountain Top EVO





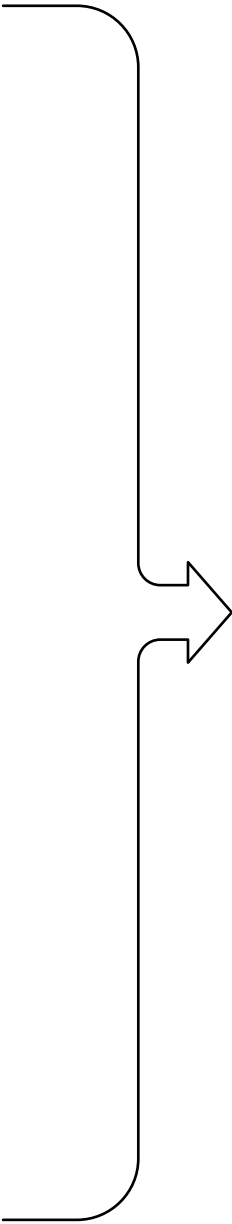


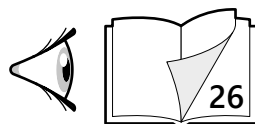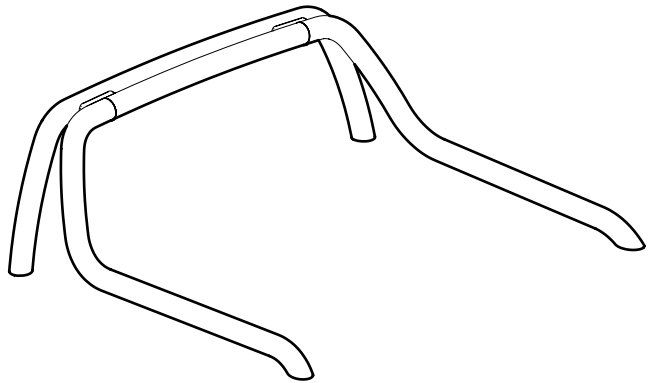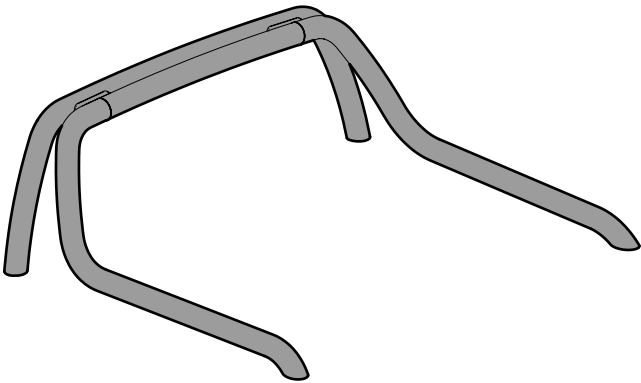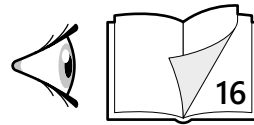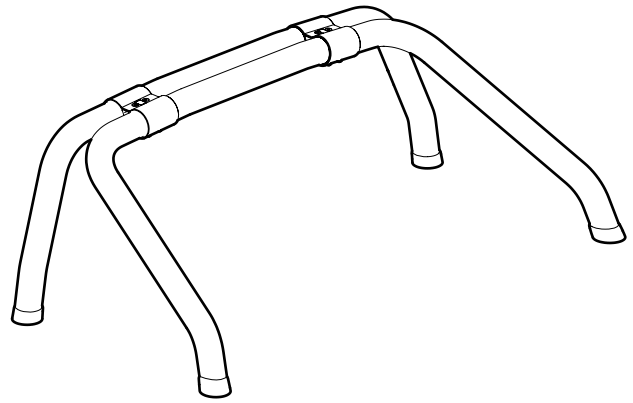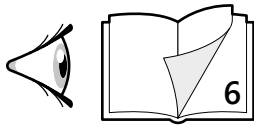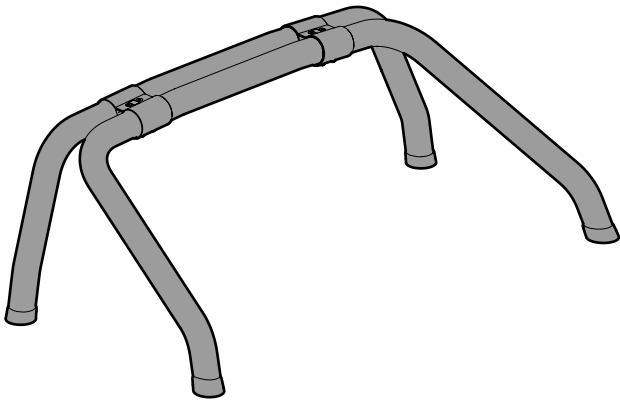


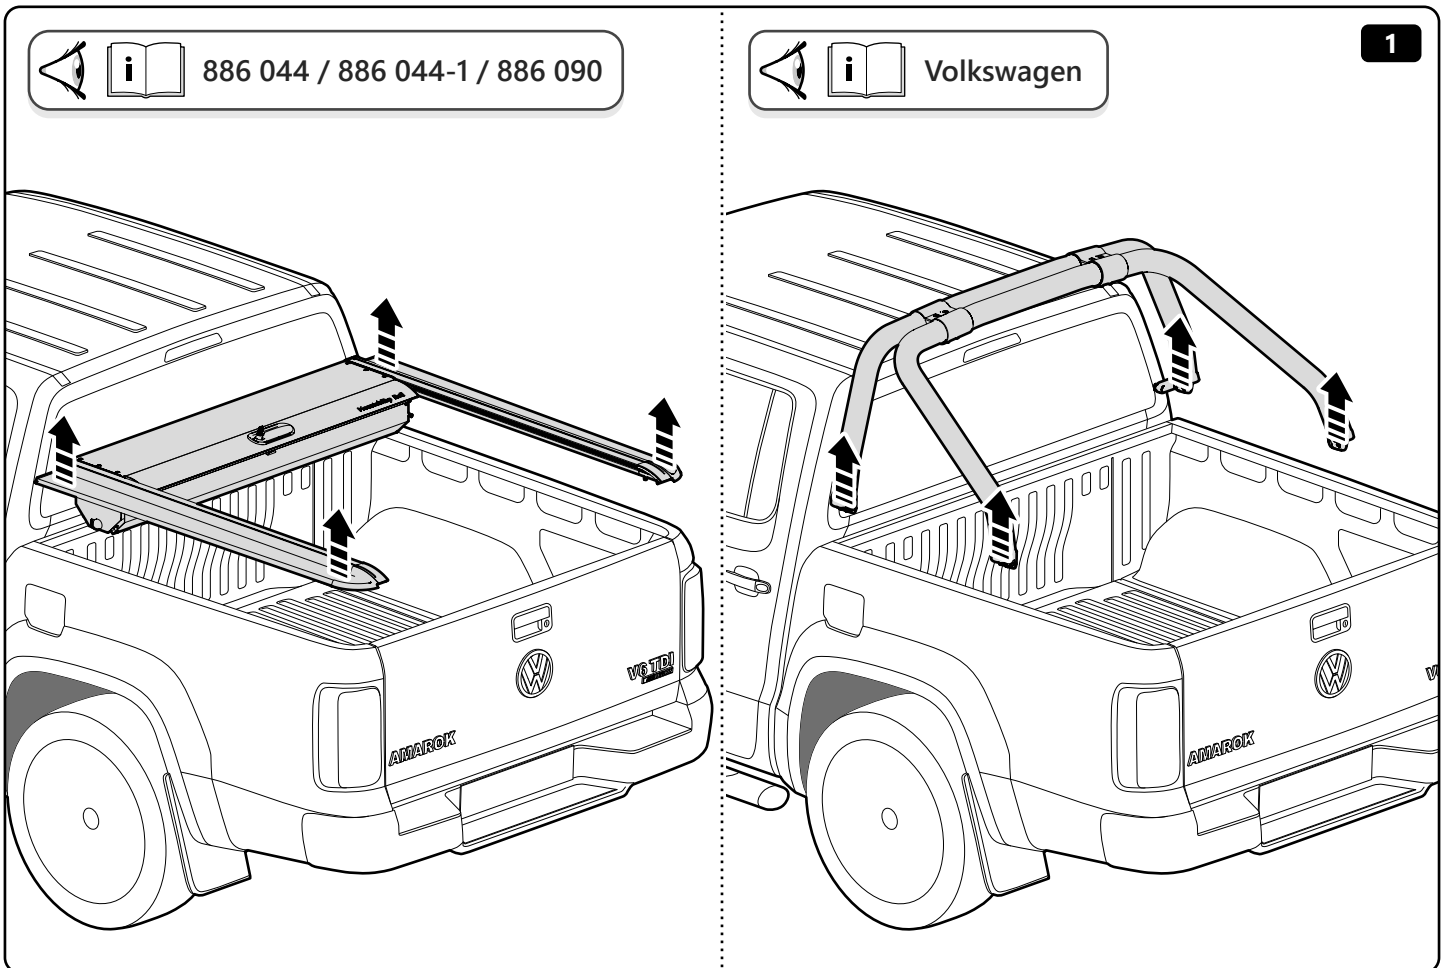

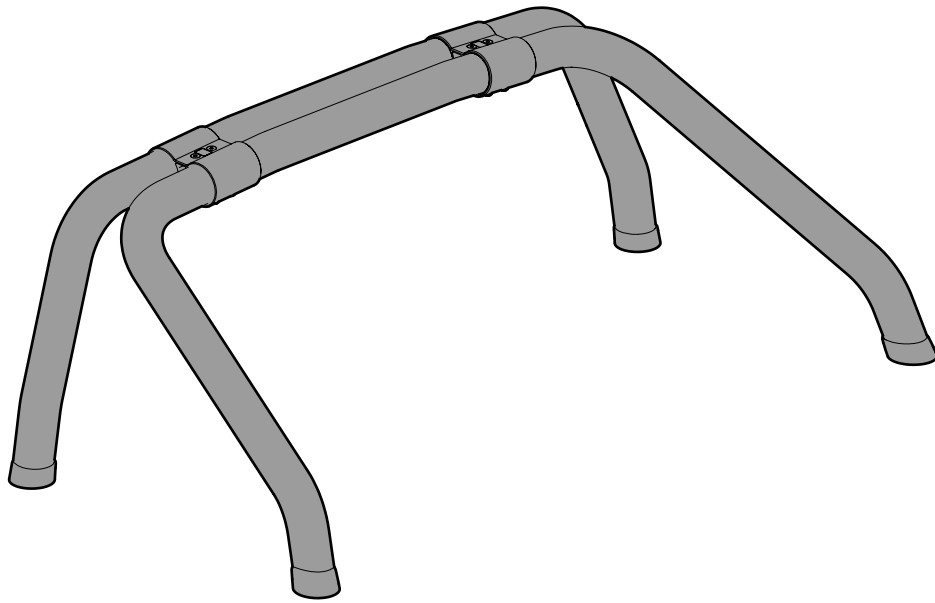



Ø 3,5 + 14mm

! Anti-rouille

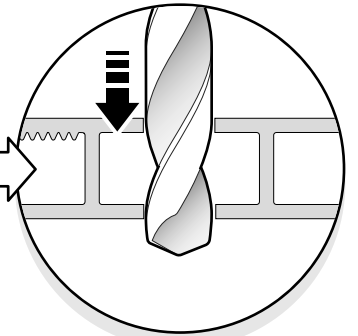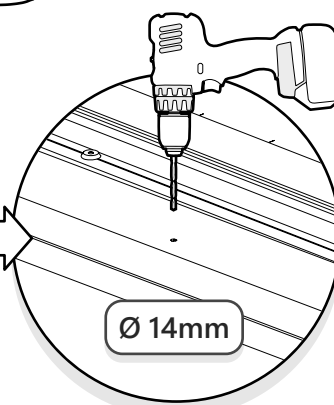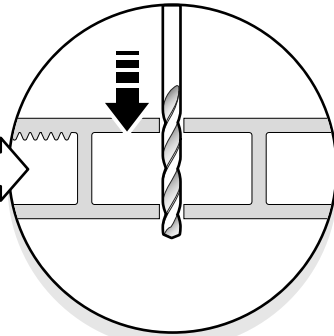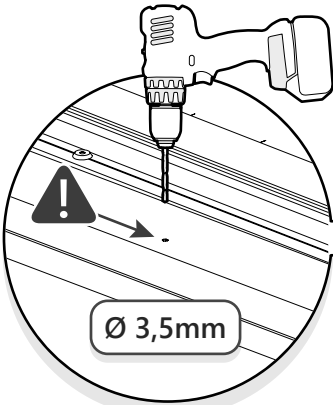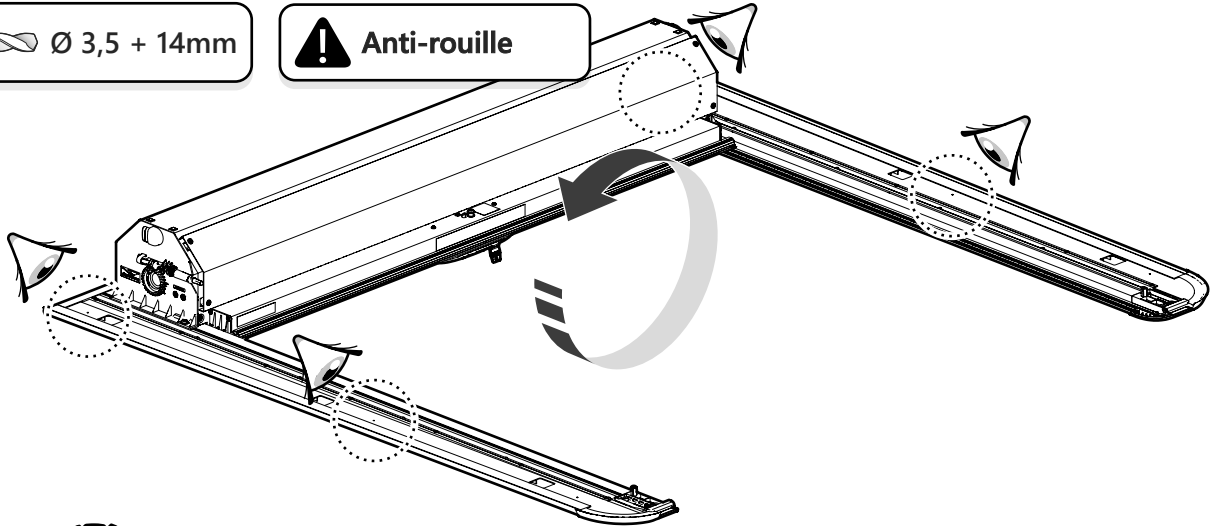


6mm

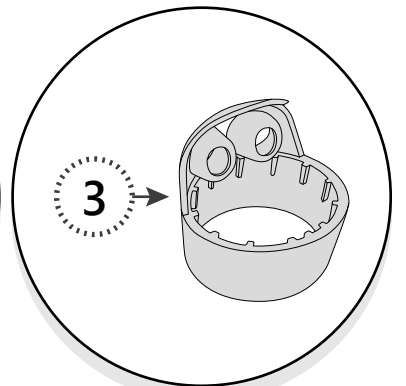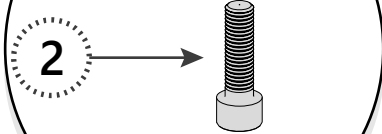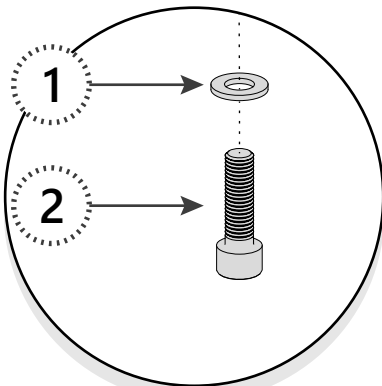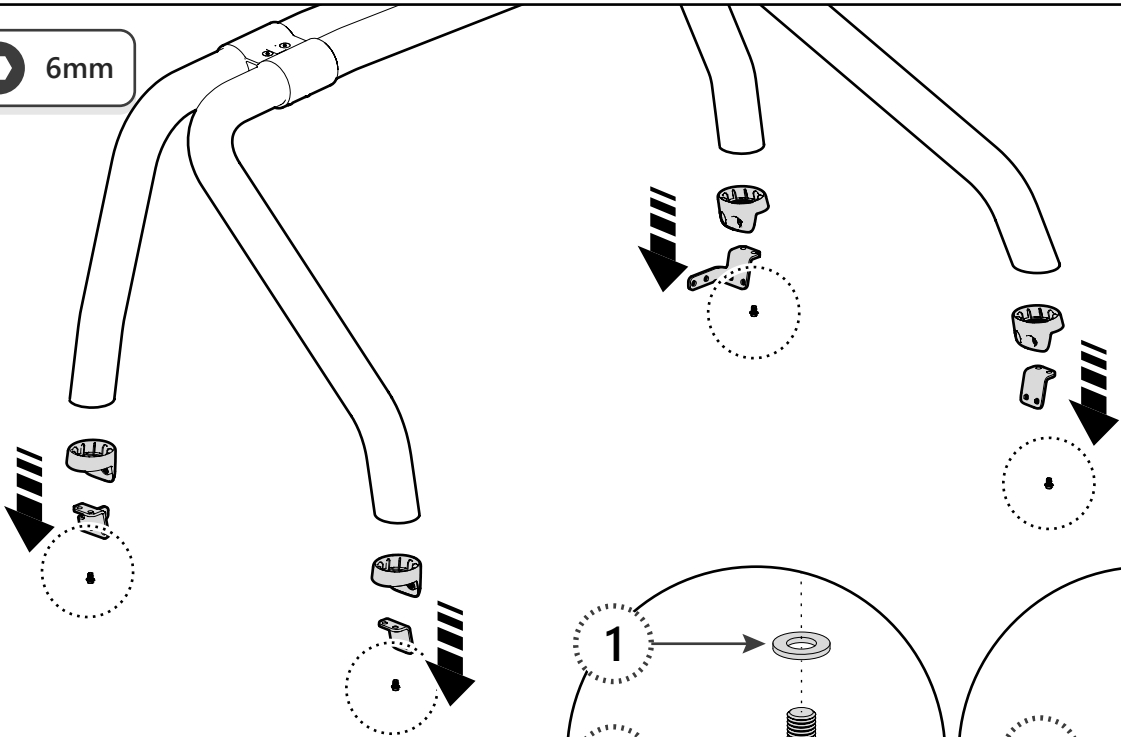


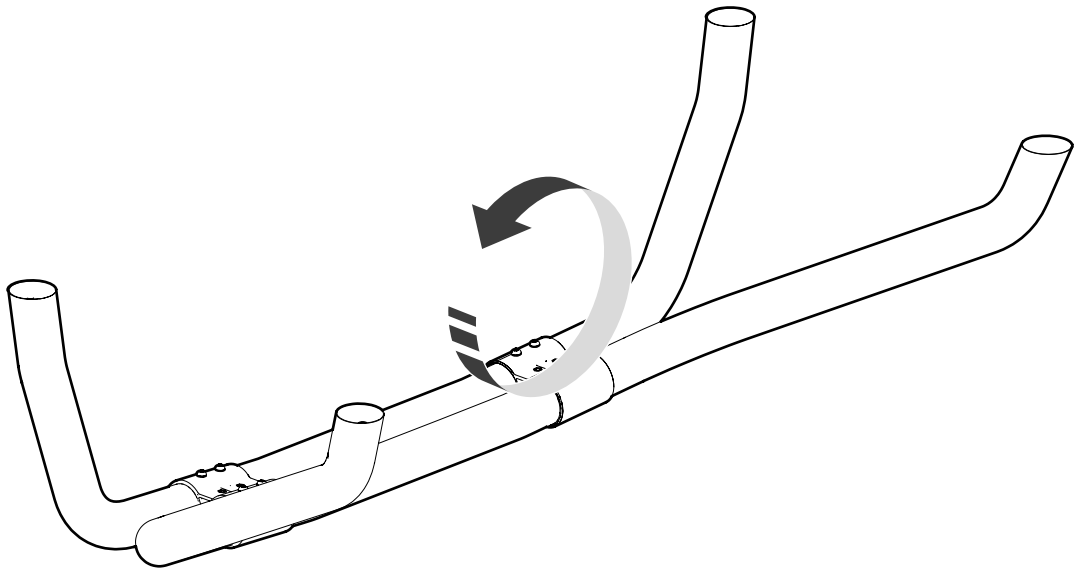



 6mm **26Nm**

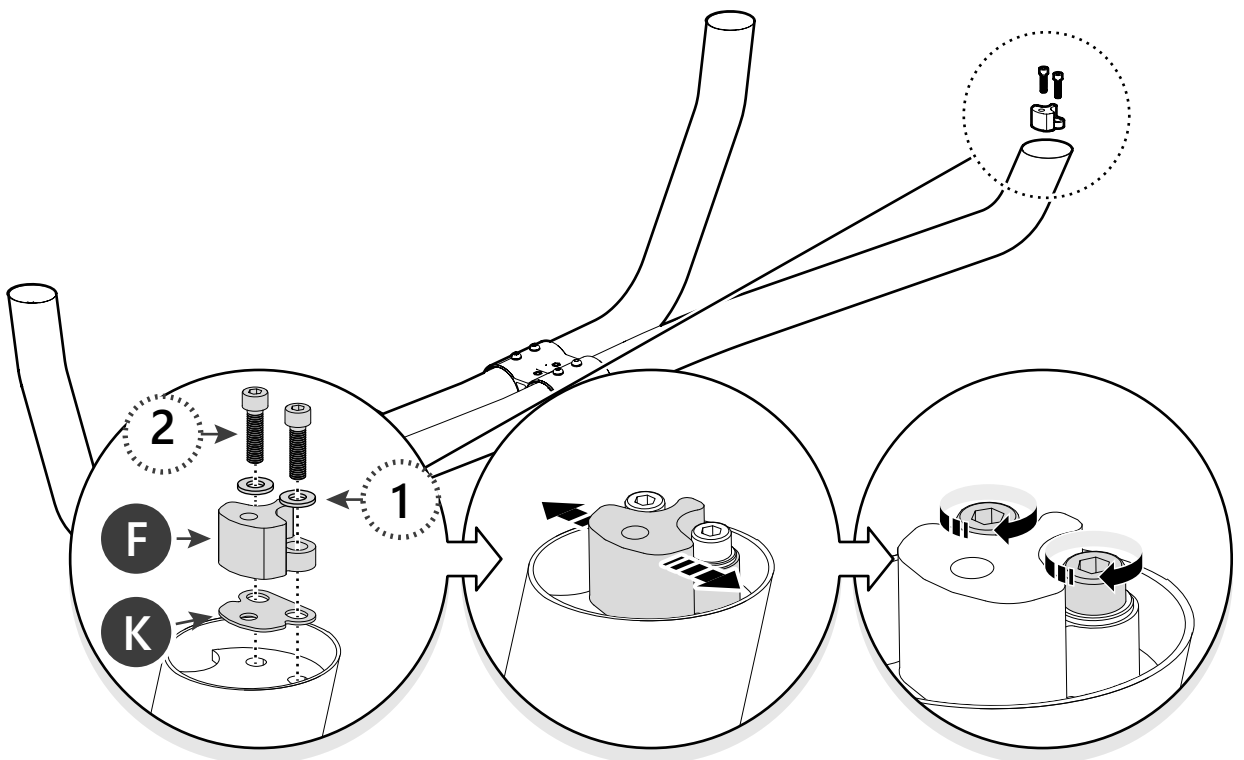

6mm 26Nm

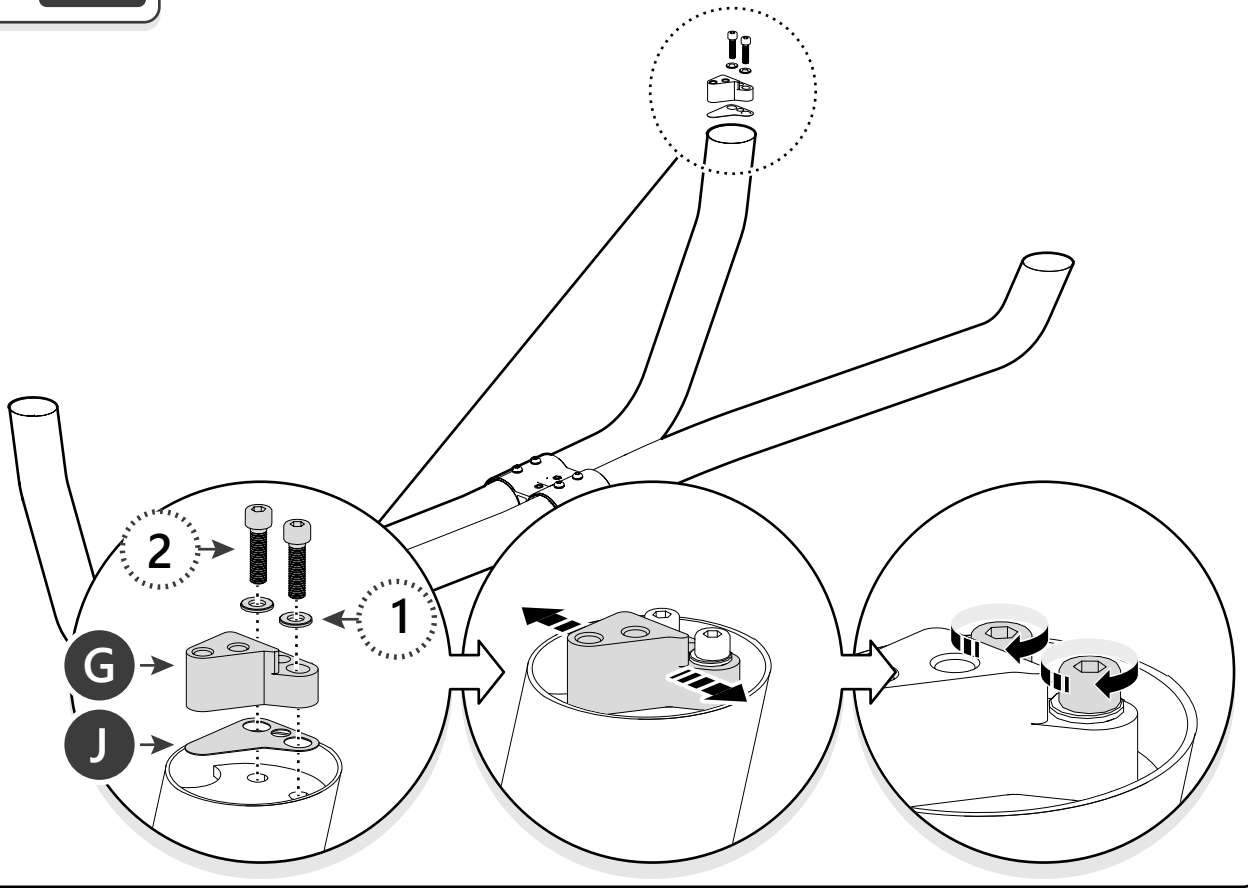




6mm 26Nm

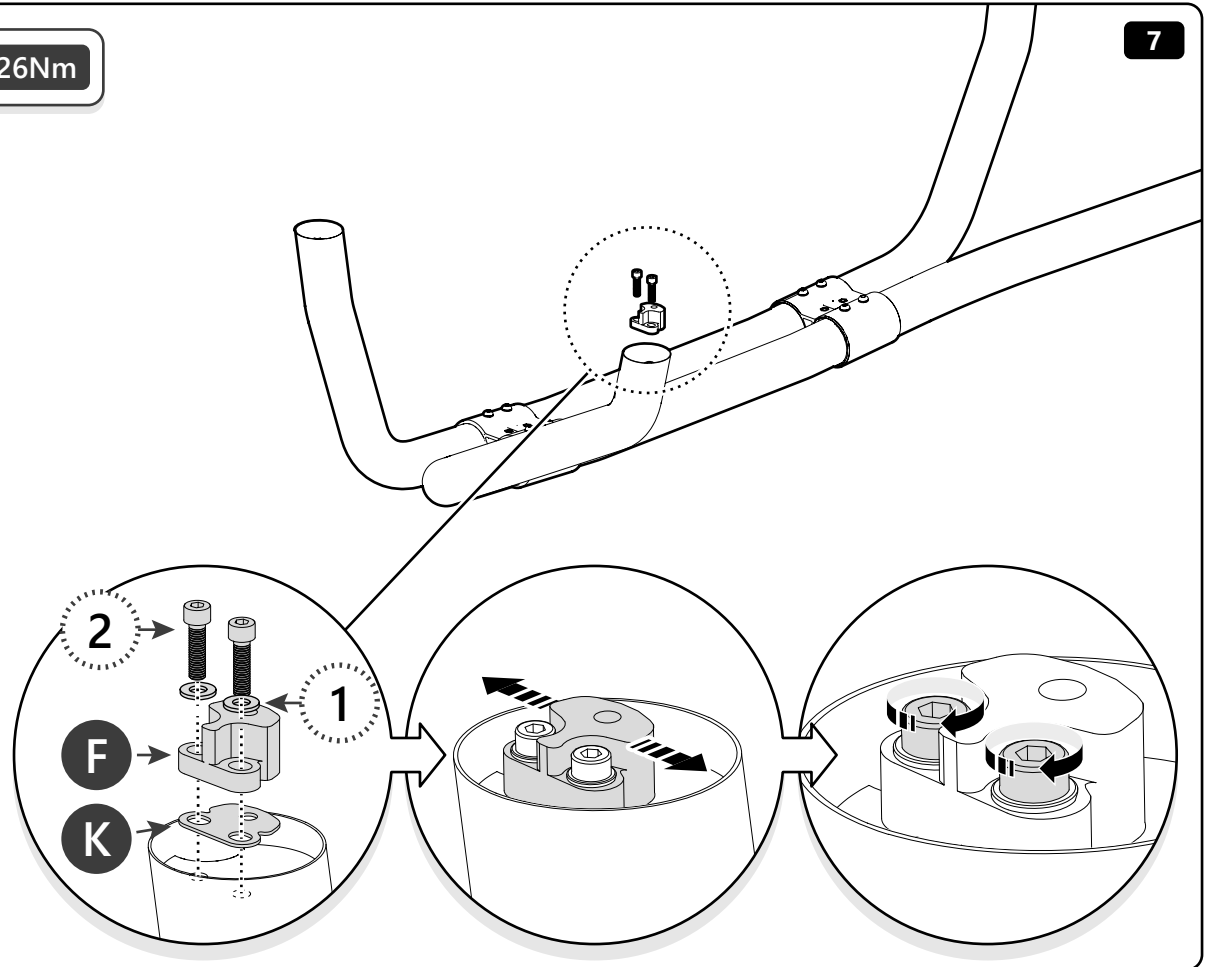




6mm


26Nm

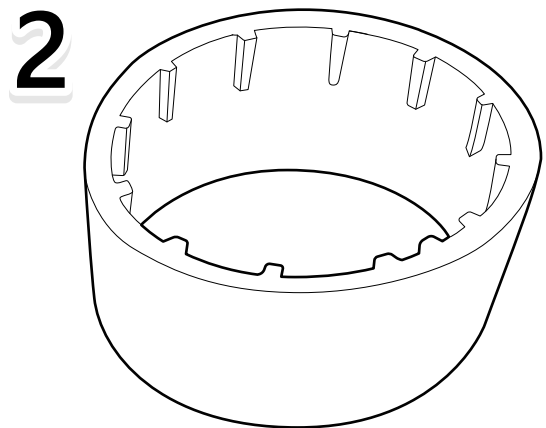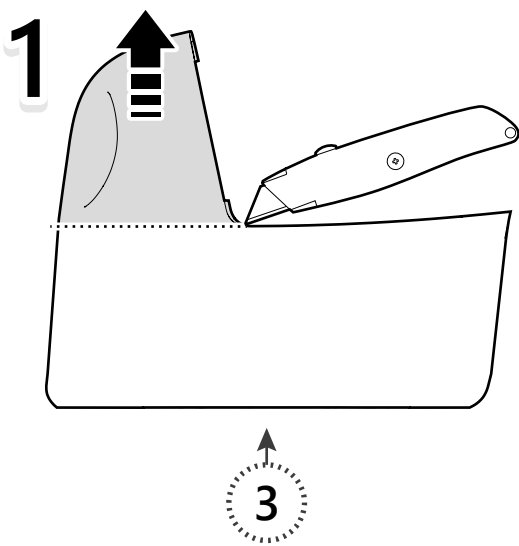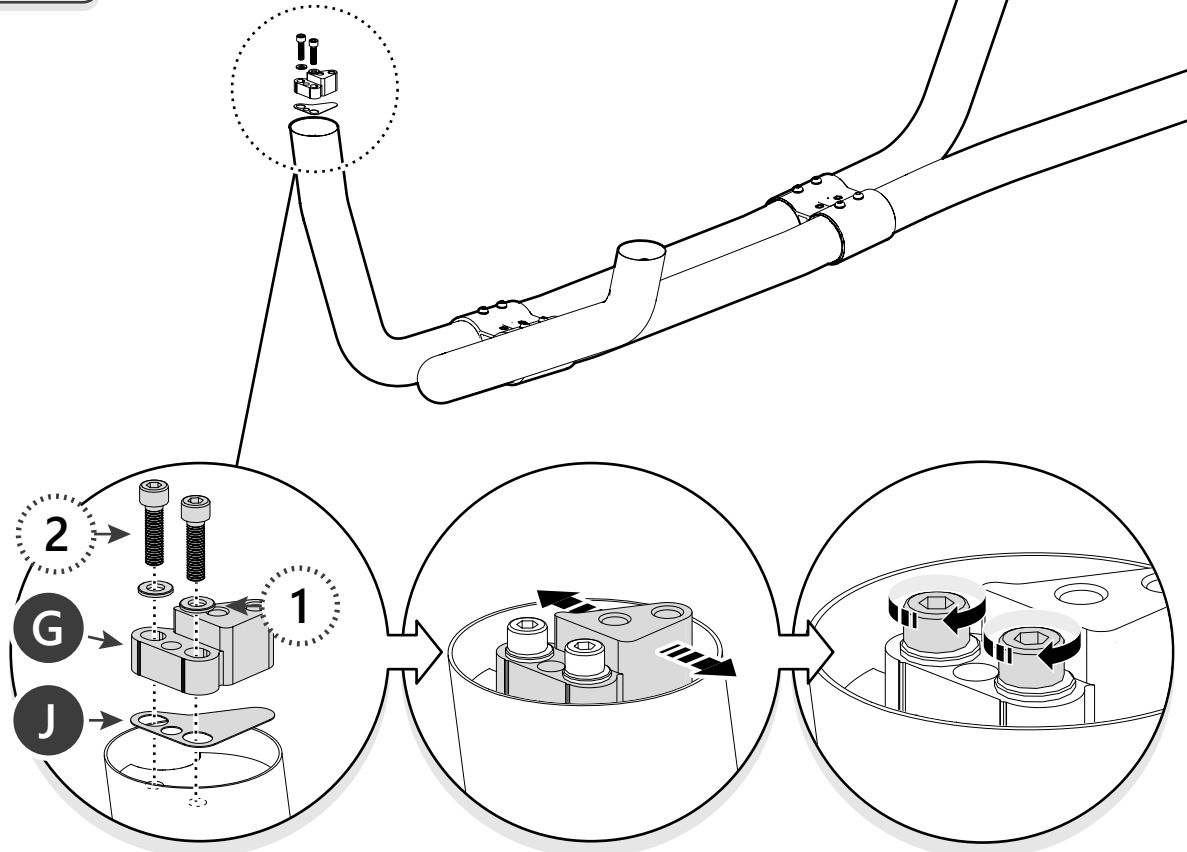

x 4

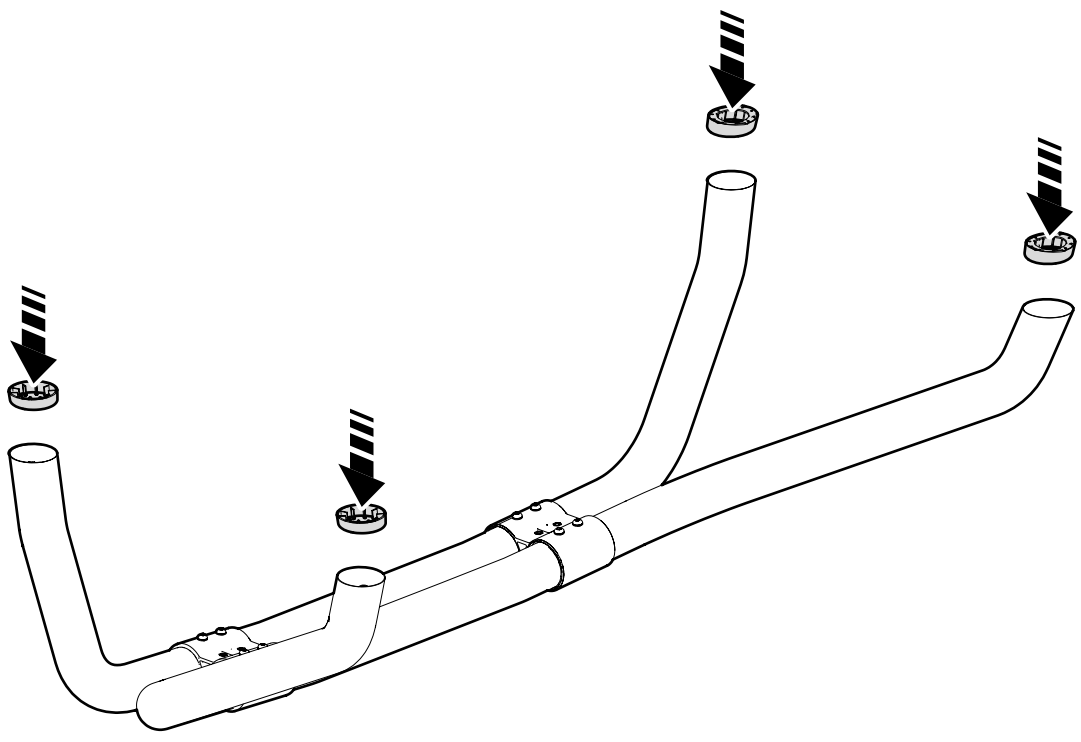


6mm

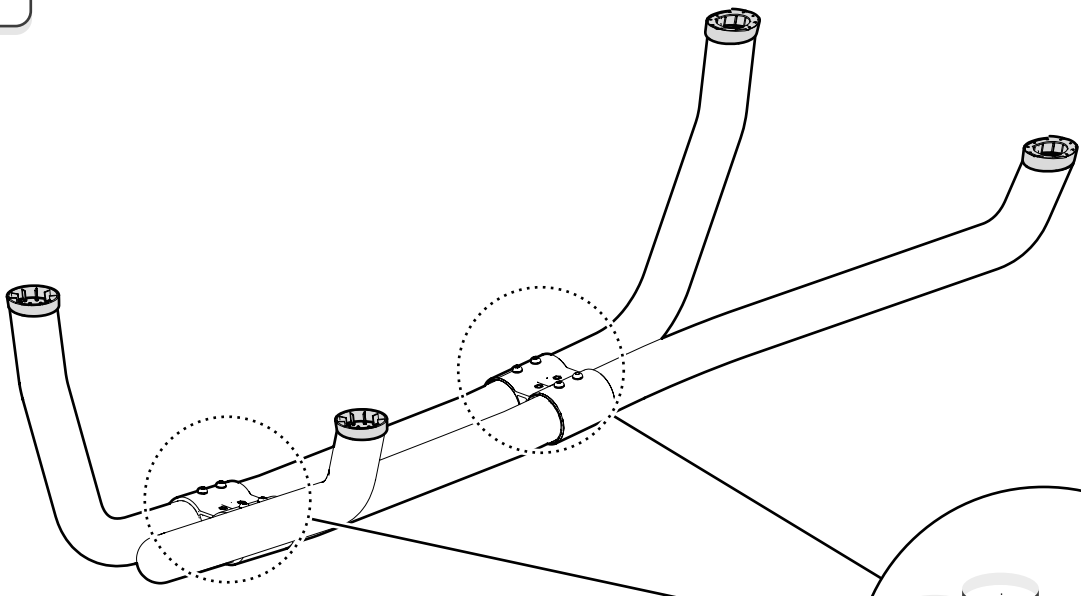




5mm

12


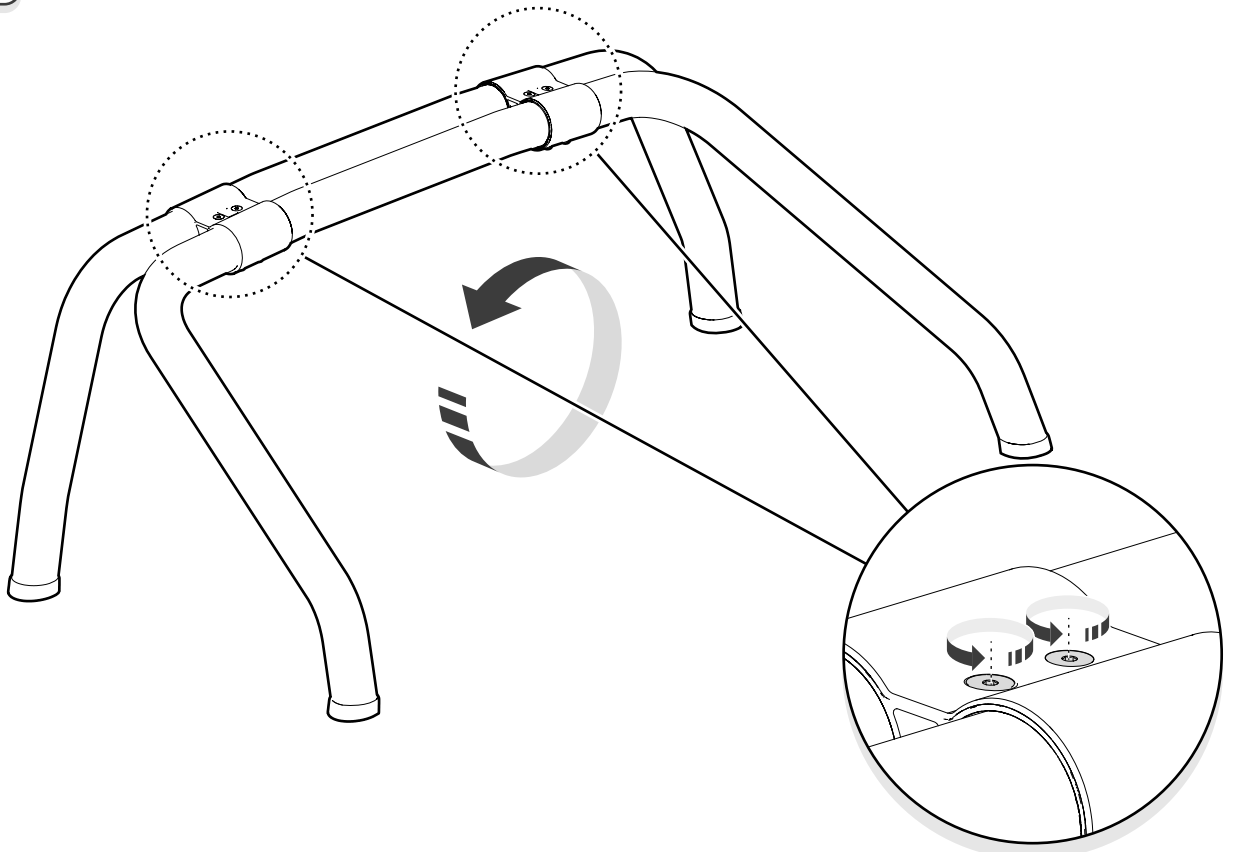


13

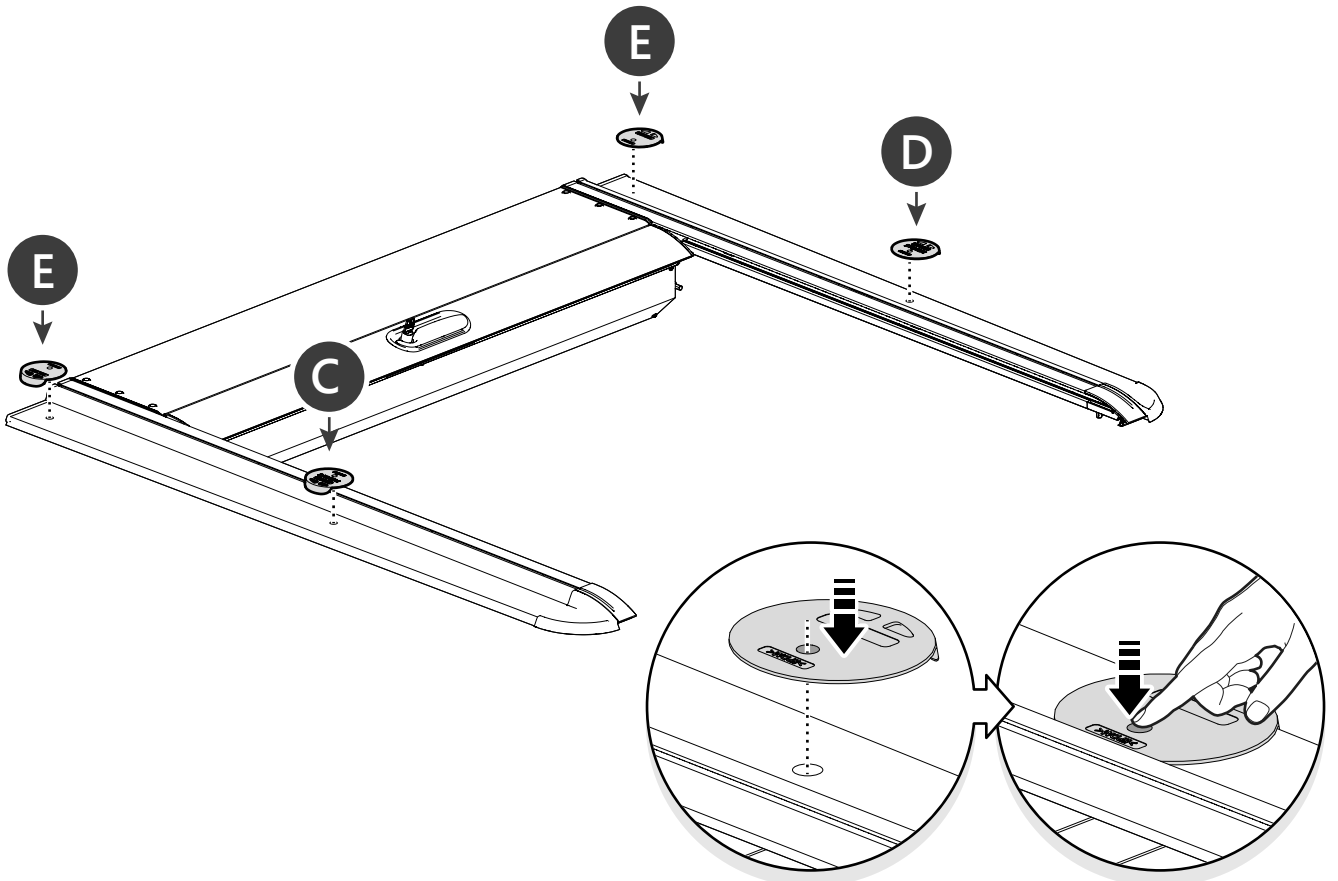


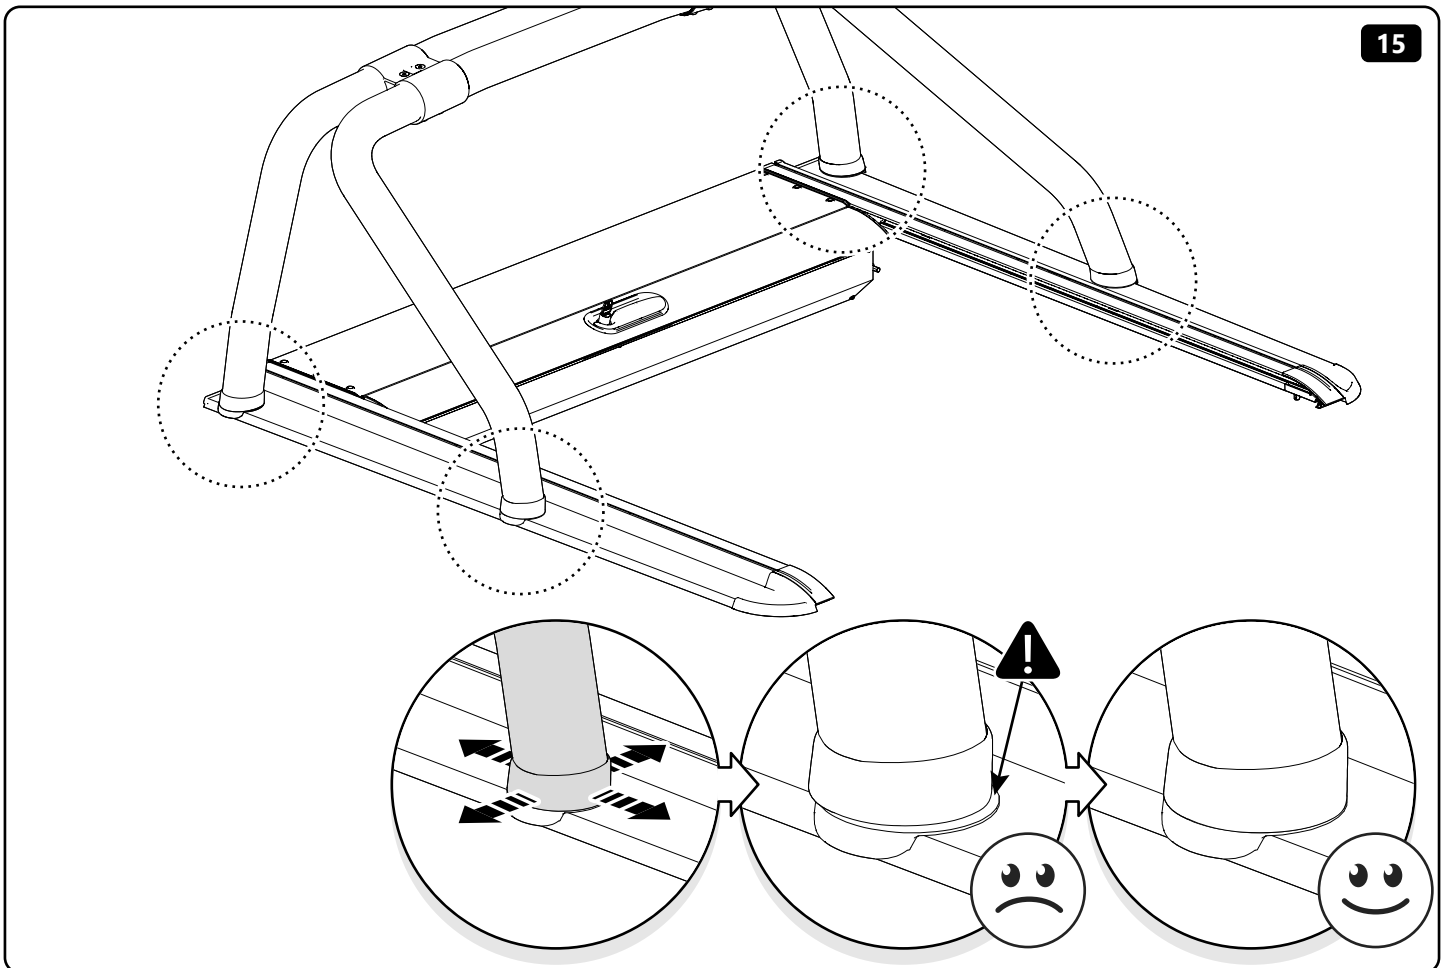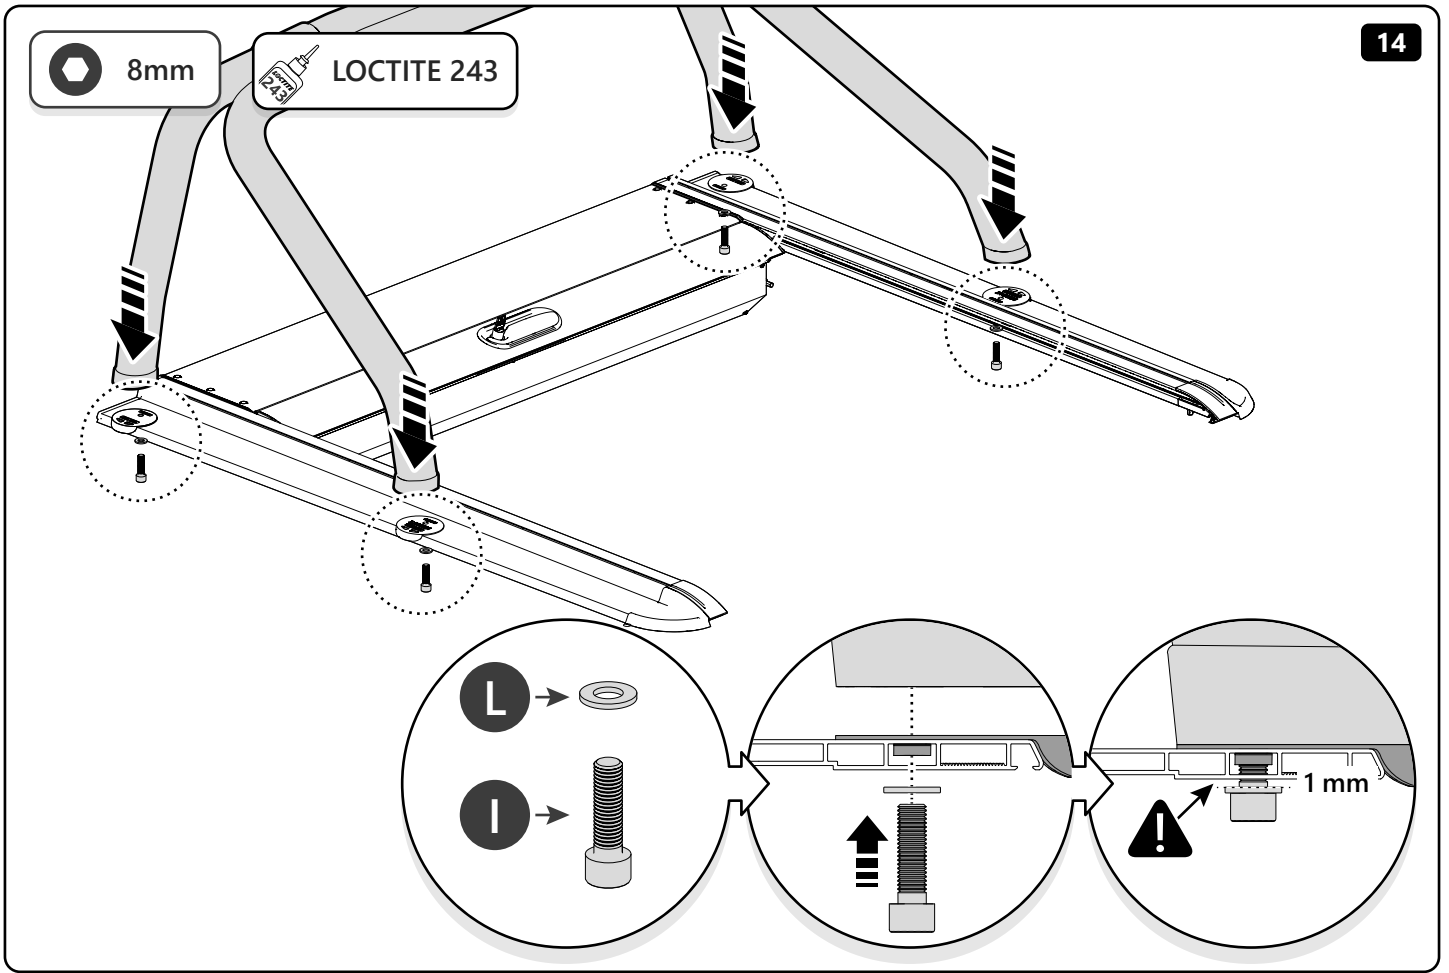

8mm 10Nm

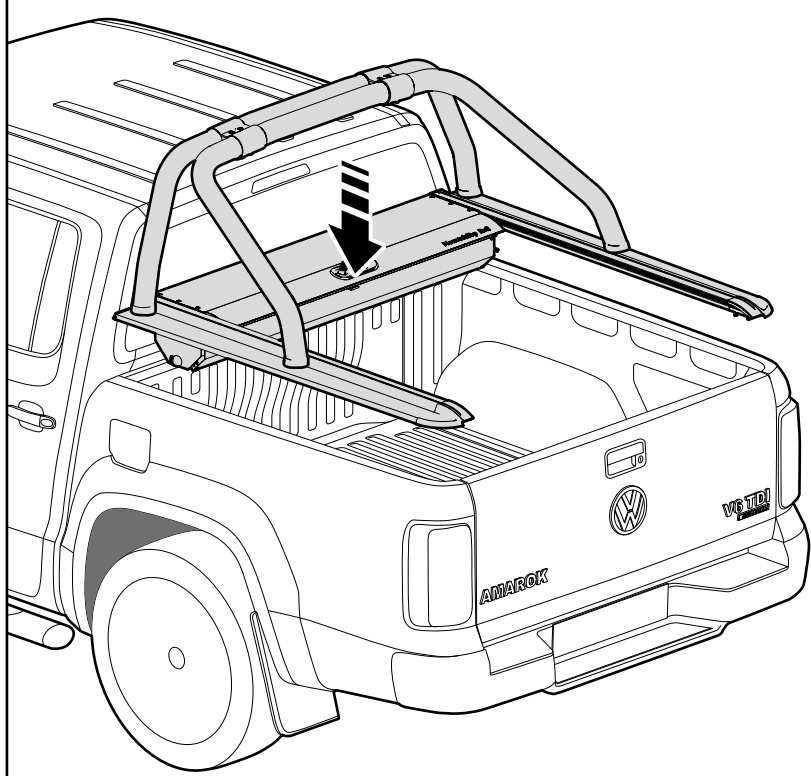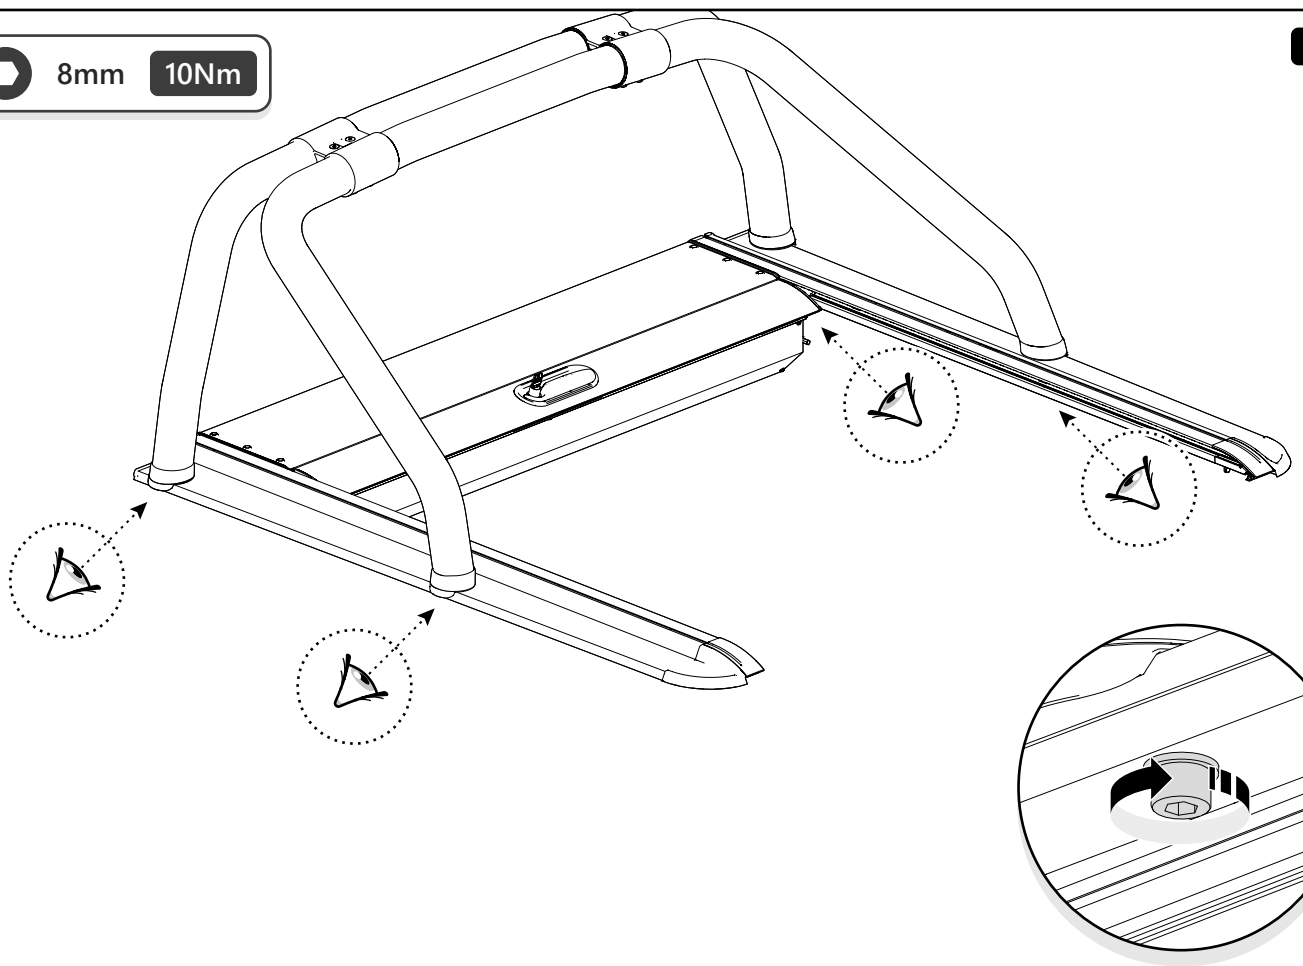


Mountain Top EVO

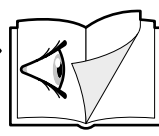

880 002

Mountain Top Roll

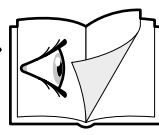





886 044
886 044-1



Télécharger notice produit



5mm 2Nm 6mm 20Nm

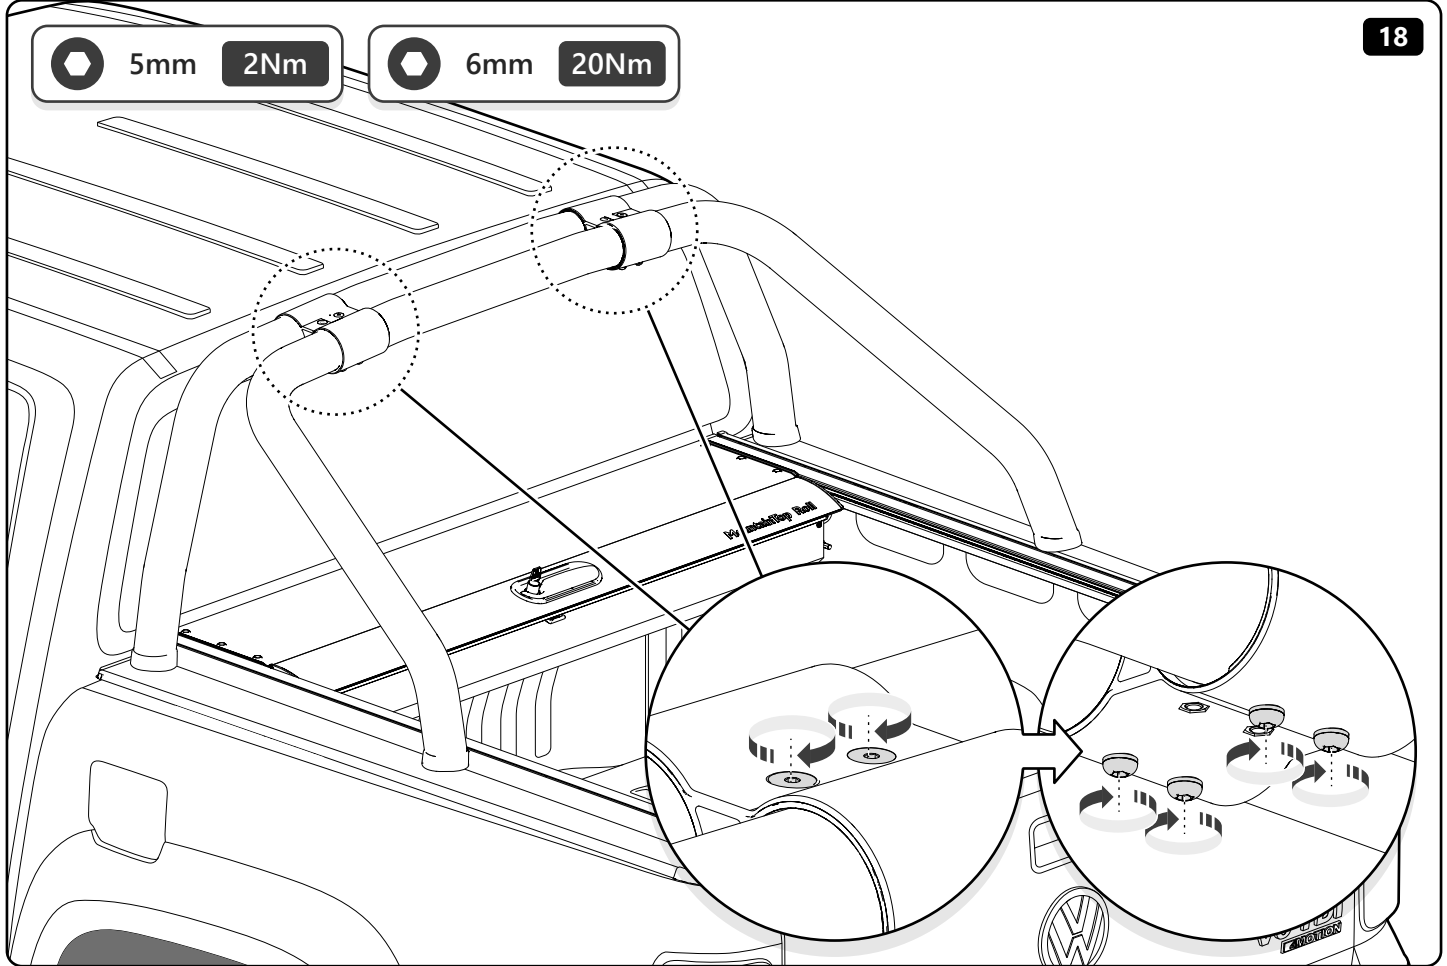

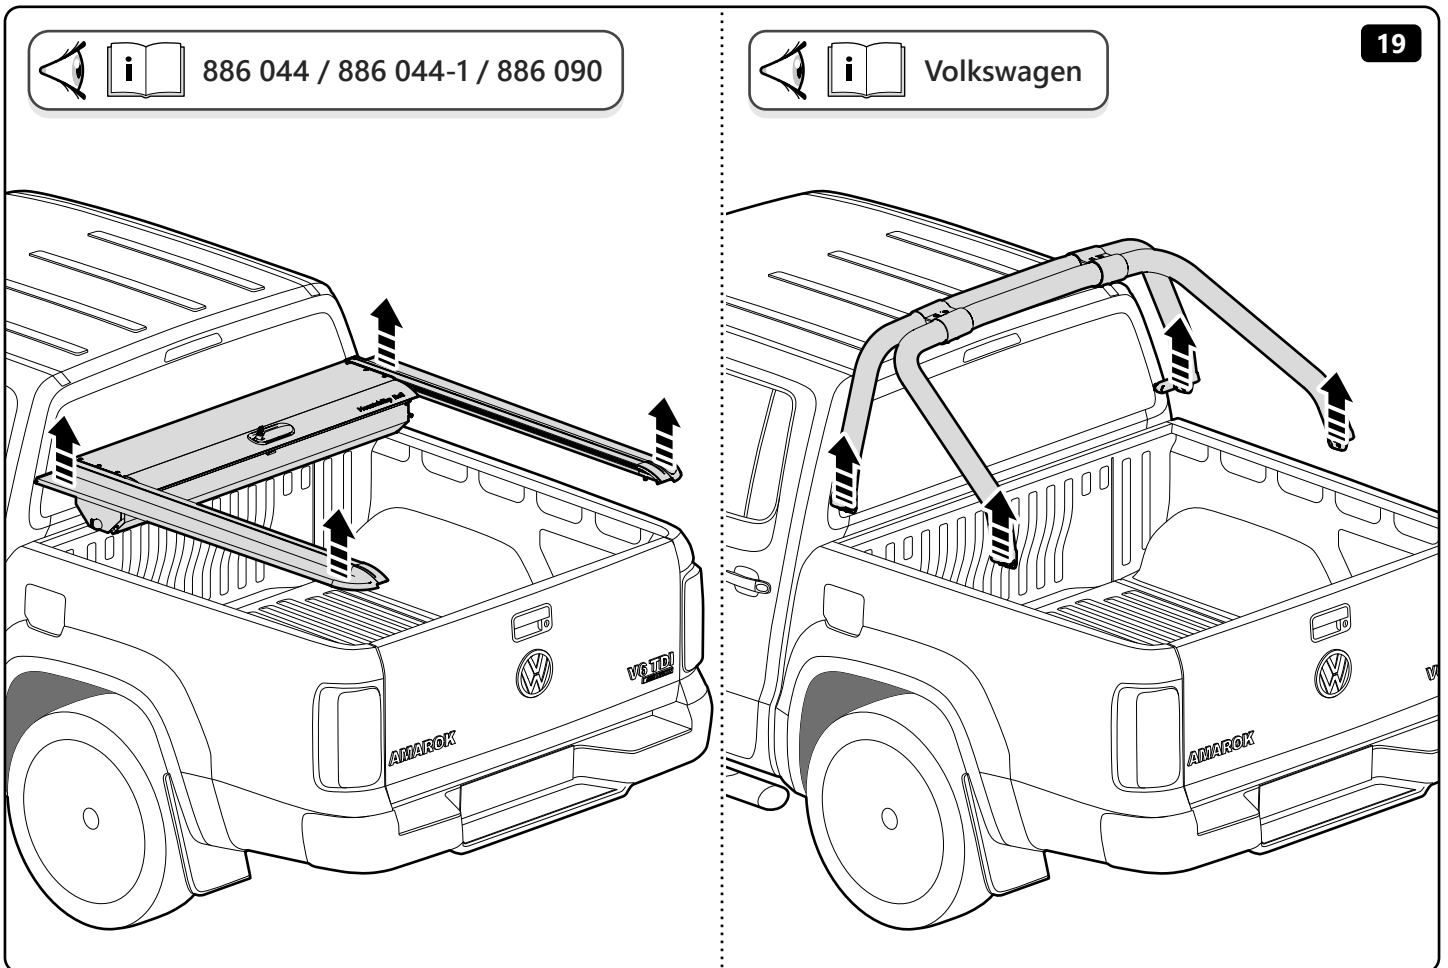
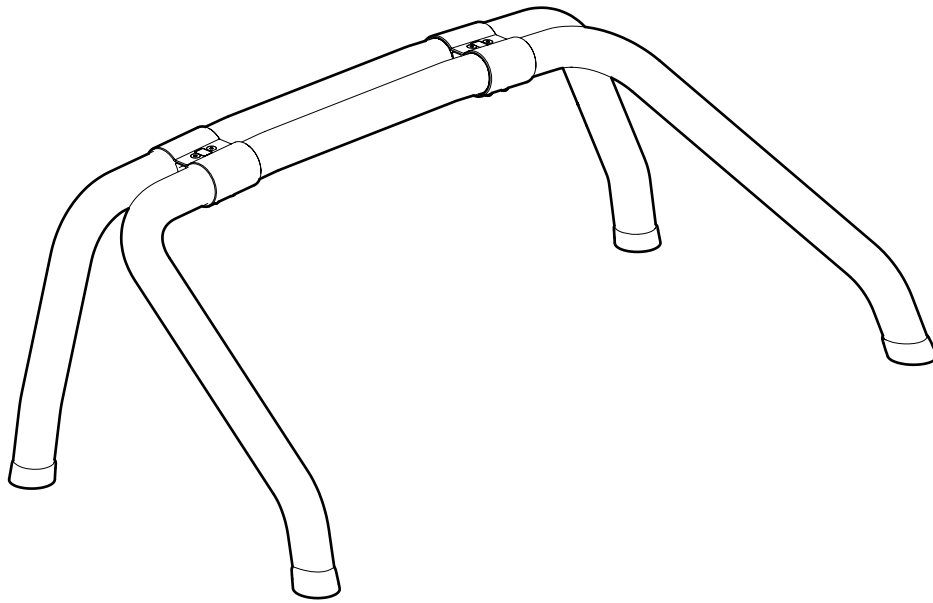



Ø 3,5 + 14mm

! Anti-rouille

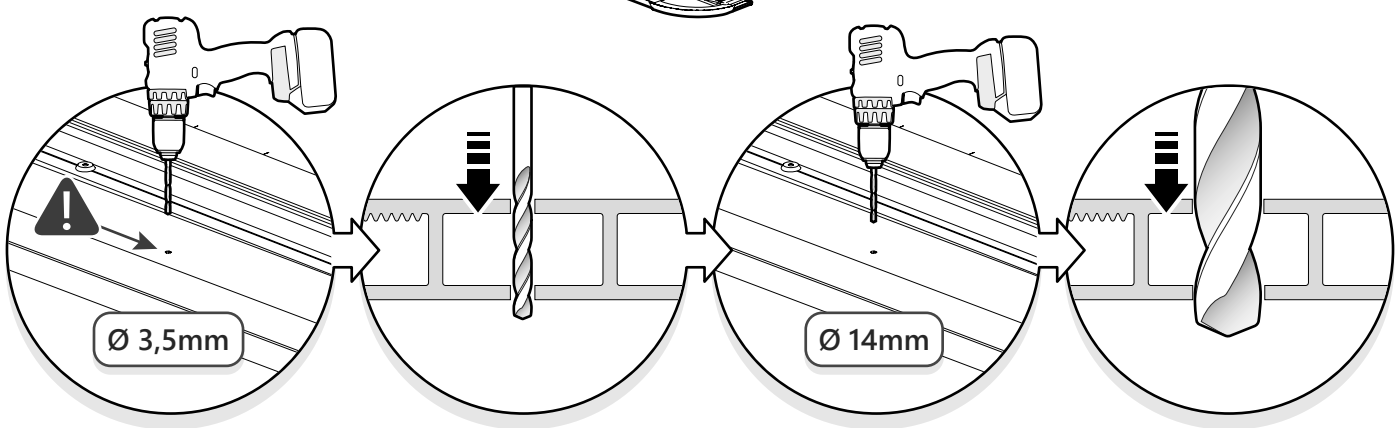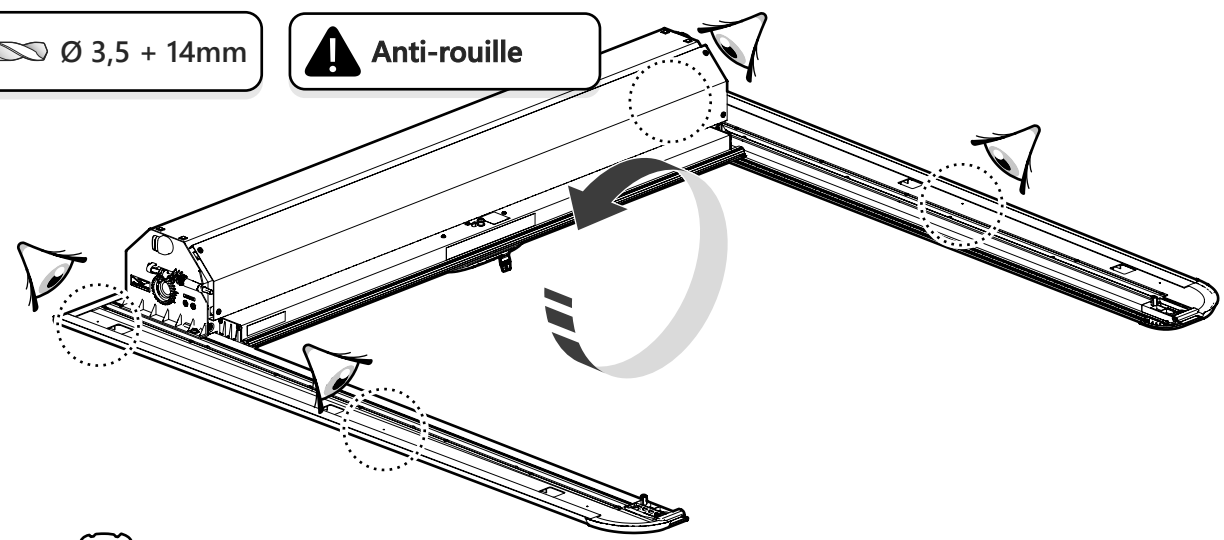


6mm

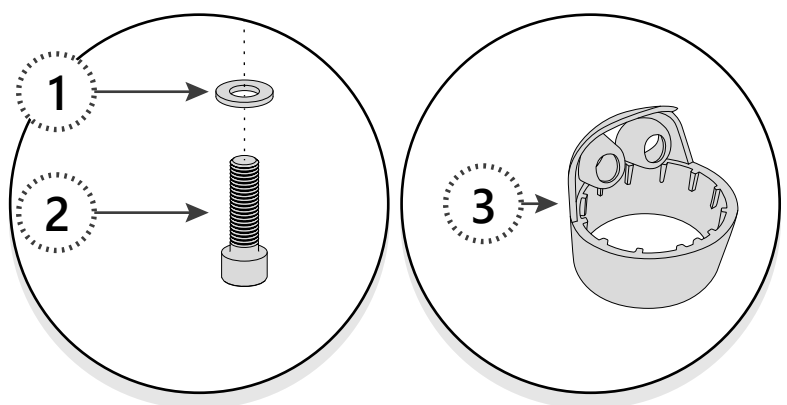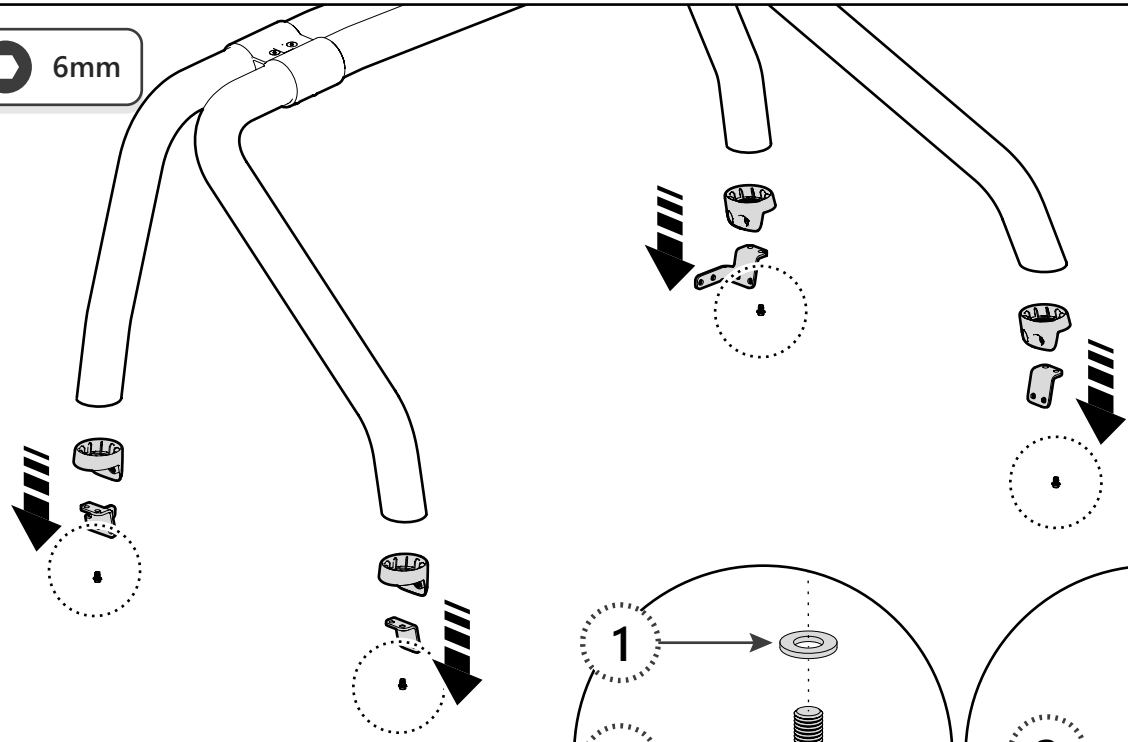


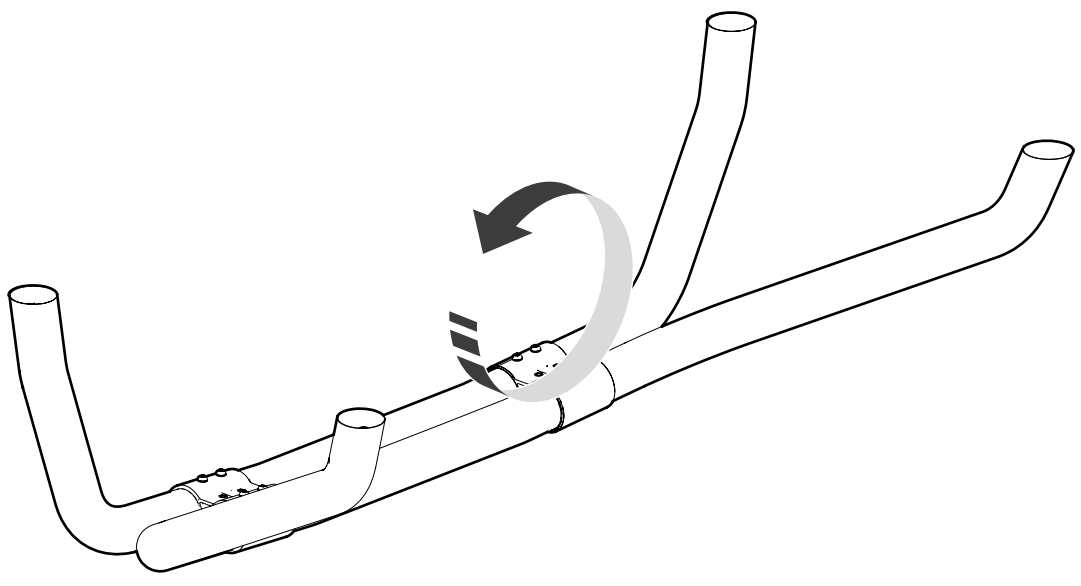


6mm 26Nm

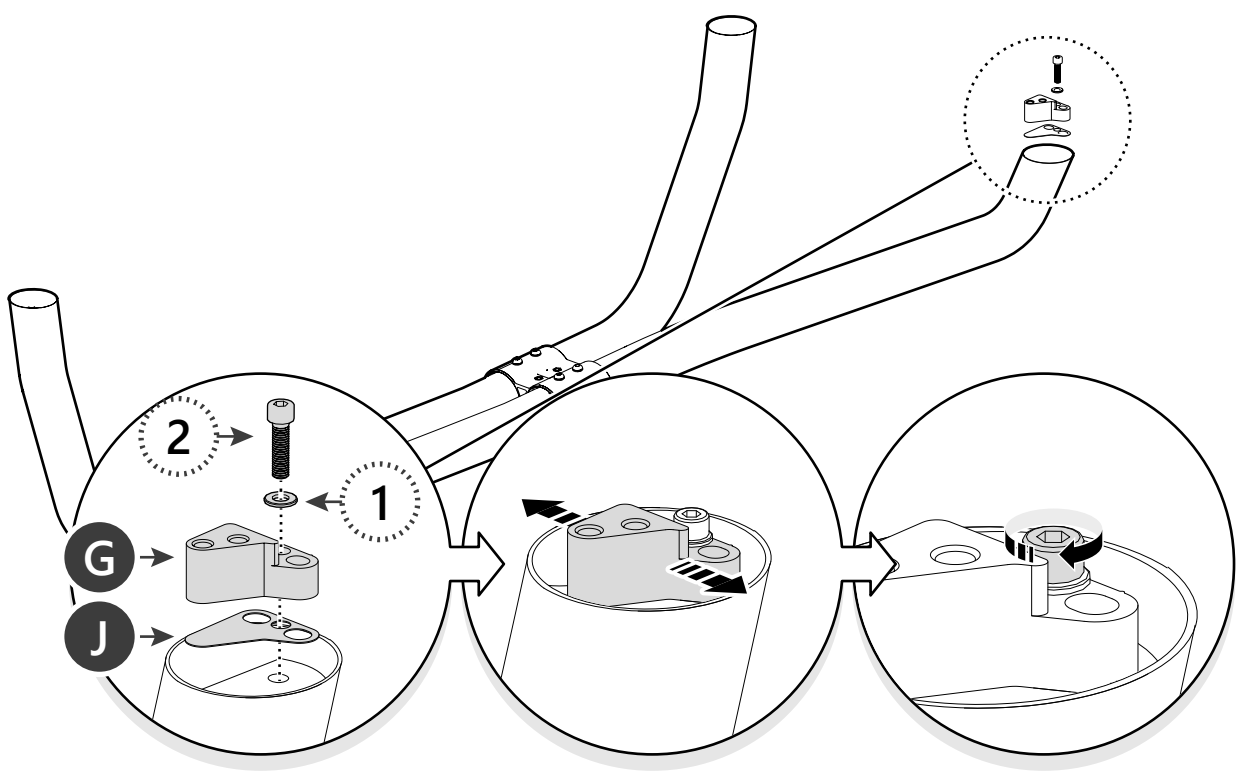




6mm 26Nm

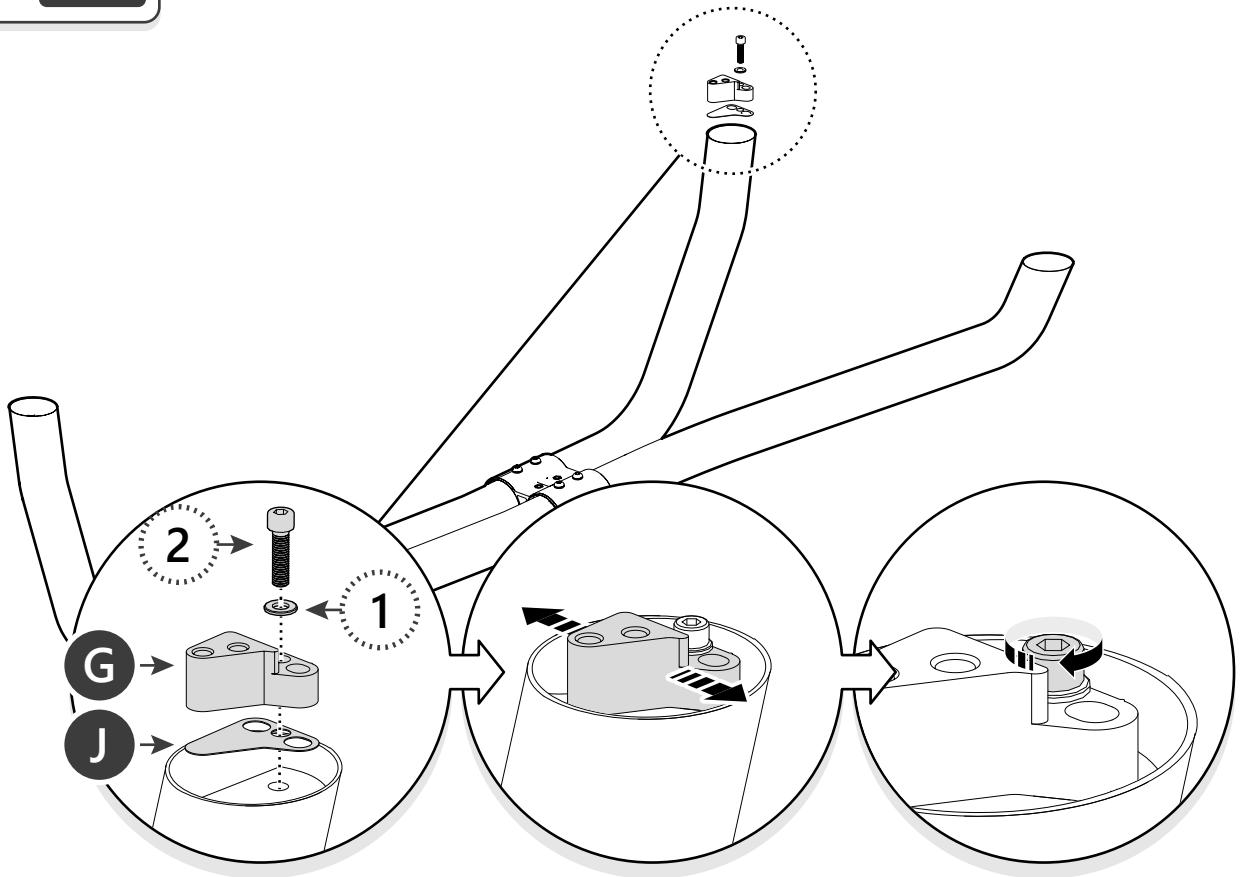


6mm 26Nm

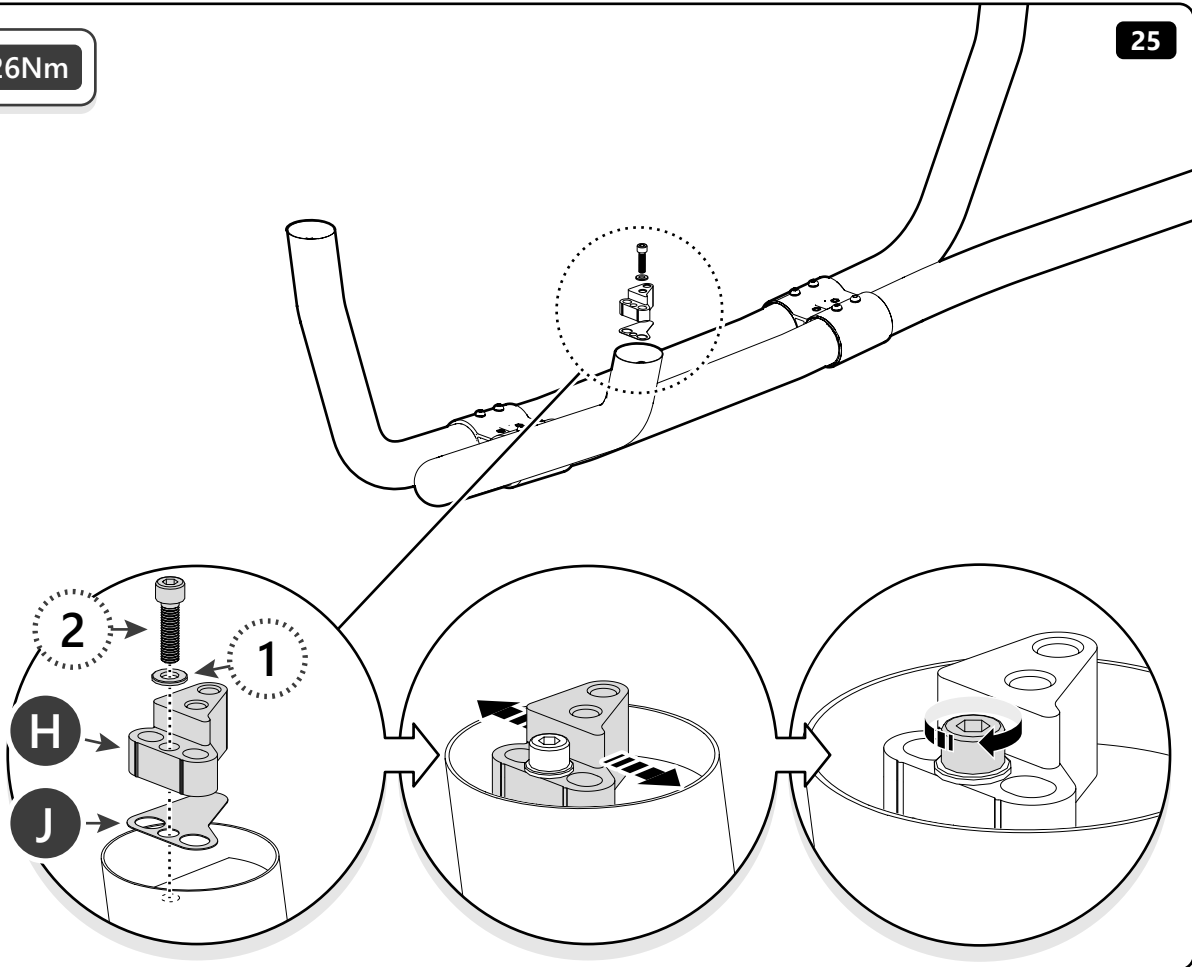


6mm 26Nm

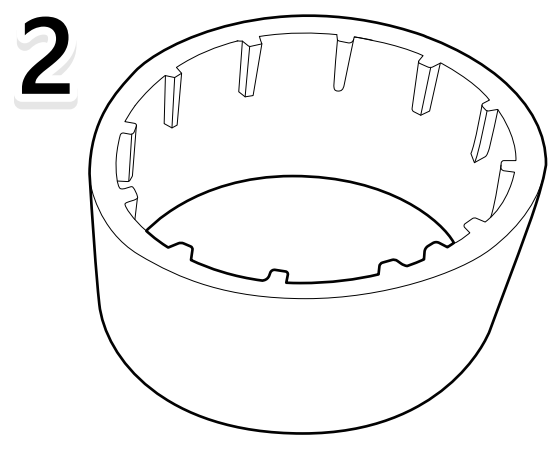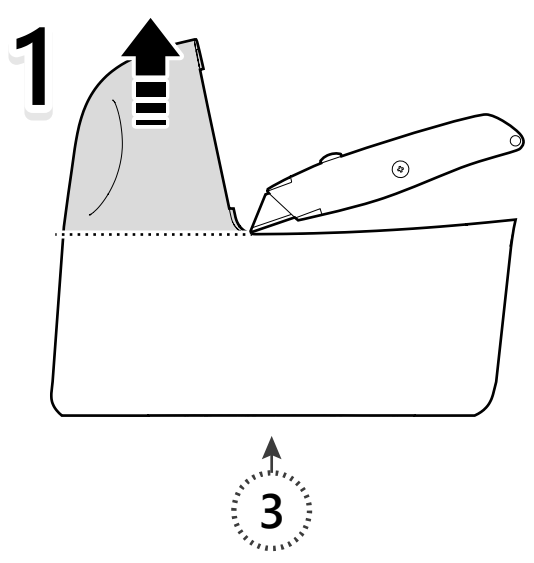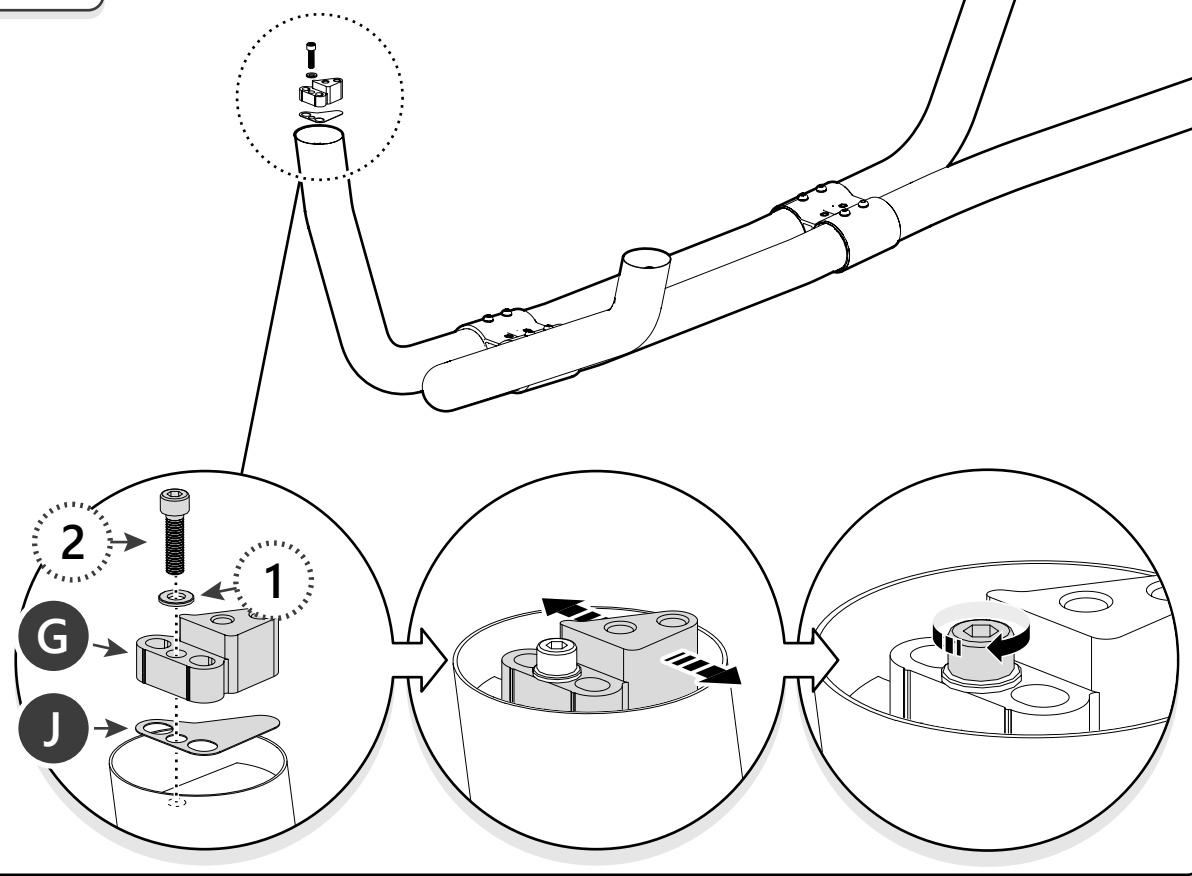

x 4

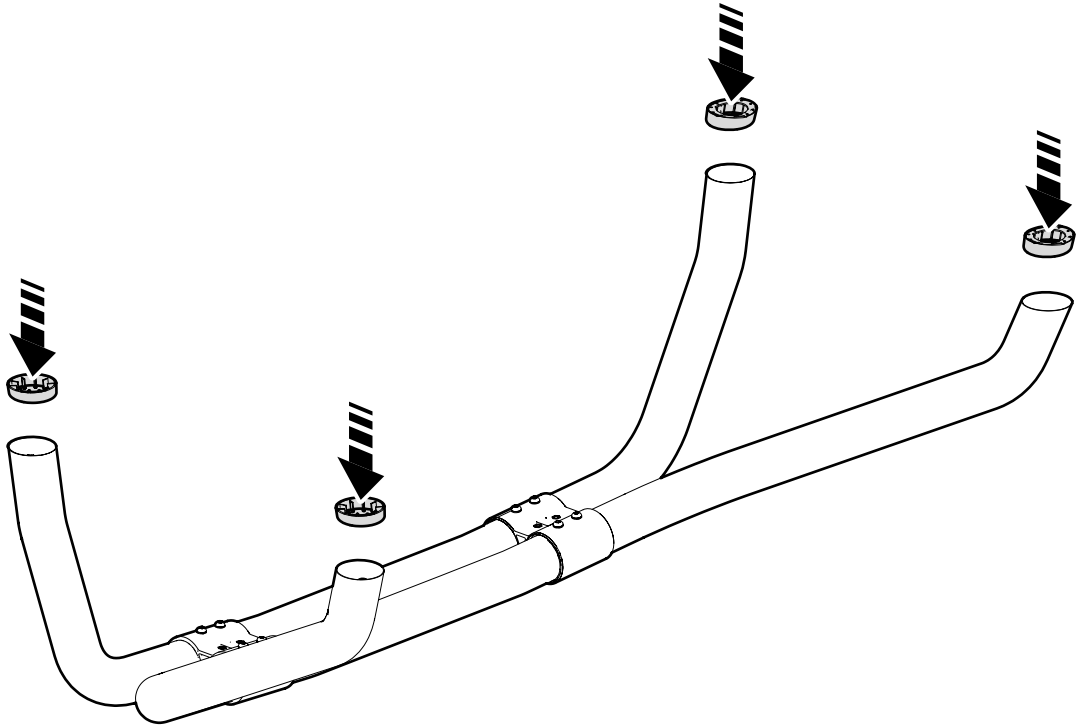


 6mm

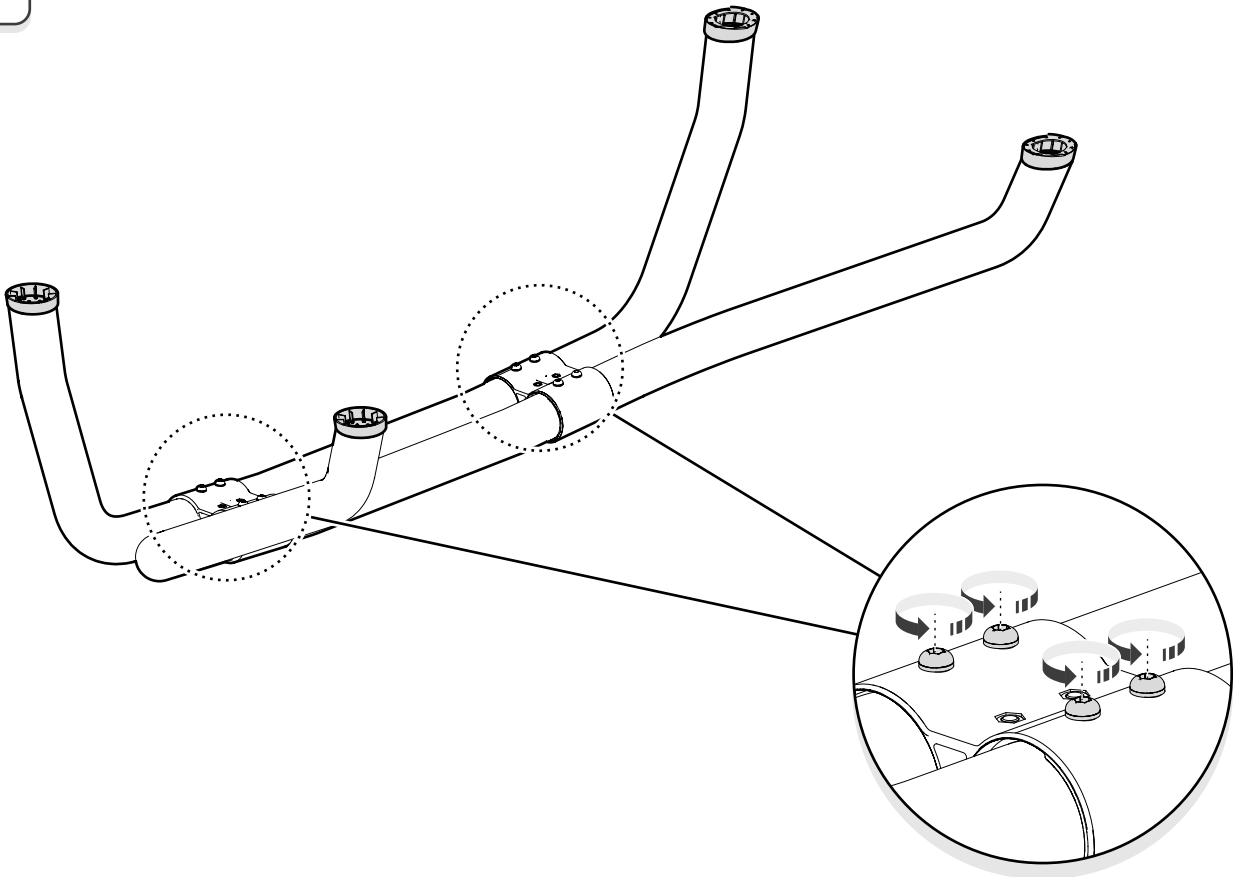


5mm





30

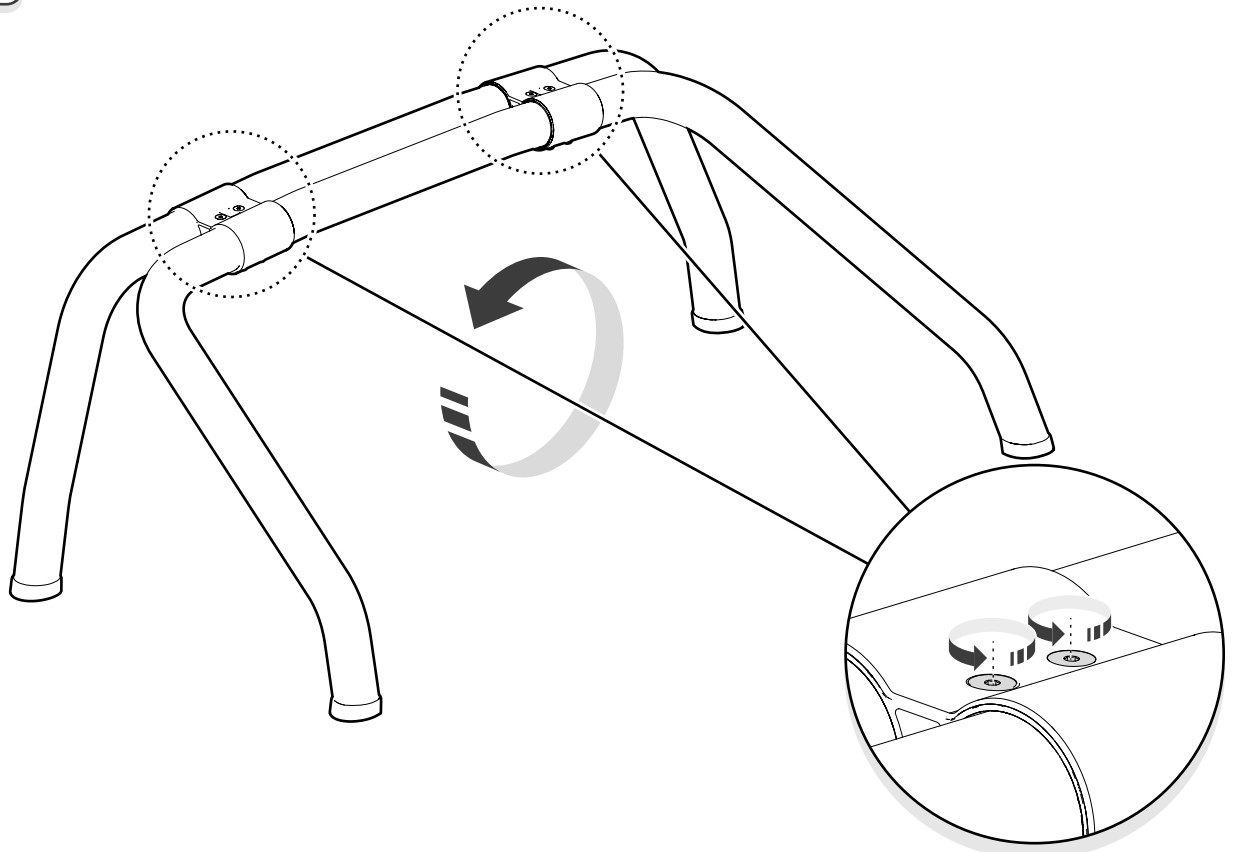



31

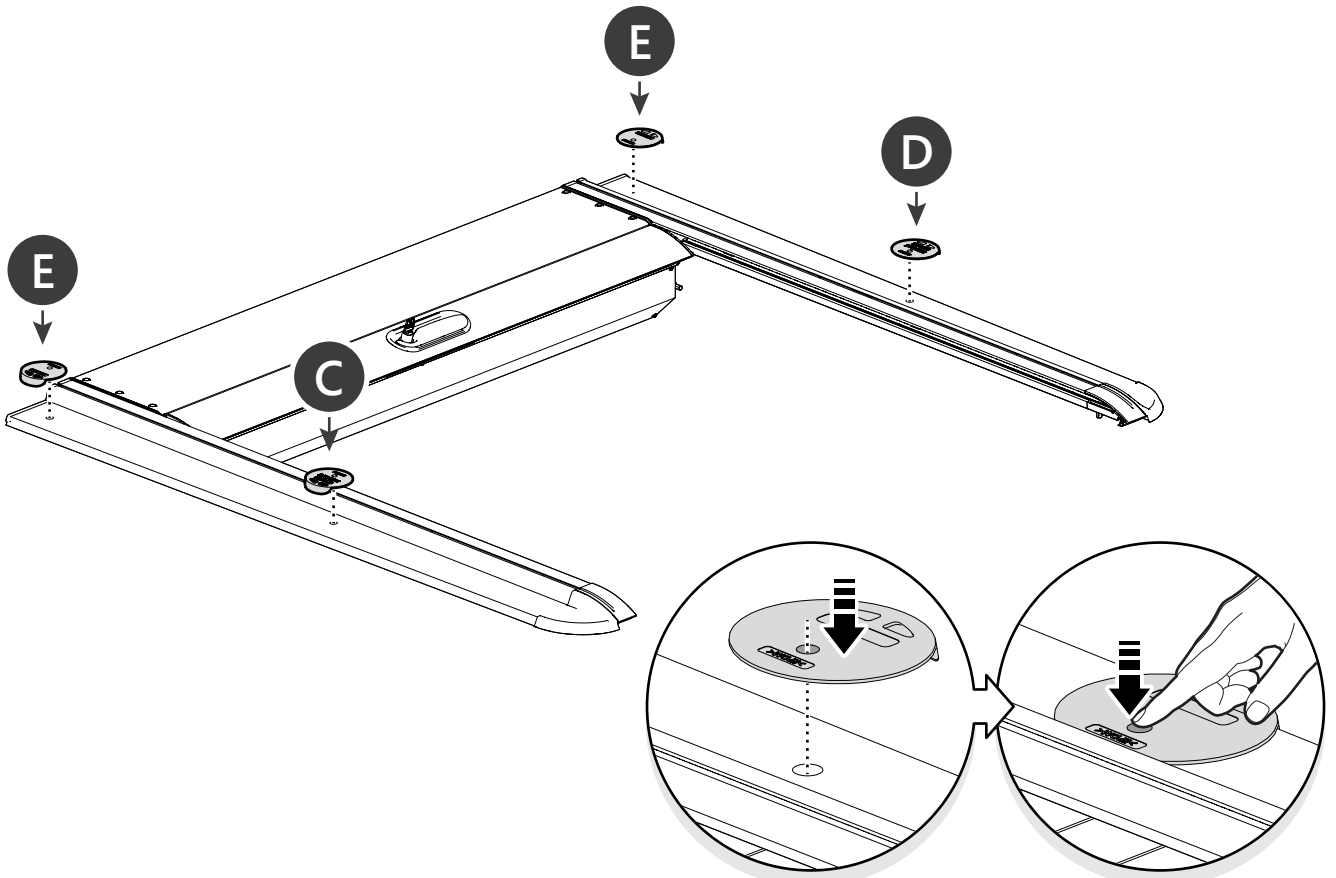


8mm
LOCTITE 243

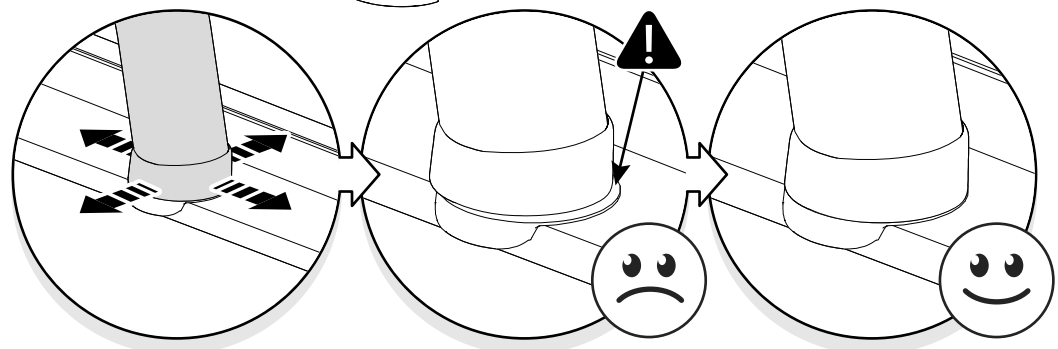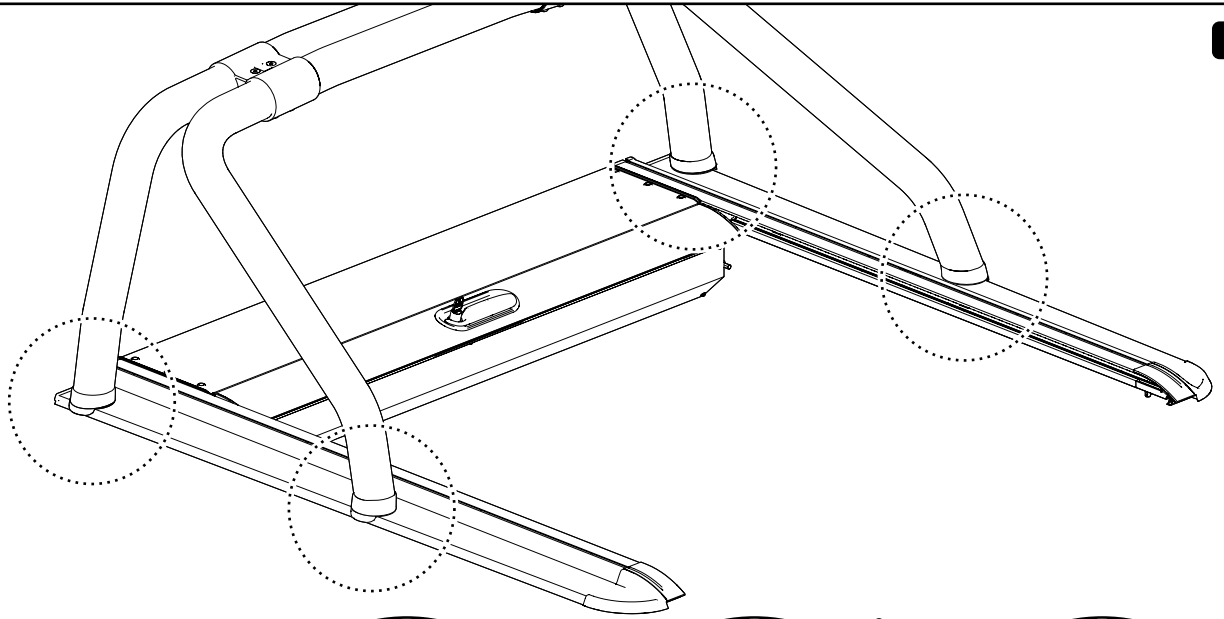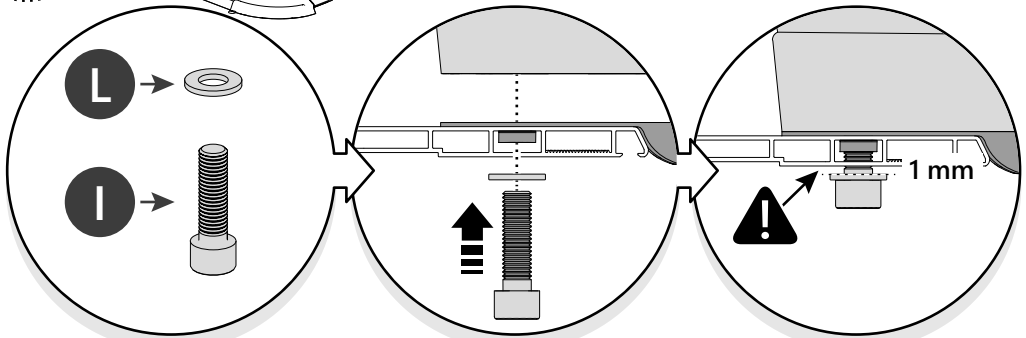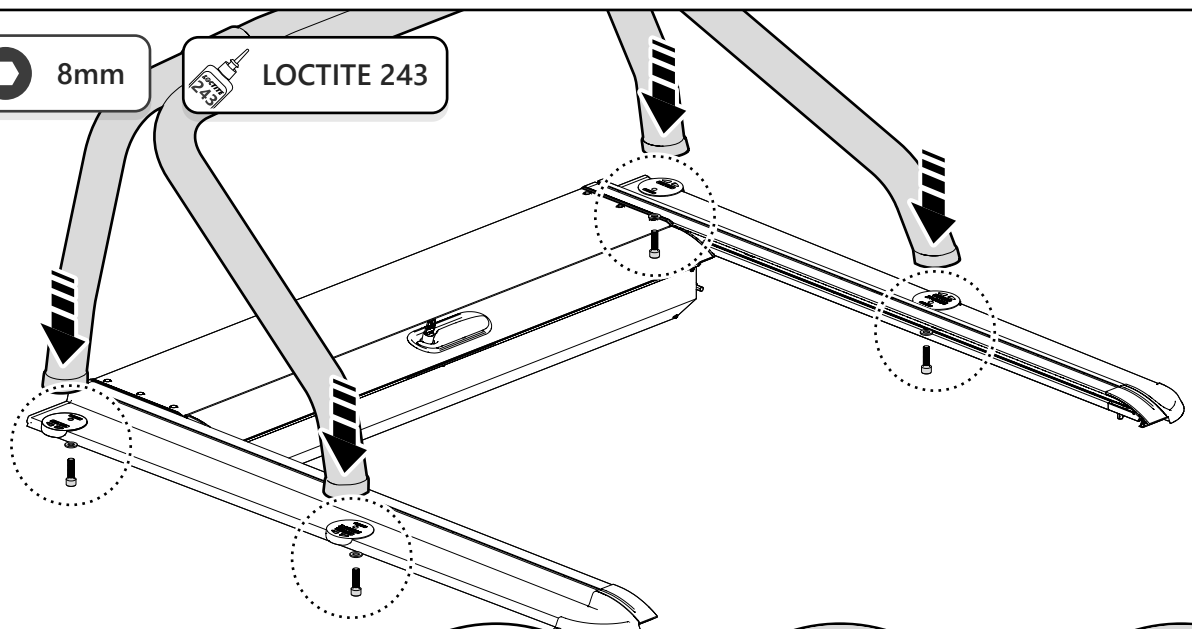

8mm 10Nm

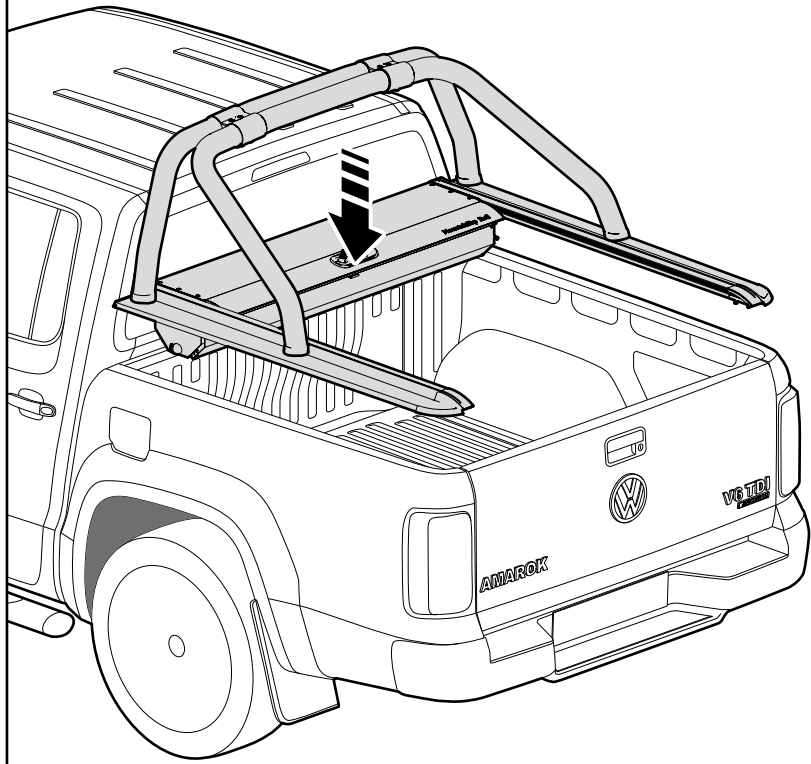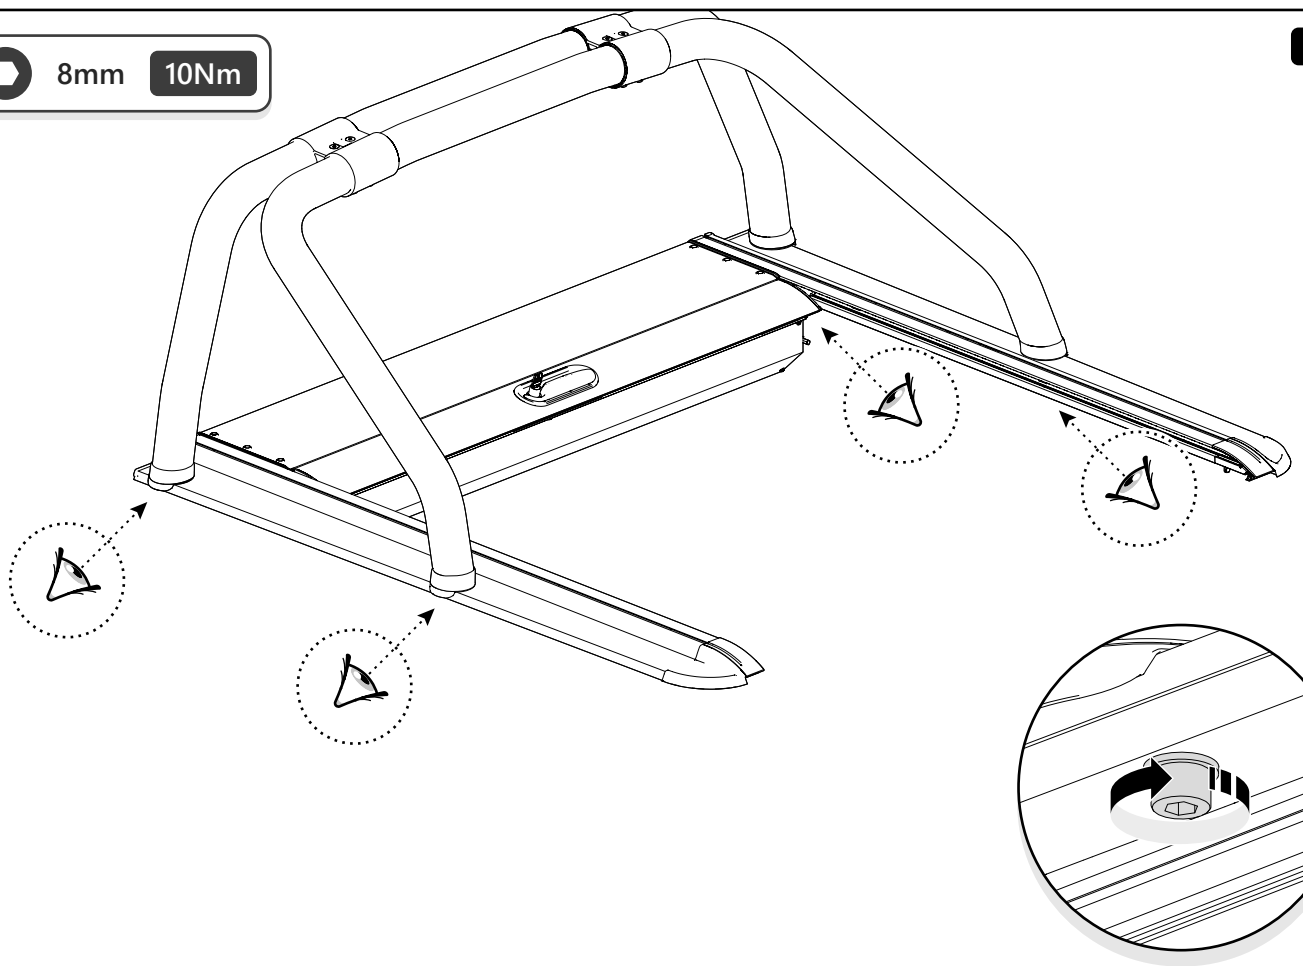


Mountain Top EVO

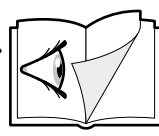

880 002

Mountain Top Roll

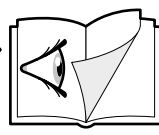


886 044
886 044-1






Télécharger notice produit

5mm 2Nm



6mm 20Nm

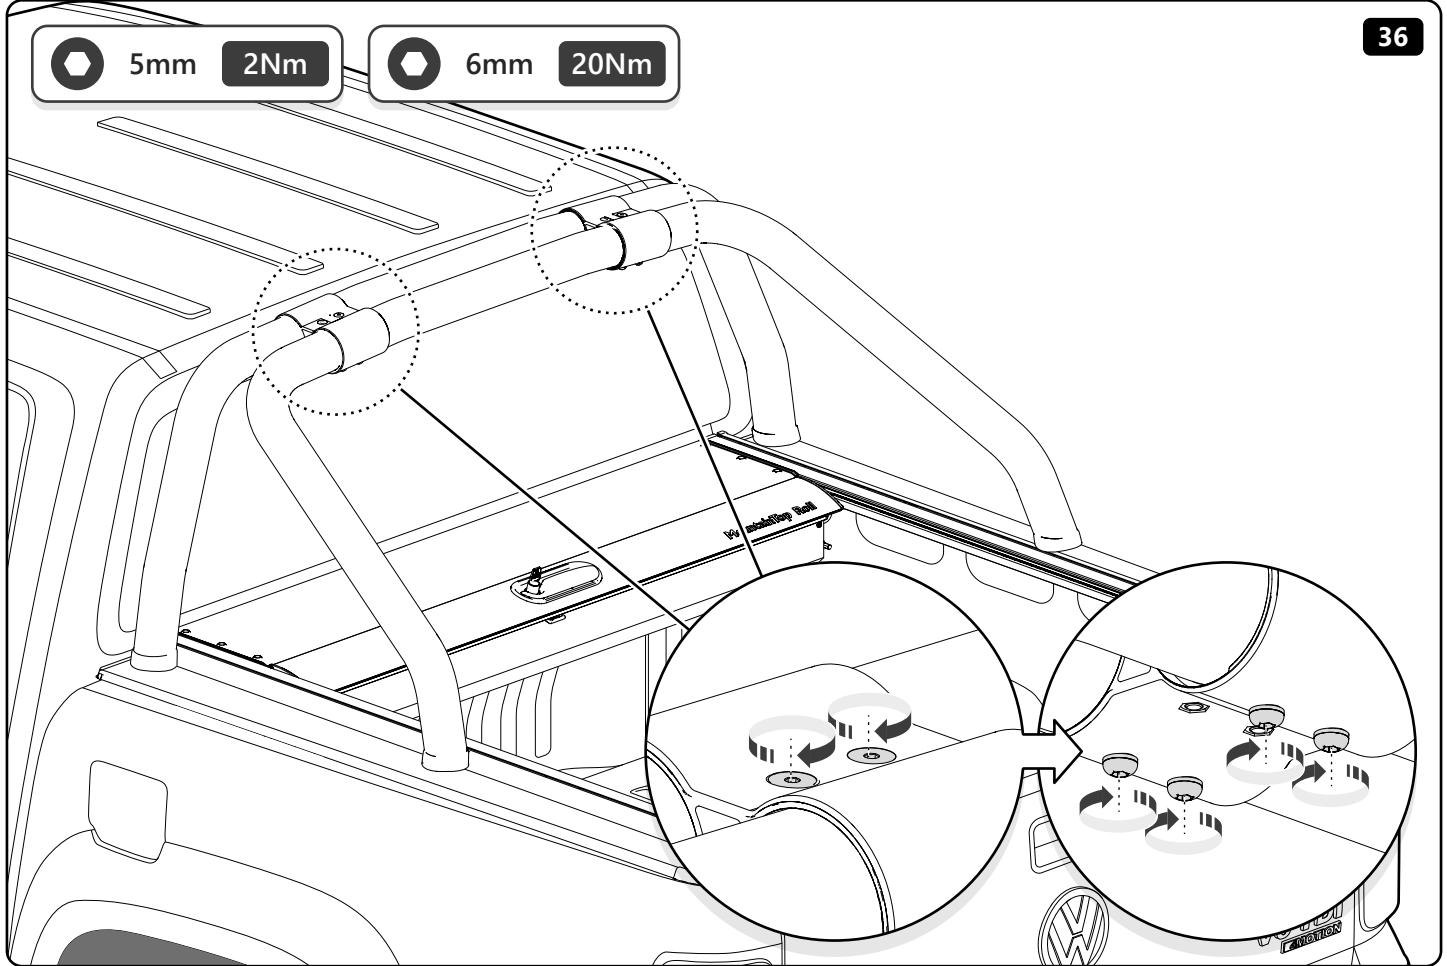

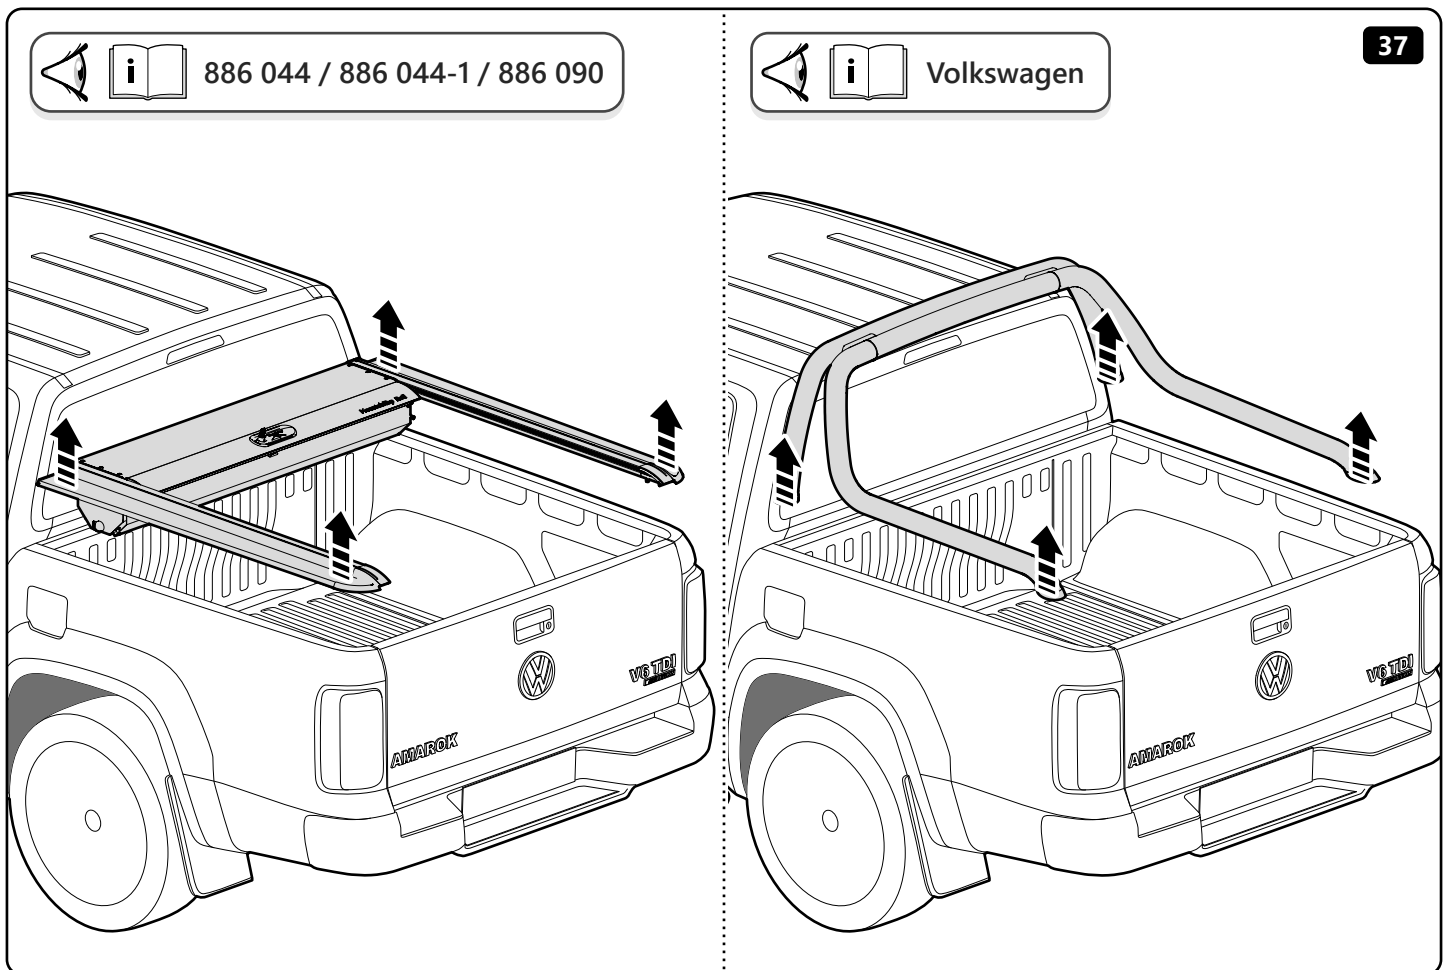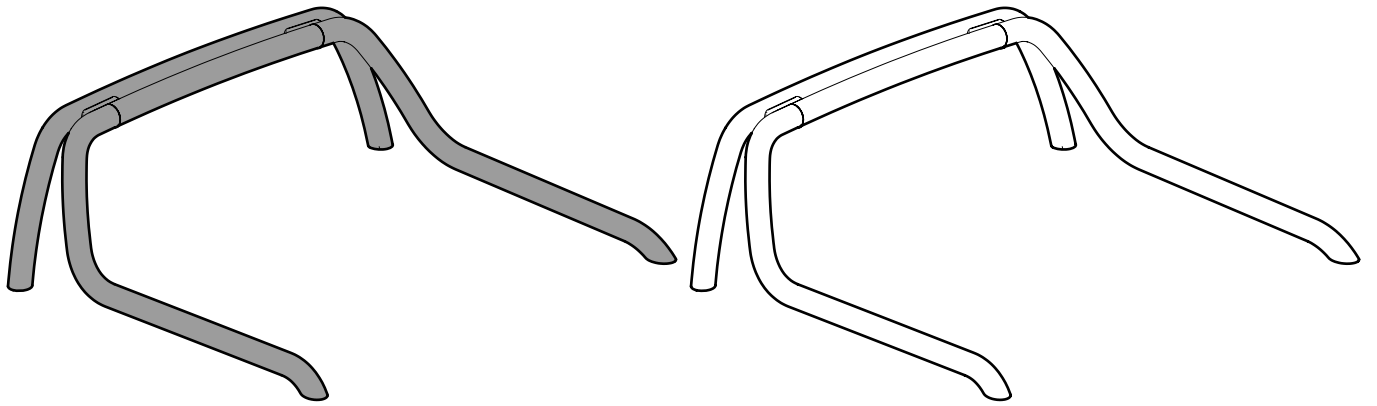



Ø 3,5 + 14mm

! Anti-rouille

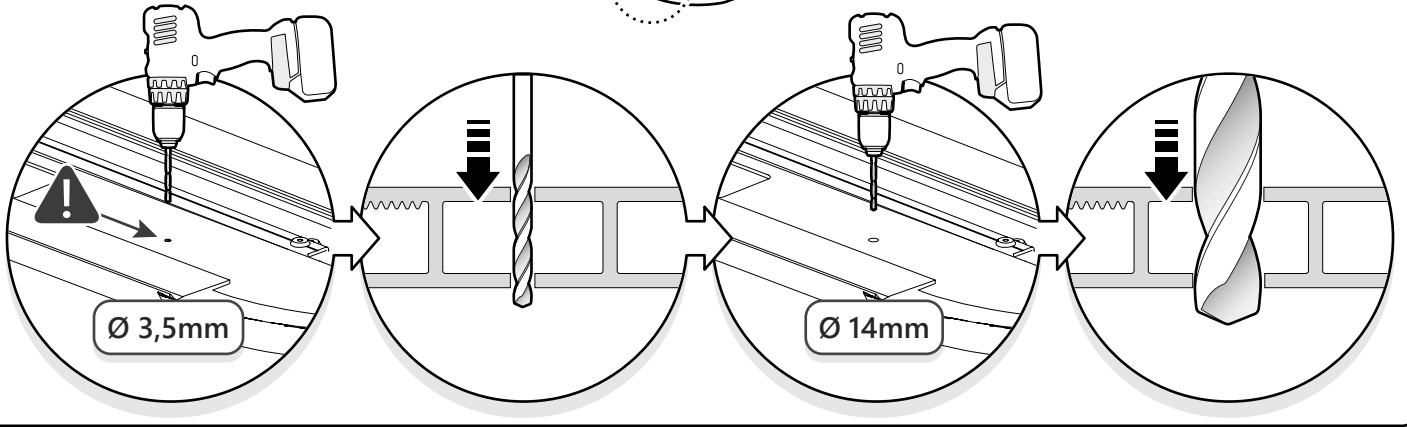
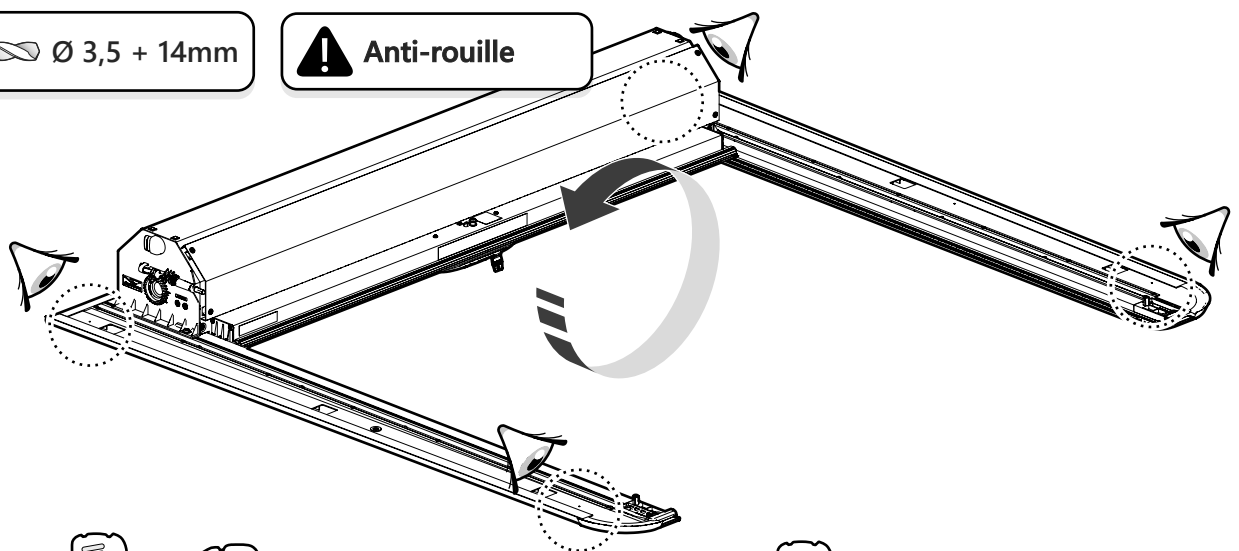


6mm

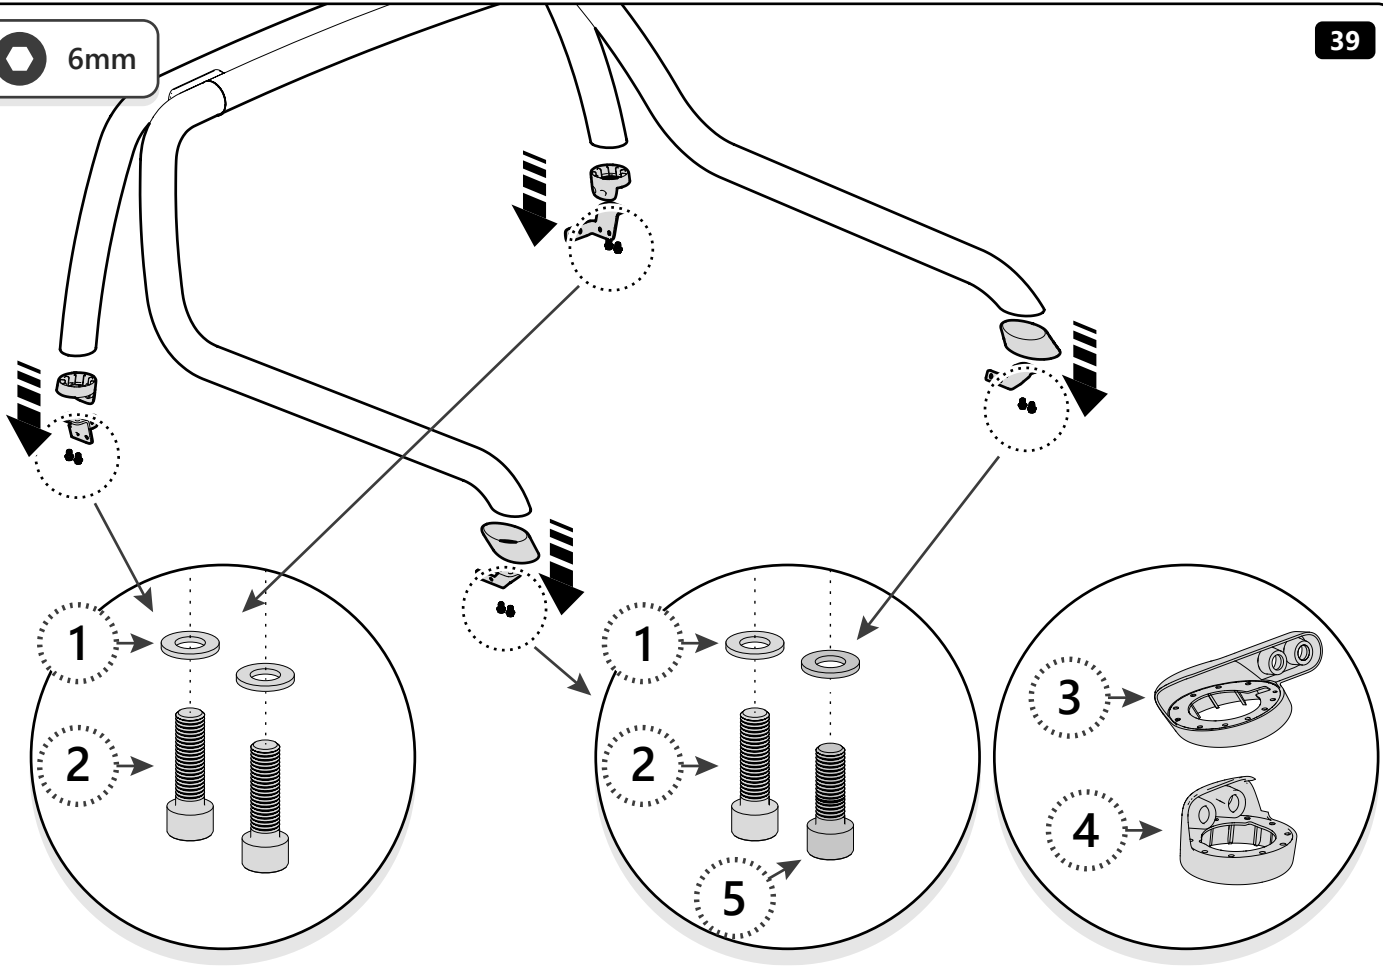


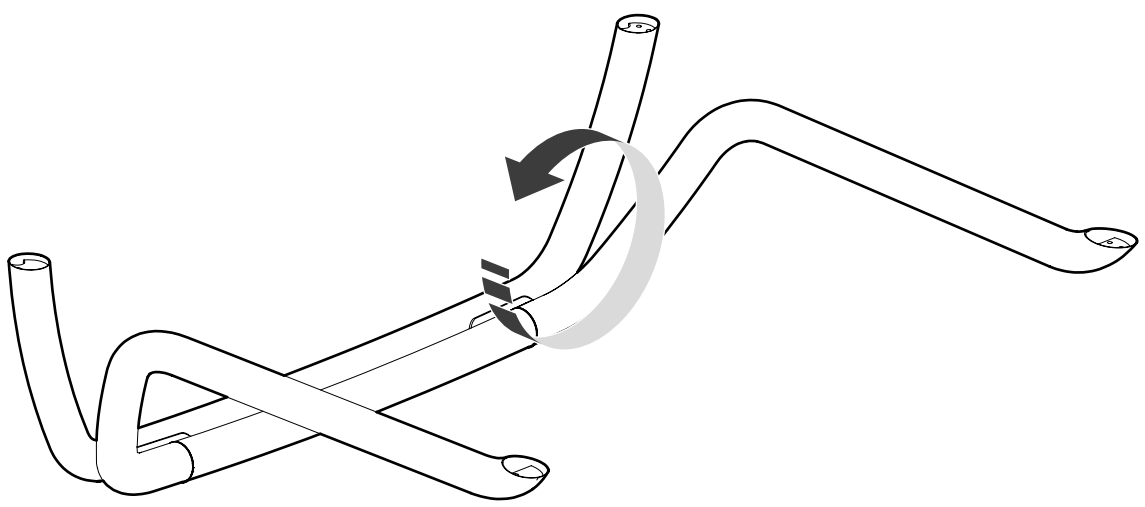


6mm 26Nm

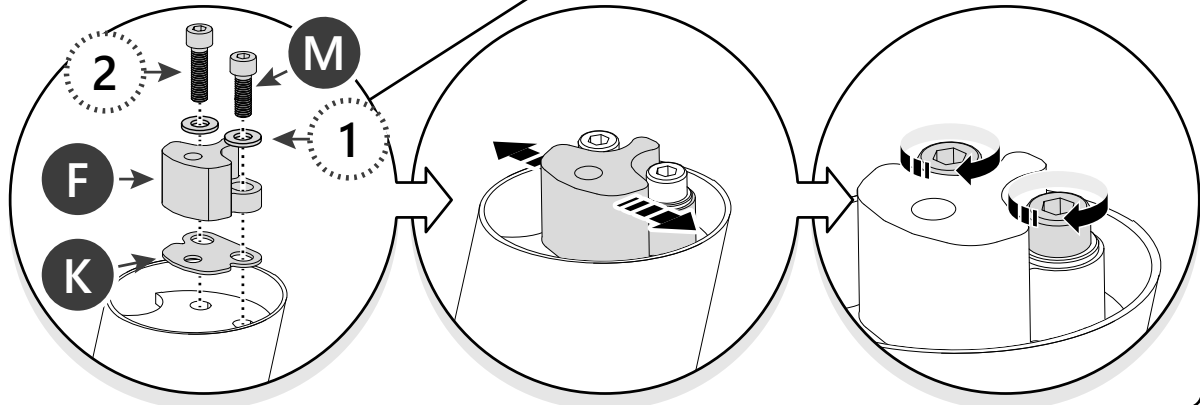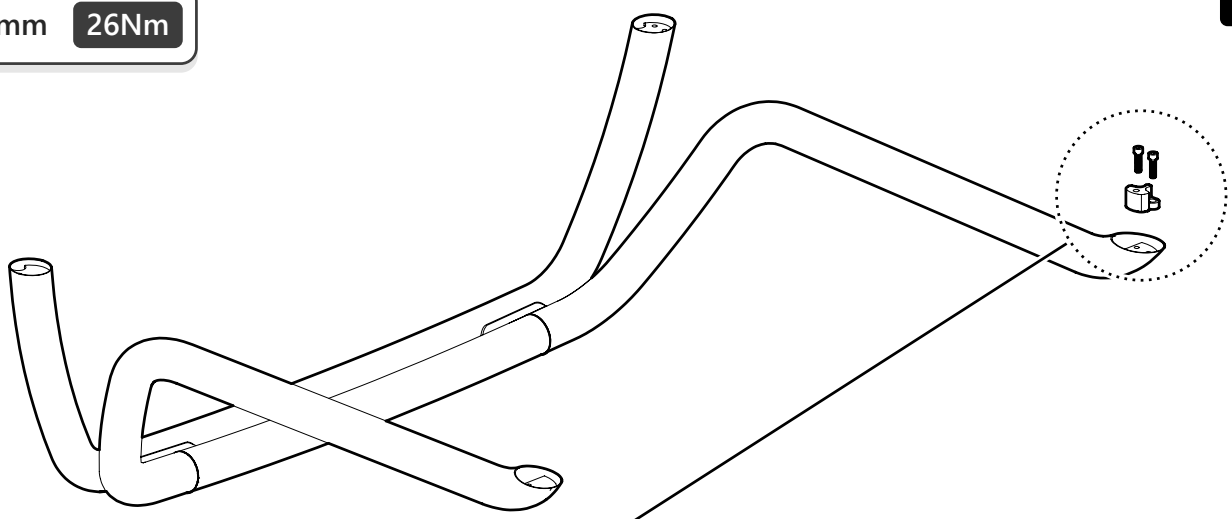



6mm 26Nm

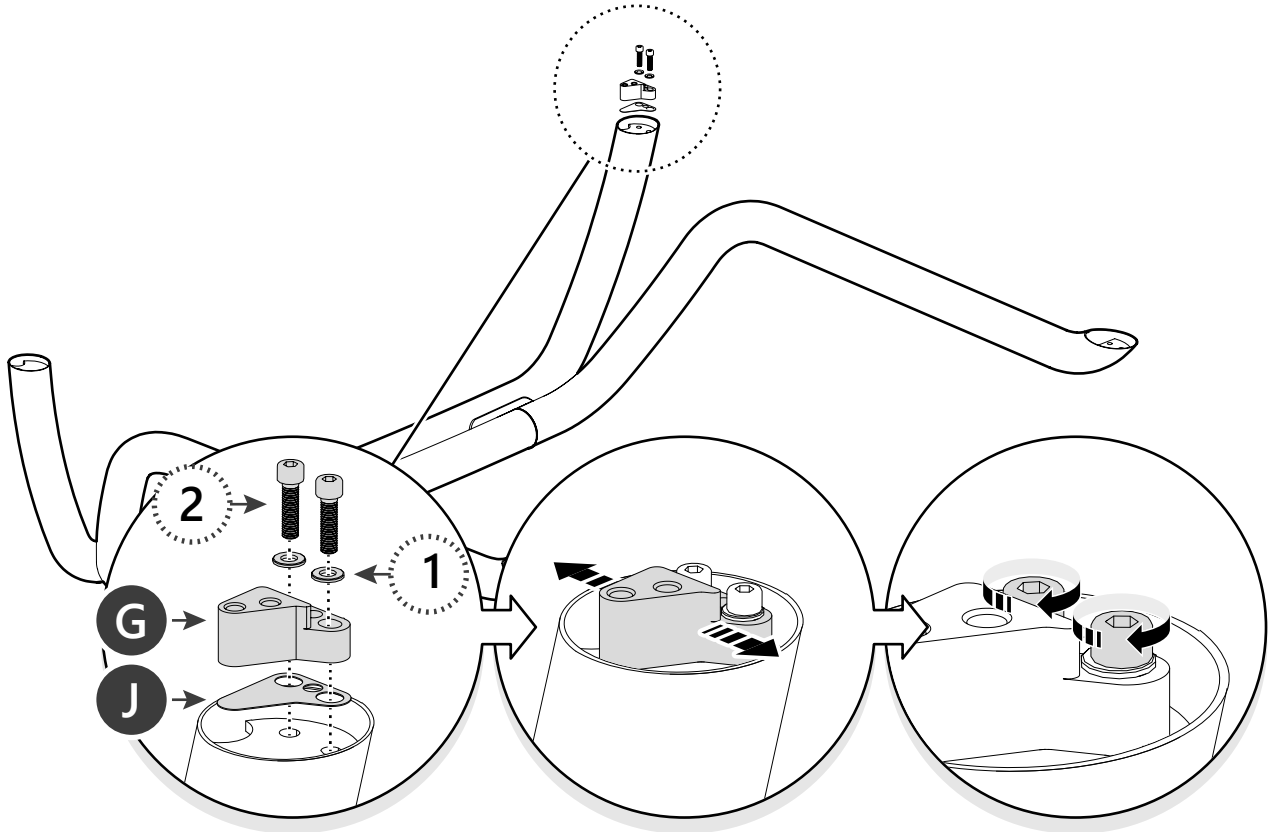





6mm 26Nm

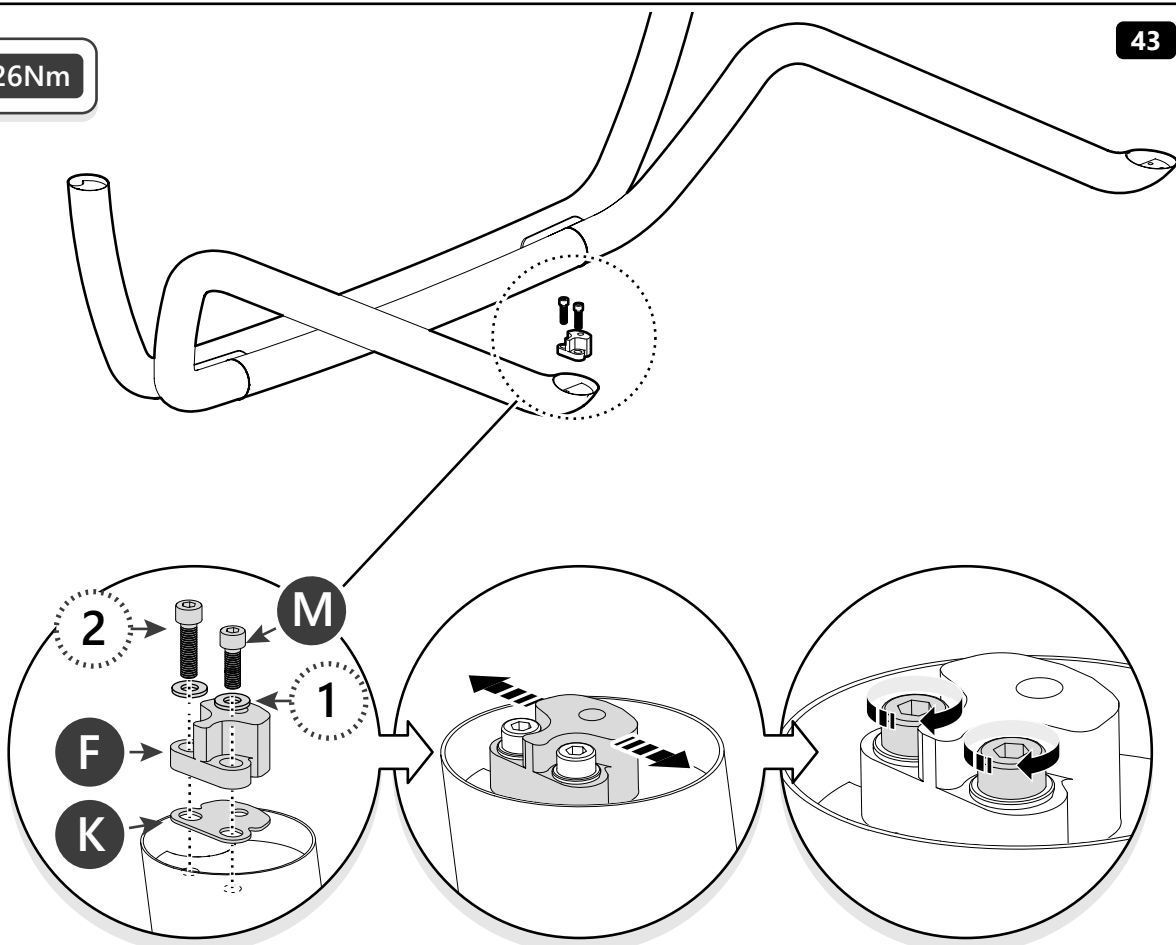



6mm 26Nm

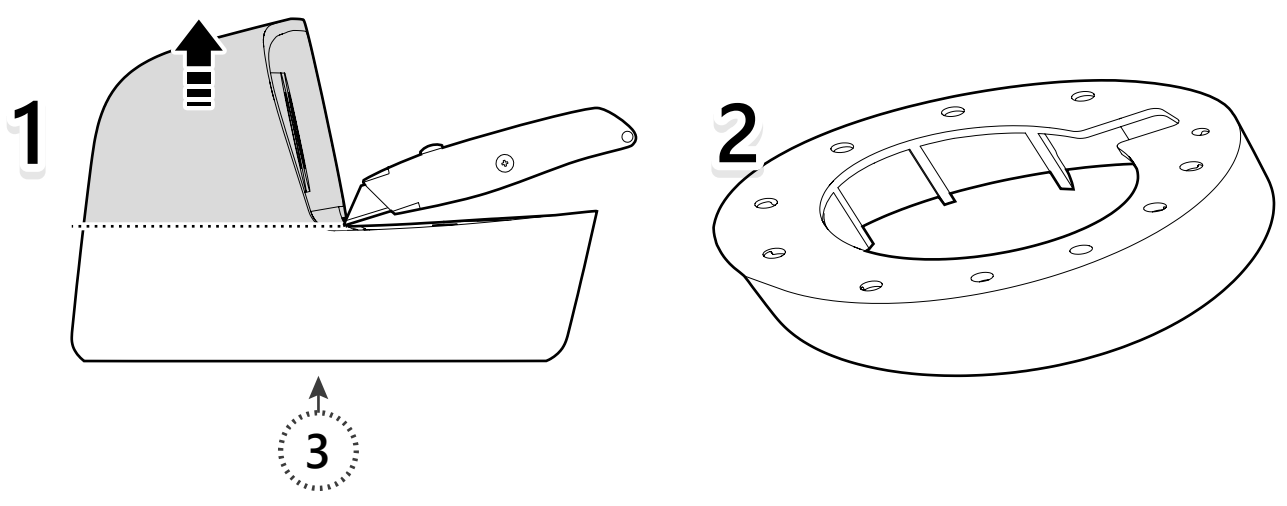
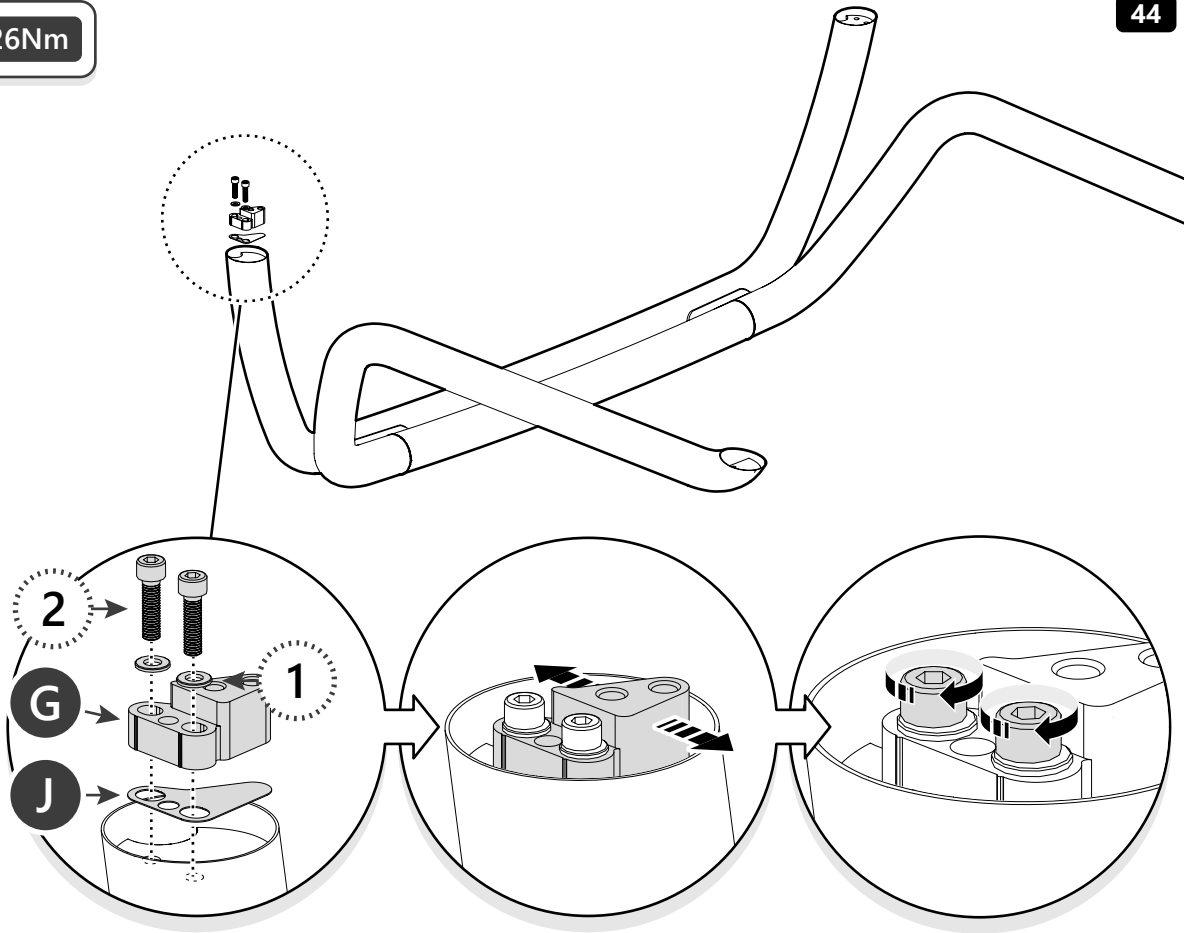




x 2

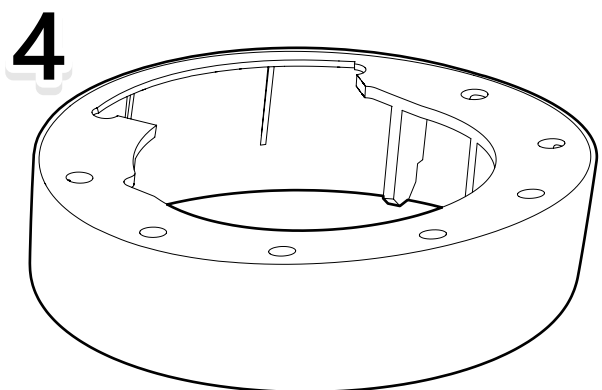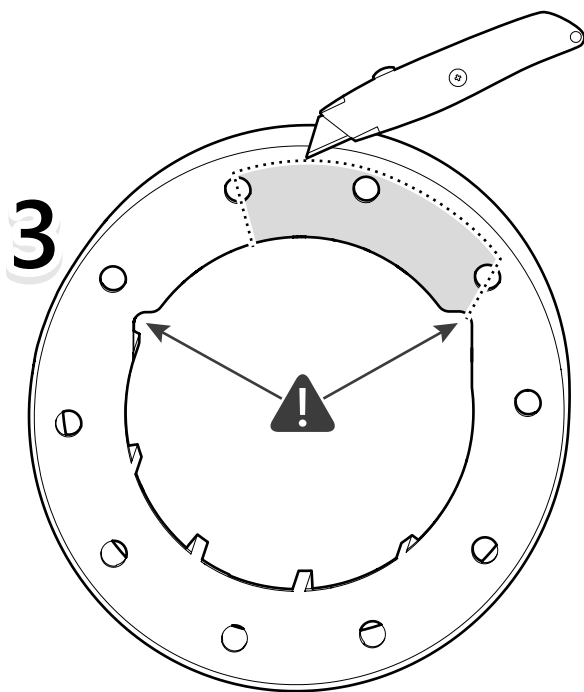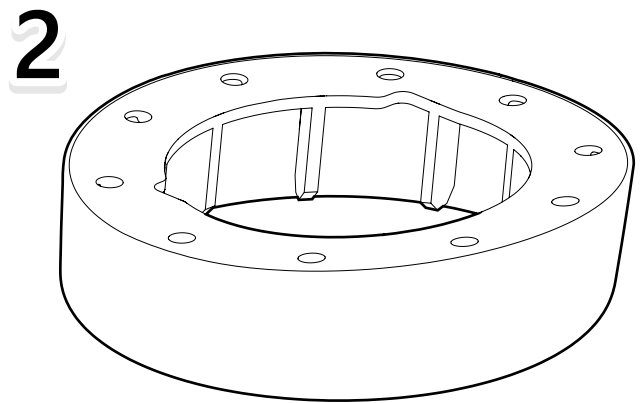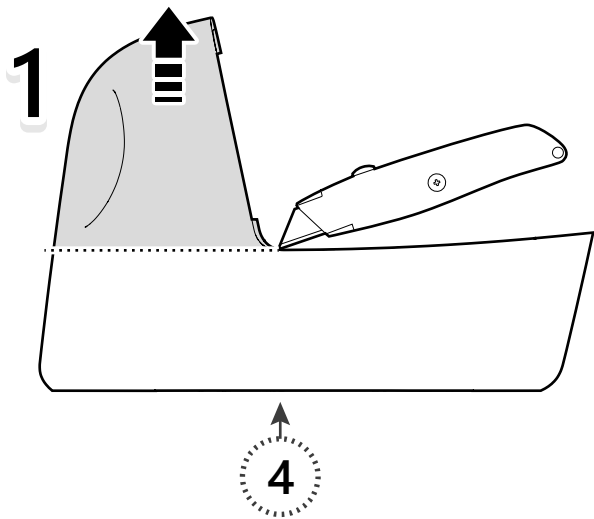


x 2

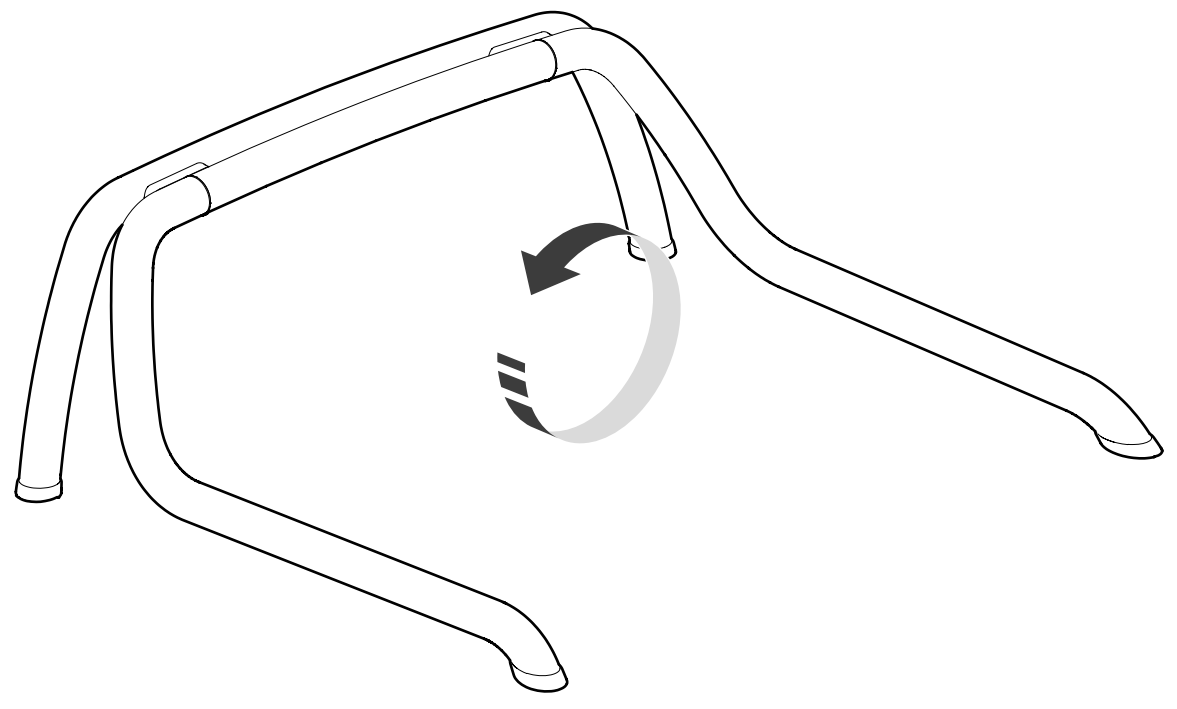
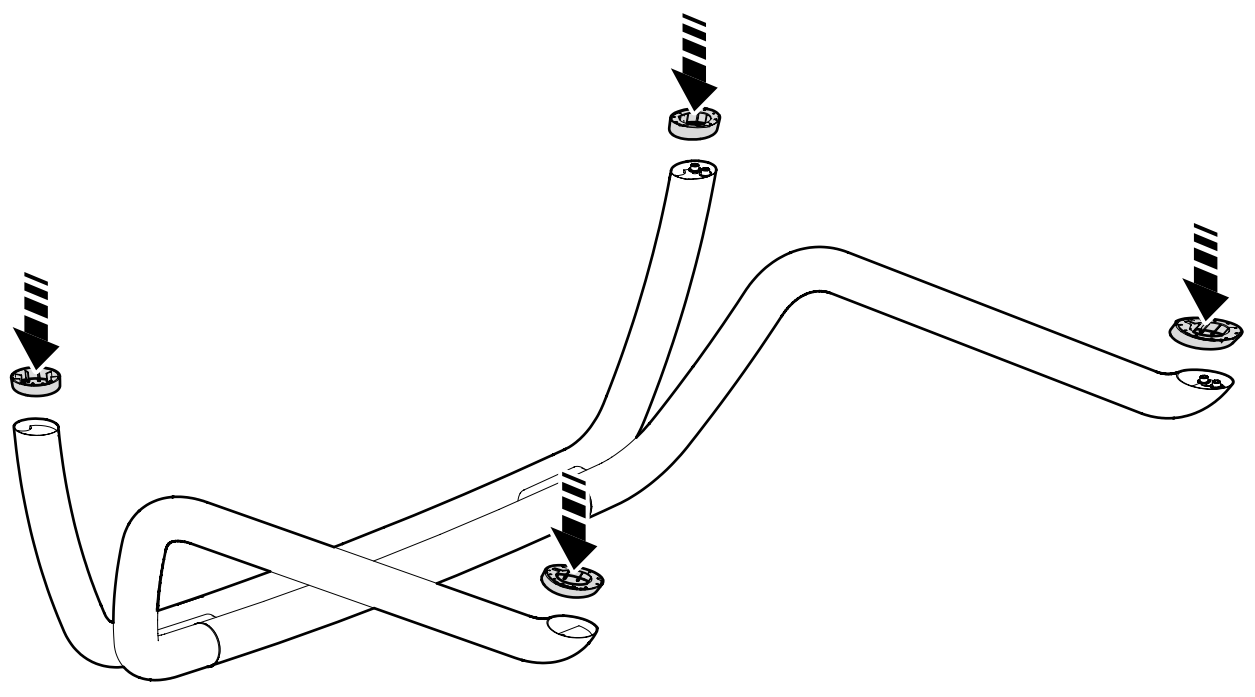


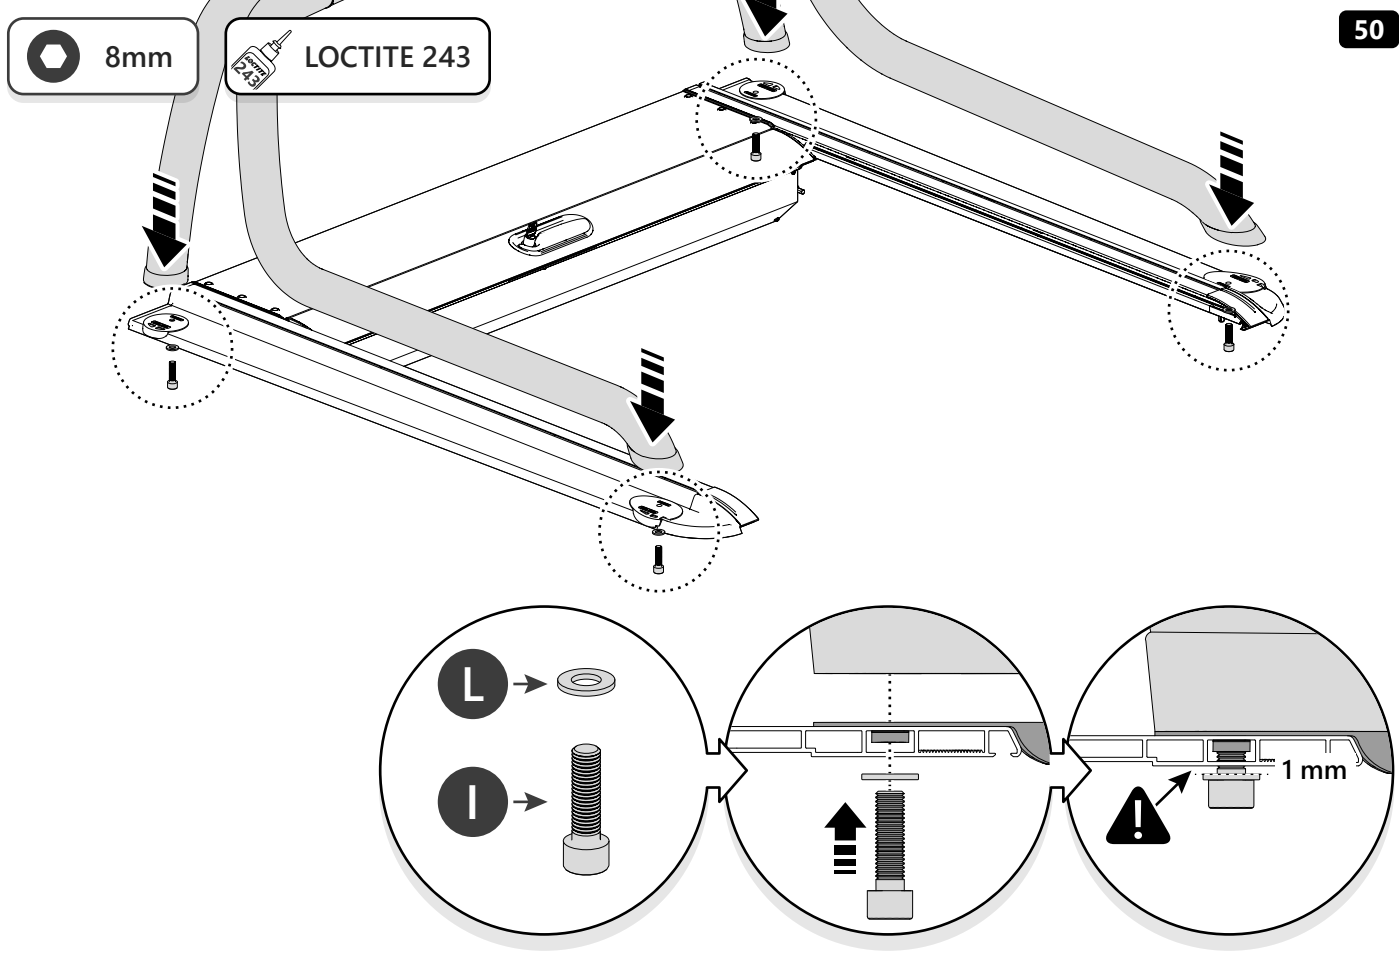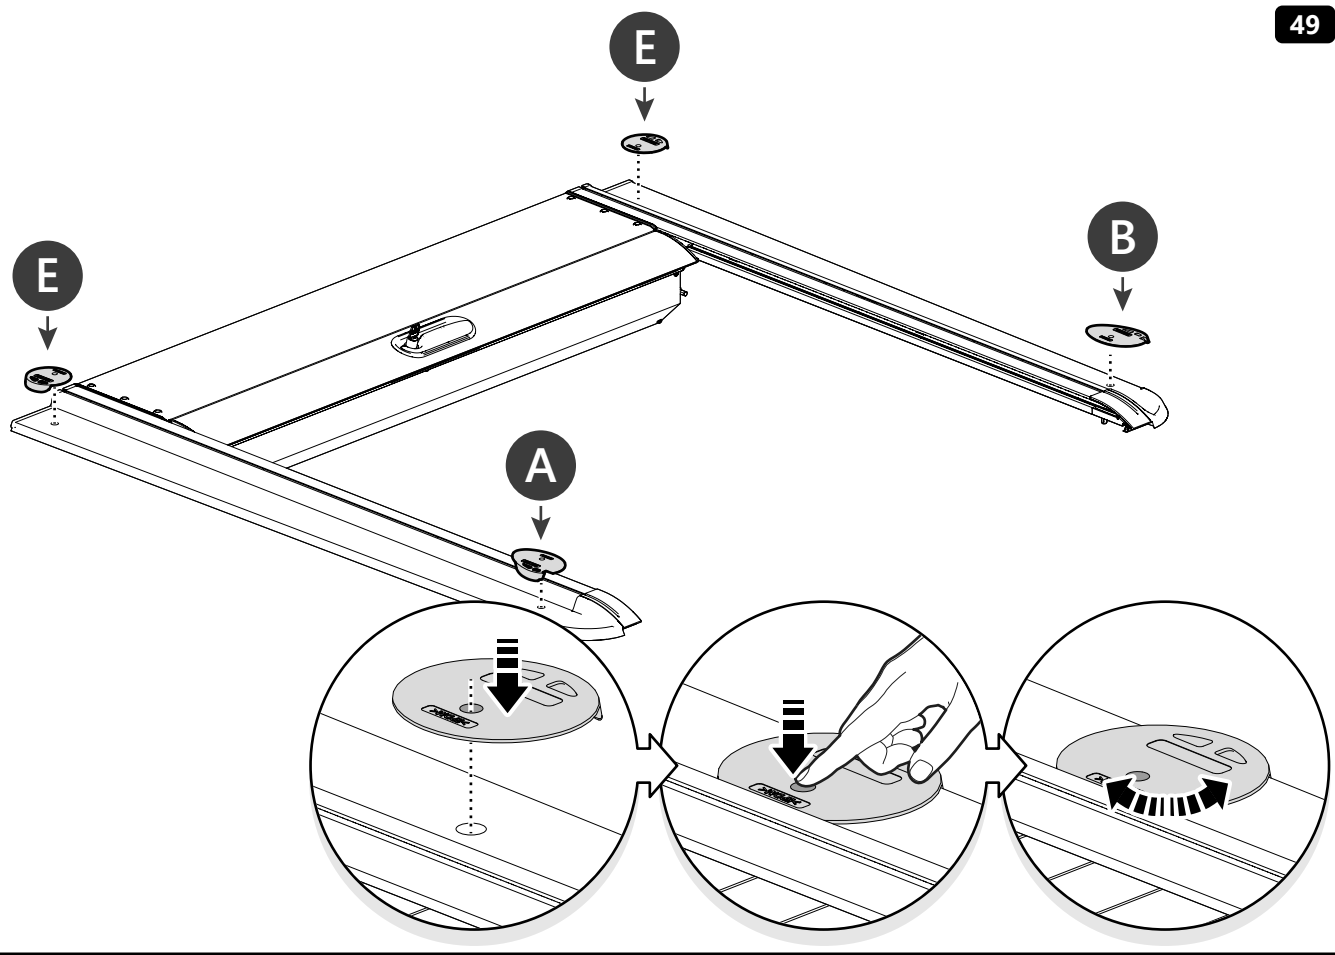

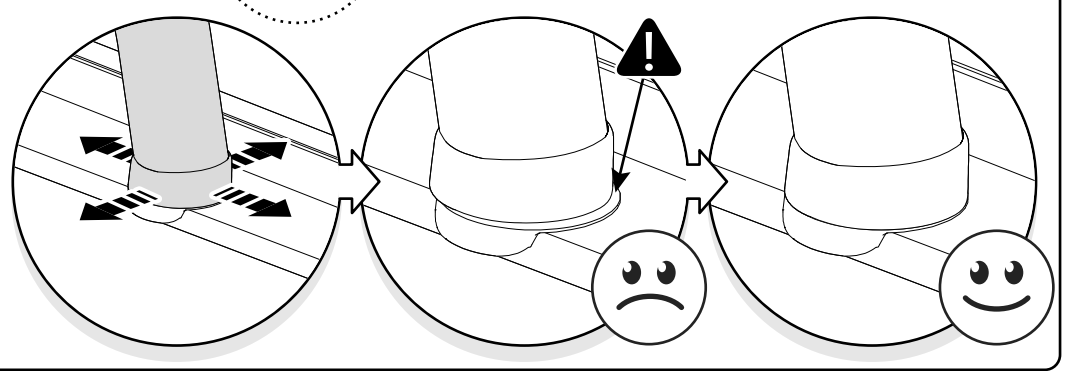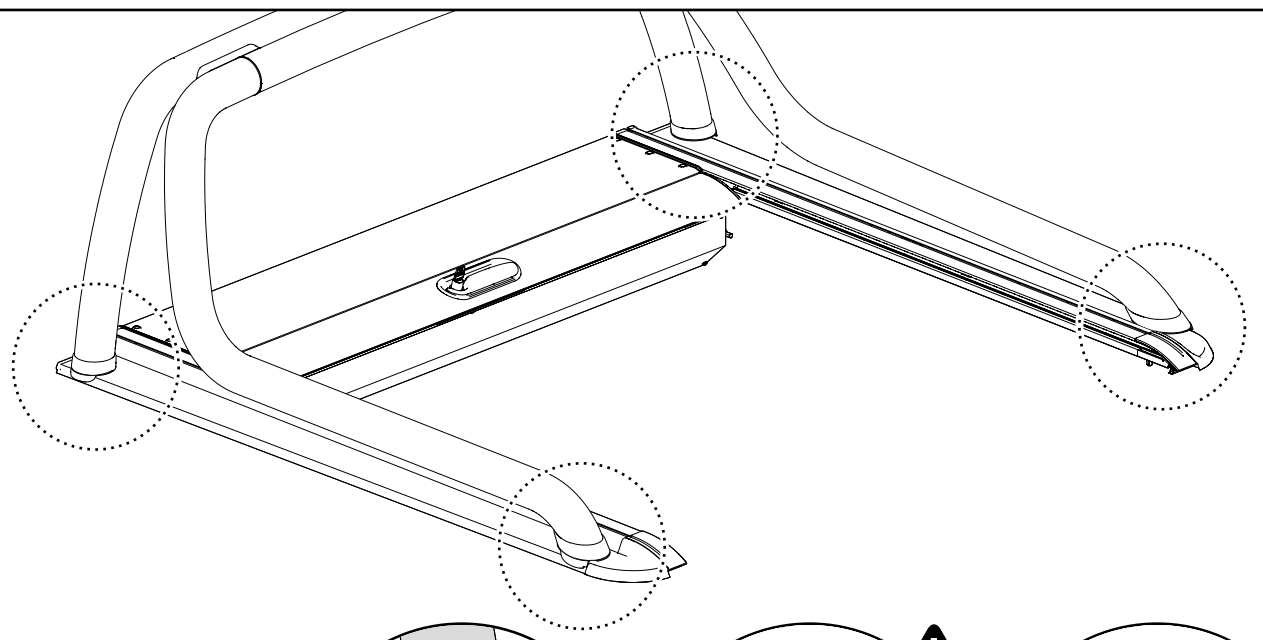


8mm 10Nm

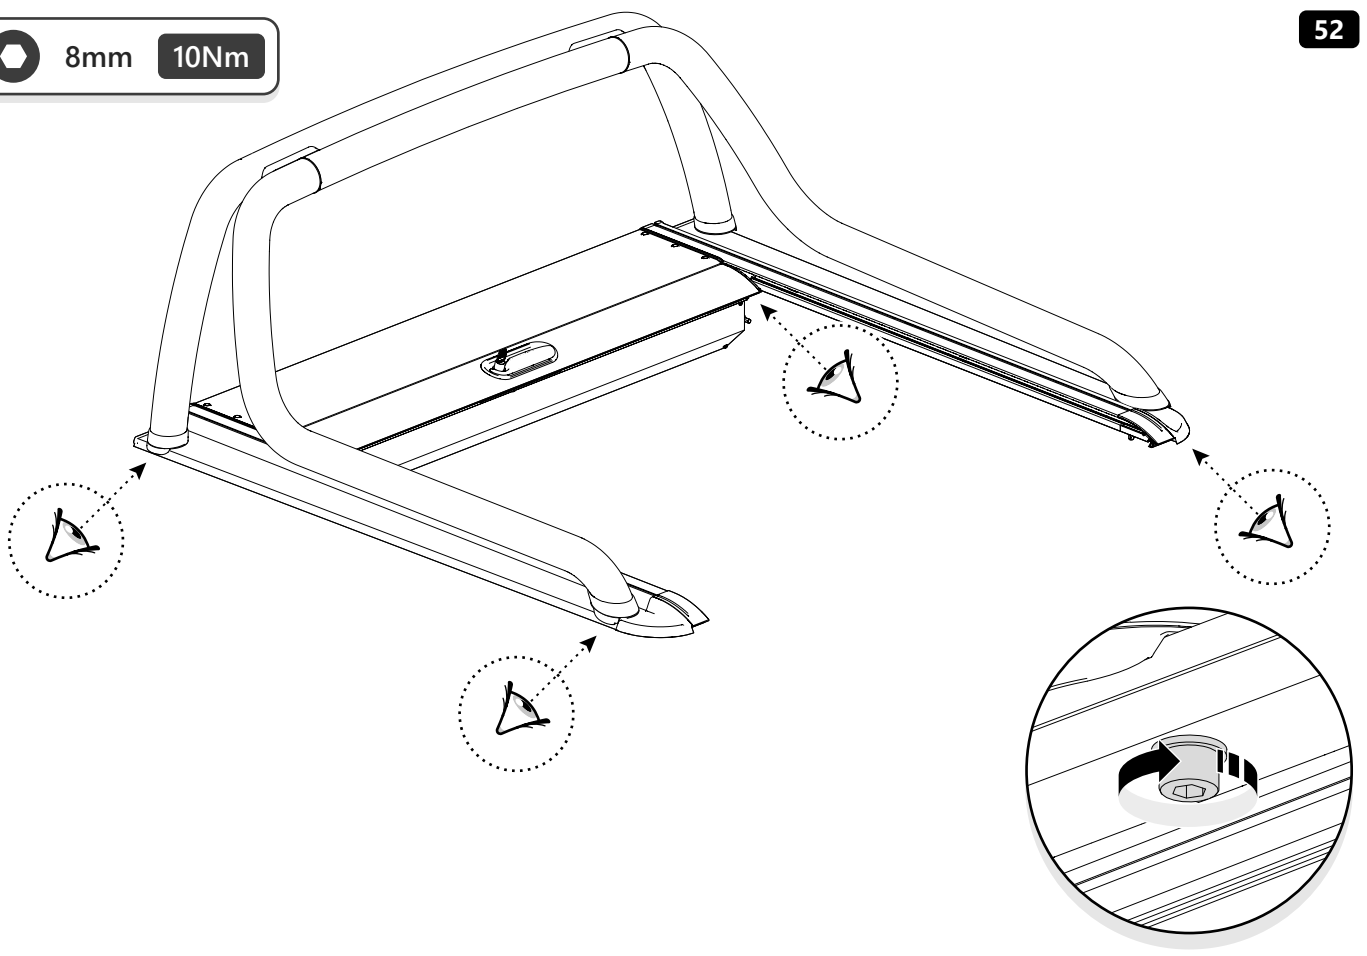

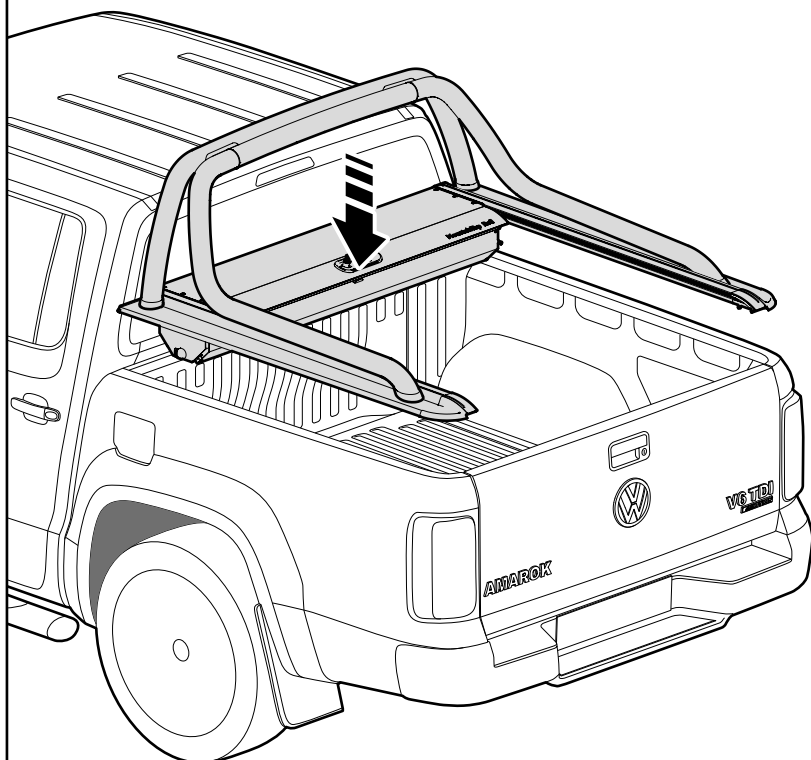**Mountain Top EVO**

880 002

Mountain Top Roll886 044
886 044-1

Télécharger notice produit



REFERENCES	MODELE / ANNEE	TYPE DE BENNE	TEMPS DE MONTAGE	POIDS
MTC800-OE	Volkswagen / 2016+	Double Cab	1 heure	1 Kg
MTC800-OE	Volkswagen / 2016+	Double Cab	1 heure	1 Kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni de montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare