

SCHEMA DI MONTAGGIO / FITTING INSTRUCTION

FORD RANGER 2012 D/C

PEDANA - RUNNING BOARDS

STD: F0 51962

S50: F0 51962/I

WHITE: F0 51962/WI

BLACK: F0 51962/BL

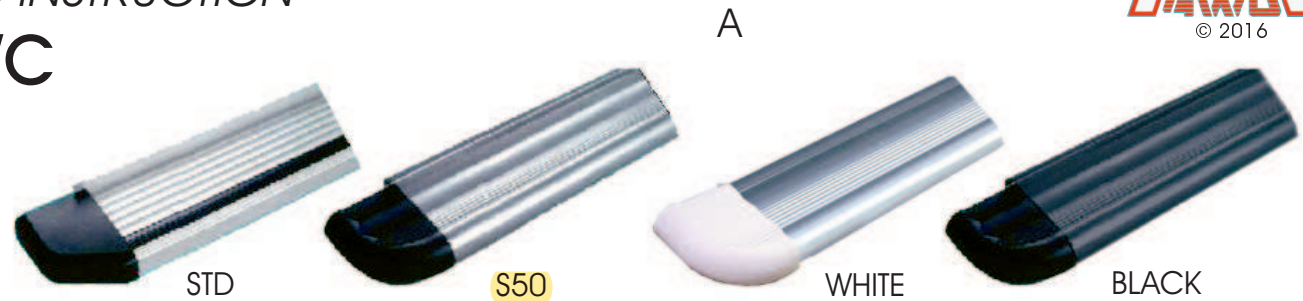


Fig.	Codice	Descrizione	Q.tà
A		ESTRUSO ALLUMINIO	2
	1.124.102.21	STAFFA ANTER	2
	1.124.102.22	SUPP ANTER.	2
	1.124.102.23	SUPP ANTER.	2
	1.124.102.24	STAFFA CENTR - POST	4
	1.124.102.25	SUPP CENTR - POST	4
	1.124.102.26	SUPP. CENTR - POST	4

	101025	VITE TE 10x25x1.5	12
	701021	RONDELLA 10X21	12
	100820	VITE TE 8X20	12
	700817	RONDELLA 8X17	24
	600801	DADO M8	12



MONTAGGIO staffa Anteriore destra e sinistra

- 1) montare i supporti con stampati i codici 10222 e 10223 sulla staffa 10221
- 2) fissare la staffa con le viti 10x20 ai fori già filettati esistenti sotto la vettura.



MONTAGGIO staffa Centrale e Staffa Posteriore – destra e sinistra

- 1) montare i supporti con stampati i codici 10225 e 10226 sulla staffa 10224
- 2) procedere come per le staffe anteriori

SCHEMA DI MONTAGGIO / FITTING INSTRUCTION
FORD RANGER 2012 D/C
 PEDANA - *RUNNING BOARDS*



STD: F0 51962
S50: F0 51962/I
 WHITE: F0 51962/WI
 BLACK: F0 51962/BL

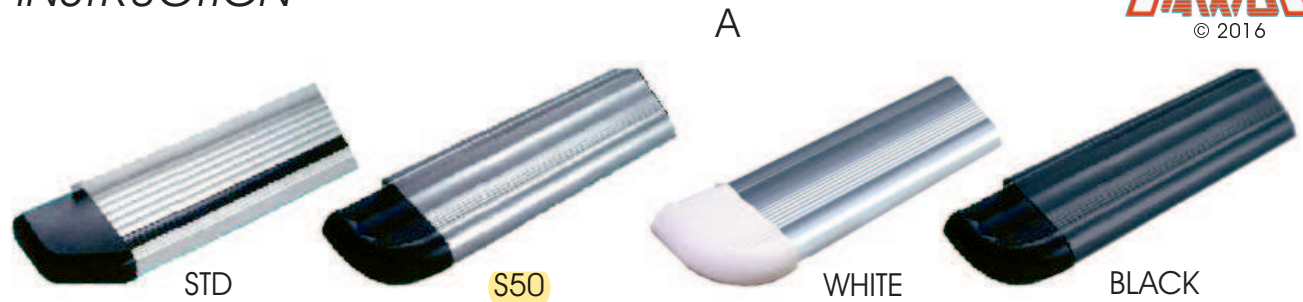


Fig.	Code	Description	Q.ty
A		ESTRUSO ALLUMINIO	2
	1.124.102.21	FRONT BRACKET	2
	1.124.102.24	MIDDLE-REAR BRACKET	4
	1.124.102.22	FRONT BRACKET	2
	1.124.102.23	FRONT BRACKET	2
	1.124.102.25	MIDDLE-REAR BRACKET	4
	1.124.102.26	MIDDLE-REAR BRACKET	4

	101025	SCREW TE 10x25x1.5	12
	701021	WASHER 10X21	12
	100820	SCREW TE 8X20	12
	700817	WASHER 8X17	24
	600801	NUT M8	12



MOUNTING Front brackets right and left

- 1) Mount the supports with the printed code 10222 and 10223 on the bracket 10221
- 2) Fix the bracket with screws 10x20 to the holes already threaded found under the vehicle



MOUNTING Middle brackets – Rear brackets - right and left

- 1) Mount the supports with the printed code 10225 and 10226 on the bracket 10224
- 2) Proceed as for the front brackets